

# EPSON

*Robot Controller Option*

*OPC UA Server*

Rev.1

ENM247S6611F

Original instructions

Epson RC+ 8.0

Robot Controller Option OPC UA Server Rev.1

Robot Controller Option

# *OPC UA Server*

Rev.1

©Seiko Epson Corporation 2024

## FOREWORD

Thank you for purchasing our robot products.

This manual contains the information necessary for the correct use of Epson OPC UA Server. Please carefully read this manual and other related manuals before installing the robot system.

Keep this manual handy for easy access at all times.

The robot system and its optional parts are shipped to our customers only after being subjected to the strictest quality controls, tests, and inspections to certify its compliance with our high performance standards. Please note that the basic performance of the product will not be exhibited if our robot system is used outside of the usage conditions and product specifications described in the manuals.

This manual describes possible dangers and consequences that we can foresee. Be sure to comply with safety precautions on this manual to use our robot system safely and correctly.

## TRADEMARKS

Microsoft, Windows, and Windows logo are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. OPC UA is registered trademarks or trademarks of OPC Foundation. Other brand and product names are trademarks or registered trademarks of the respective holders.

## TRADEMARK NOTATION IN THIS MANUAL

Microsoft® Windows® 10 Operating system

Microsoft® Windows® 11 Operating system

Throughout this manual, Windows 10 and Windows 11 refer to above respective operating systems. In some cases, Windows refers generically to Windows 10 and Windows 11.

## NOTICE

No part of this manual may be copied or reproduced without authorization.

The contents of this manual are subject to change without notice.

Please notify us if you should find any errors in this manual or if you have any comments regarding its contents.

## MANUFACTURER

**SEIKO EPSON CORPORATION**

## CONTACT INFORMATION

For detailed contact information, see "SUPPLIER" of the manual below.

*"Safety Manual"*

## Before Use

Before using this manual, be sure that you understand the following information.

### The Installation Folder for Epson RC+ 8.0

You can change the path for the installation folder for Epson RC+ 8.0 anywhere. This manual assumes that Epson RC+ 8.0 is installed in C: \EpsonRC80.



---

|   |           |
|---|-----------|
| <b>1. Introduction</b>  | <b>1</b>  |
| 1.1 Overview .....  | 1         |
| 1.2 Features of This Product .....                                  | 2         |
| 1.2.1 OPC UA Server.....  | 2         |
| 1.2.2 OPC UA Configurator .....                                     | 2         |
| 1.3 System Configuration.....                                       | 3         |
| 1.3.1 Controller.....   | 3         |
| 1.3.2 Network .....   | 3         |
| <b>2. OPC UA Configurator</b>                                       | <b>4</b>  |
| 2.1 Overview .....  | 4         |
| 2.2 Precautions .....   | 4         |
| 2.3 How to Start the Software.....                                  | 5         |
| 2.4 OPC UA Configurator GUI.....                                    | 5         |
| 2.4.1 Outline .....   | 5         |
| 2.4.2 Menu bar .....  | 6         |
| 2.4.3 Buttons to Execute.....                                       | 6         |
| 2.4.4 Controller Information List.....                              | 6         |
| 2.5 Managing Connection Destination.....                            | 8         |
| 2.5.1 Adding Controllers.....                                       | 8         |
| 2.5.2 Deleting Controllers .....                                    | 10        |
| 2.5.3 Setting Connection Destination of Epson RC+.....              | 11        |
| 2.6 OPC UA Server Setting .....                                     | 14        |
| 2.6.1 Basic Setting for Server .....                                | 14        |
| 2.6.2 Managing Users.....   | 17        |
| 2.6.3 Activation (Firmware Versions Before 8.0.0 Only).....         | 22        |
| 2.6.4 Export Settings (Firmware Versions Before 8.0.0 Only).....    | 26        |
| 2.6.5 Importing Settings (Firmware Versions Before 8.0.0 Only)..... | 28        |
| 2.7 About Certificate .....   | 30        |
| 2.7.1 Creating/Saving Server Certificate .....                      | 30        |
| 2.7.2 Setup using type of Server Certificate .....                  | 41        |
| 2.7.3 Client Certificate.....                                       | 43        |
| 2.8 Setting of OPC UA Configurator .....                            | 52        |
| 2.8.1 Backup Setting.....   | 52        |
| <b>3. OPC UA Server</b>   | <b>53</b> |
| 3.1 Specifications of the OPC UA Server .....                       | 53        |
| 3.2 Address Space.....  | 53        |

|   |            |
|---|------------|
| 3.2.1 Introduction .....                              | 53         |
| 3.2.2 Covered Companion Spec.....                     | 54         |
| 3.2.3 Epson Original Node.....                        | 63         |
| 3.3 Activate / Deactivate OPC UA Server .....         | 91         |
| 3.3.1 Activating OPC UA Server.....                   | 91         |
| 3.3.2 Deactivating OPC UA Server.....                 | 91         |
| 3.4 Connecting to OPC UA Server .....                 | 92         |
| 3.4.1 Overview .....                                  | 92         |
| 3.4.2 Preparations.....                               | 92         |
| 3.4.3 Procedures of connecting to OPC UA Server ..... | 95         |
| <b>4. How to Use Epson Original Nodes</b> .....       | <b>97</b>  |
| 4.1 Acquisition of Force Sensor Data .....            | 97         |
| 4.1.1 Overview .....                                  | 97         |
| 4.1.2 Usage.....                                      | 97         |
| 4.1.3 Data Formatting .....                           | 102        |
| 4.2 Acquisition of SPEL Variable Data .....           | 114        |
| 4.2.1 Usage.....                                      | 114        |
| 4.2.2 Overview .....                                  | 114        |
| 4.3 Acquisition of Sensor Data .....                  | 115        |
| 4.3.1 Overview .....                                  | 115        |
| 4.3.2 Usage.....                                      | 115        |
| 4.3.3 Data Formatting .....                           | 118        |
| <b>5. About Purchasing Products</b> .....             | <b>124</b> |
| <b>6. Trouble Shooting</b> .....                      | <b>125</b> |
| 6.1 Errors of Controllers.....                        | 125        |
| 6.2 Errors of OPC UA Configurator .....               | 126        |
| Errors displayed in error dialog.....                 | 126        |
| Errors displayed in processing dialog.....            | 128        |
| 6.3 How to Acquire OPC UA Server Log.....             | 129        |
| <b>Appendix</b> .....                                 | <b>130</b> |
| Appendix A: Format of Activation File .....           | 130        |
| Appendix B-1: Folder Configuration .....              | 131        |
| Appendix B-2: OSS License .....                       | 132        |
| OSS License for OPC UA Server .....                   | 132        |




# 1. Introduction

## 1.1 Overview

This product is a Software that installed in the Robot Controllers. By using a software that has function of OPC UA Client that installed in PC, it is possible to get information or data of Robot or Controllers from OPC UA Server. The acquired information can be used in application built by customers on the IoT platform.

However, customers must build software that has OPC UA Client function and applications such as IoT platform.

Those are not covered by this product.

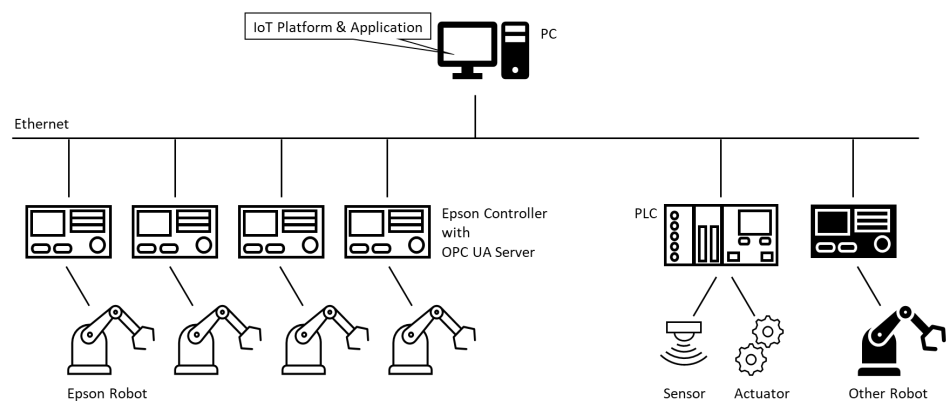

## 1.2 Features of This Product

### 1.2.1 OPC UA Server

This product has OPC UA Server which is supporting OPC UA Ver1.04. It also provides an Address Space that supports the Companion Specification of OPC UA for Robotics Part1 Ver.1.00 and provides following Vender Specific Extension of Epson.

- I/O  
Acquires status of Controller's standard I/O and expansion I/O.
- Force sensor data  
Acquires data of force sensor of connected Robot.
- SPEL variable  
Acquires variable values of SPEL+ program.
- MotionLog  
Acquires values associated with controlling the robot.

It is possible to refer the Address Space from OPC UA Client, create subscription and monitor items.

#### End Point

OPC UA Client can connect OPC UA Server by using following URL.

**opc.tcp://<IP Address>:<PortNo.>**

IP Address: IP Address setting by user

**PortNo.: Port No. setting by user**

#### Certificate

OPC UA Client uses Server Certificate to judge the OPC UA Server is trustable that connecting to. To activate OPC UA Server, a Server Certificate will be needed.

#### User Certificate

It is possible to create UserName/Password to connect to the OPC UA Server.

#### Client Certificate

Client authentication using Client Certificate is possible.

#### Security

OPC UA Server supports standard Security mode and Security Policy of OPC UA.

### 1.2.2 OPC UA Configurator

OPC UA Configurator provides features such as OPC UA Server configuration and management of Certificate. Refer to 2. *OPC UA Configurator* for more detail.

## 1.3 System Configuration

### 1.3.1 Controller

When updating a Controller to firmware supported OPC UA Server, refer to each Controller manual or Controller Maintenance manual.

#### 1.3.1.1 Operating Condition

Controllers and firmware versions that can use the OPC UA Server functions are as follows:

|                             |              |                 |
|-----------------------------|--------------|-----------------|
| Controller Firmware version | RC90 / RC700 | 7.5.4 or later  |
|                             | T/VT         | 7.5.54 or later |
|                             | RC800        | 8.0.0 or later  |

#### 1.3.1.2 Controller Setting

Controllers that use OPC UA Server need to be checked that configured IP Address, IP Mask, Default Gateway, and Passwords (if necessary). And need to be connected to Network by Ethernet. These settings can be done by Epson RC+. For more information, refer to *Epson RC+ User's Guide*.

### 1.3.2 Network

Make sure the cable is connected to the Ethernet port and network is configured. Also, check the system is configured as shown in system configuration example at *1.1 Overview*.

#### 1.3.2.1 Cyber Security

Set and use private IP address for the Controller.



When setting Global IP address for the Controller, note that there are risks of unauthorized access. Refer to *Epson RC+ User's Guide*.

## 2. OPC UA Configurator

### 2.1 Overview

OPC UA Configurator has following features.

Managing Controller connection

- Displaying OPC UA Server information
- Controlling Controllers collectively

Server Configuration

- Basic setting of the Server
- Settings of user configuration (UserName/Password)

Certificate

- Create or save Certificate / CSR
- Indicates expiration date of the Certificate

Activation

- Activates OPC UA Server licenses

### 2.2 Precautions

Precautions when using OPC UA Configurator.



- When connecting or operating with Controller (OPC UA Server) using OPC UA Configurator, all Robots connected to the target Controller need to be in stopped state.

NOTE



There are some features you cannot use while Robot is operating. (or doing tasks)

## 2.3 How to Start the Software

To start OPC UA Configurator, click Epson RC+ menu - [Setup] - [System Configuration] - [OPC UA] - [General] - [OPC UA Configurator] button.

NOTE




- Make sure to change the Connection of Epson RC+ to Offline then start the OPC UA Configurator.
- OPC UA Configurator can only be opened up to one on the computer at a time.

## 2.4 OPC UA Configurator GUI

### 2.4.1 Outline

Following shows what Home display of this application is consisted of.

- Menu bar
- Buttons to execute
- Controller Information list

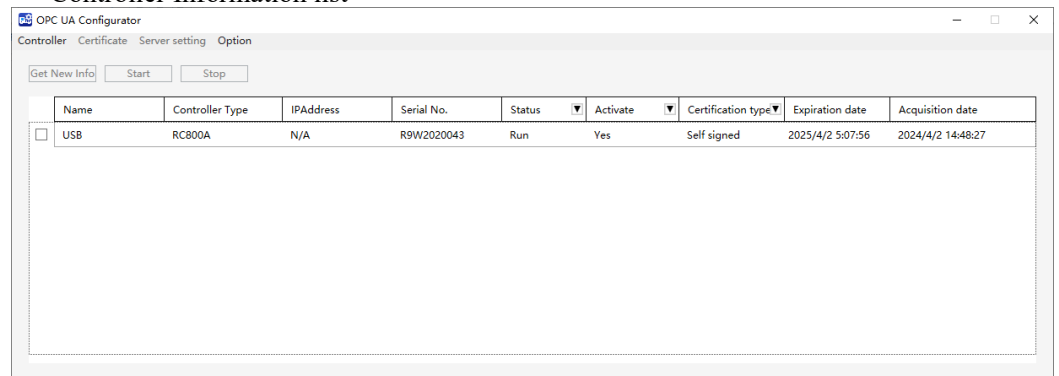

### 2.4.2 Menu bar

Following shows items of menu bar.

| Items          | Descriptions   |
|----------------|--|
| Controller     | Adding / deleting Controller, importing registered connection in Epson RC+ to the OPC UA Configurator. |
| Certificate    | Settings regarding Certificate.  |
| Server setting | Settings of Activation or Server.  |
| Option         | Sets up the backup function.   |

### 2.4.3 Buttons to Execute

These are executing buttons used often on OPC UA Configurator.

Clicking buttons to do functions following below.

| Items        | Descriptions   |
|--------------|--|
| Start        | Start the OPC UA Server for the selected Controller.<br>When multiple Controllers selected, it starts one by one in order. |
| Stop         | Stop the OPC UA Server for the selected Controller.<br>When multiple Controllers selected, it stops one by one in order.   |
| Get New Info | Acquires information of the selected Controller and display it at Controller Information List.                             |

### 2.4.4 Controller Information List

Displays Controller's data.

Check in the checkbox to select the Controller and it is possible to sort items.

| Items              | Descriptions  |
|--------------------|---|
| Name               | Name of connection destination  |
| Controller Type    | Type of Controller  |
| IP Address         | IP Address of Controller  |
| Serial No.         | Serial No. of Controller  |
| Status             | Operation status of OPC UA Server                                     |
| Expiration date    | Expiration date of Server Certificate you've set                      |
| Certification type | Certificate type used as a Server Certificate                         |
| Activate           | Displays Activation state of OPC UA Server                            |
| Acquisition date   | Acquisition date and time to acquire information from the Controller. |

#### 2.4.4.1 Updating Information

When updating information of Controller displayed on the list, click [Get new info] button. Information is updated only for the Controller selected in the checkbox.



The information will be updated if you click the [Get new info] button. It won't be updated by other operation. The last date and time you've updated the information is displayed in the [Acquisition date and time].

#### 2.4.4.2 Status: Displays Server Operating Status

Following shows Server status displayed in the list.

| Status | Descriptions  |
|--------|---|
| Run    | Server is running   |
| Stop   | Server is stopped   |
| Error  | Server could not run, or an error occurred during the Run / Stop. |

#### 2.4.4.3 Activate: Displays Activation Status

Following shows OPC UA Server activation status displayed in Controller Information List.

| Status | Descriptions                      |
|--------|-----------------------------------|
| Yes    | OPC UA Server activation enabled  |
| No     | OPC UA Server activation disabled |

#### 2.4.4.4 Certificate type: Displays Specification of Server Certificate

Following show types of Server Certificate displayed in Controller Information List.


| Types          | Descriptions  |
|----------------|---|
| Self signed    | Set Self Signed Certificate as a Server Certificate.        |
| User specified | Set a Certificate prepared by user as a Server Certificate. |
| CA signed      | Set CA Signed Certificate as a Server Certificate.          |

## 2.5 Managing Connection Destination


### 2.5.1 Adding Controllers

Adding Controllers to connection destination list.

- (1) Select Home display Menu - [Controller].  
[Controller] dialog will be displayed.

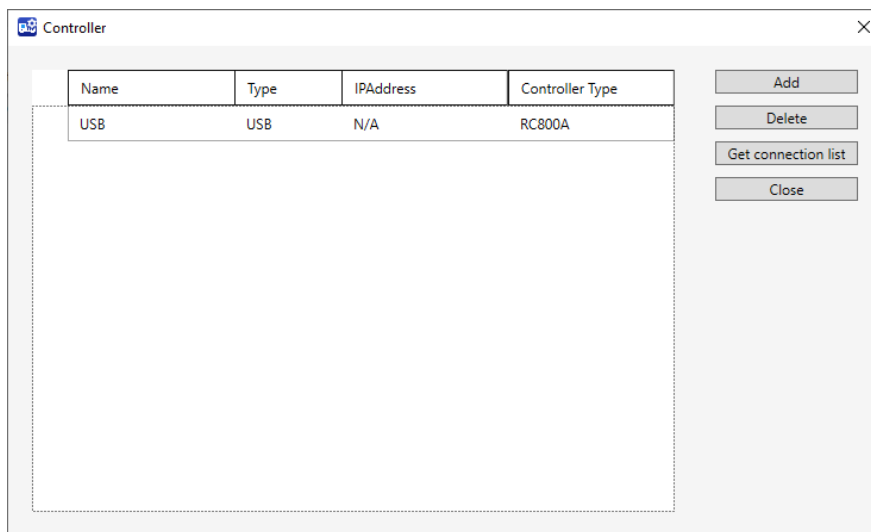

- (2) Click [Add] button.  
[Add controller] dialog will be displayed.

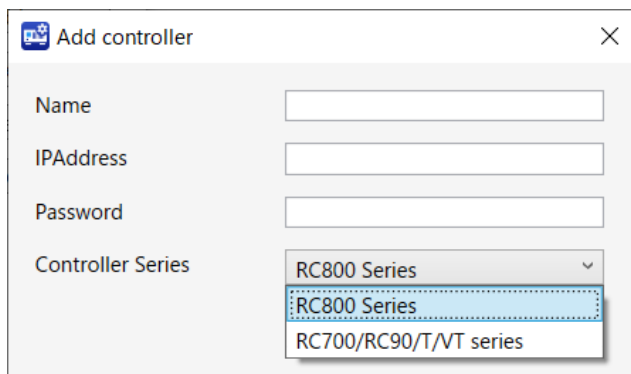


- (3) Set each item.

| Items             | Descriptions   |
|-------------------|--|
| Name              | Name of connection destination   |
| IP Address        | Input IP Address of the Controller.  |
| Password          | Input password to connect the Controller to Ethernet.<br>*: Input the password as same as the Controller password set in the Epson RC+. Refer to <i>Epson RC+ User's Guide</i> for more details. |
| Controller Series | Select the Controller you wish to connect to.  |



(4) Click [Apply] button.


Controller will be added in the connection destination list.

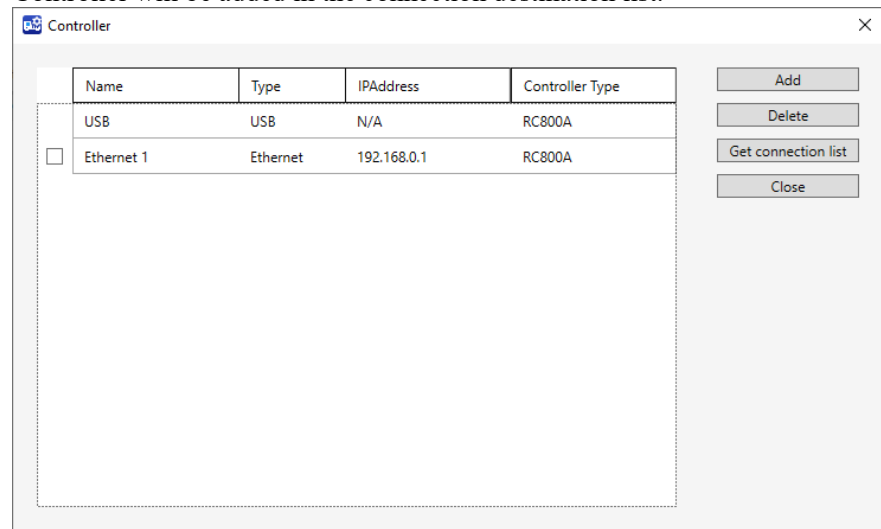


### 2.5.2 Deleting Controllers

This section describes deleting Controllers from the connection destination list.


- (1) Select Home display Menu - [Controller].  
[Controller] dialog will be displayed.

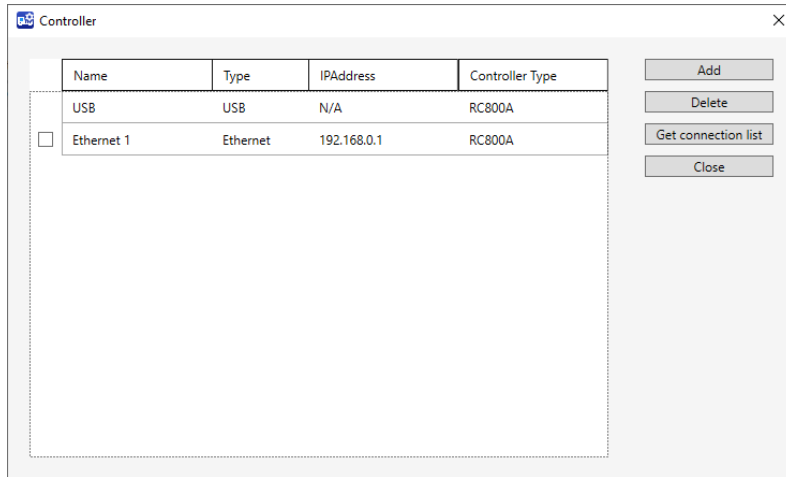

- (2) Check in the checkbox next to the list.  
Click [Delete] button.

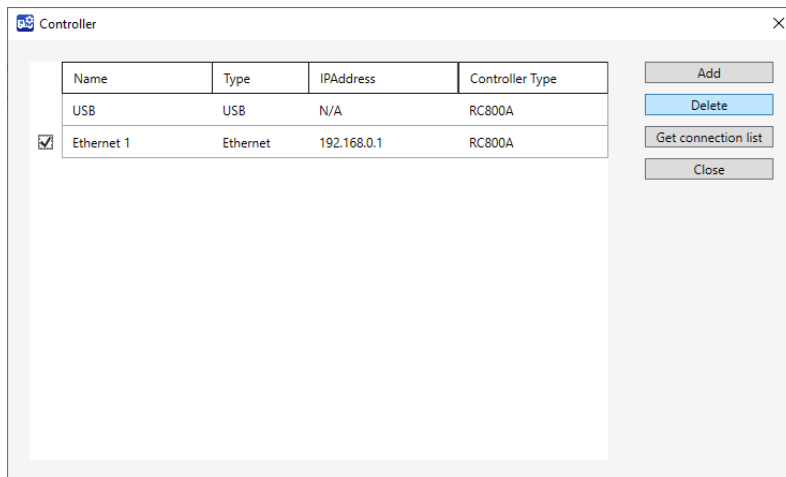

- (3) You can see the Controller was deleted from the connection destination list.

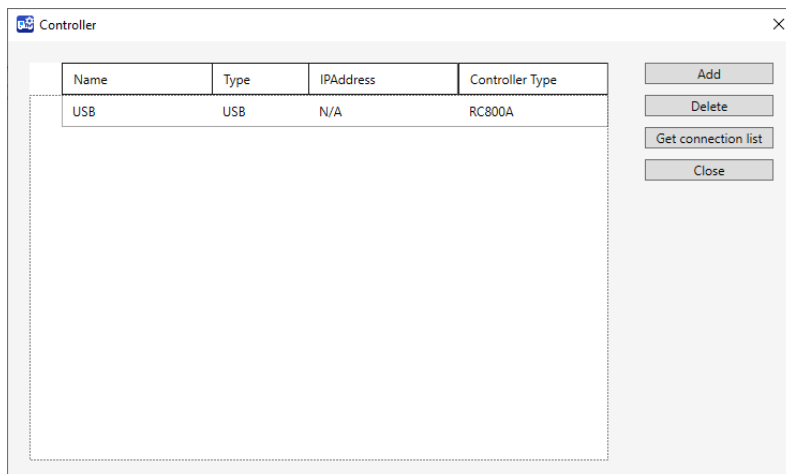


### 2.5.3 Setting Connection Destination of Epson RC+

Importing registered Controller in Epson RC+ to the OPC UA Configurator.


- (1) Select Home display Menu - [Controller].

[Controller] dialog will be displayed.

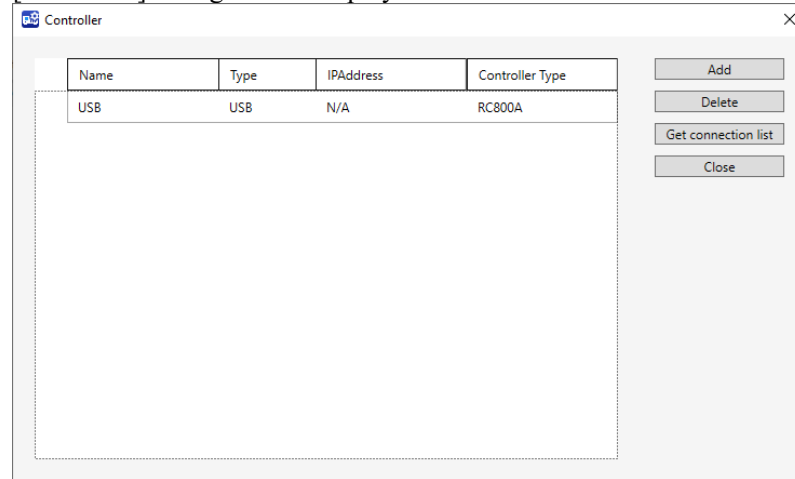

- (2) Click the [Get connection list] button.

[Connection List] dialog will be displayed.

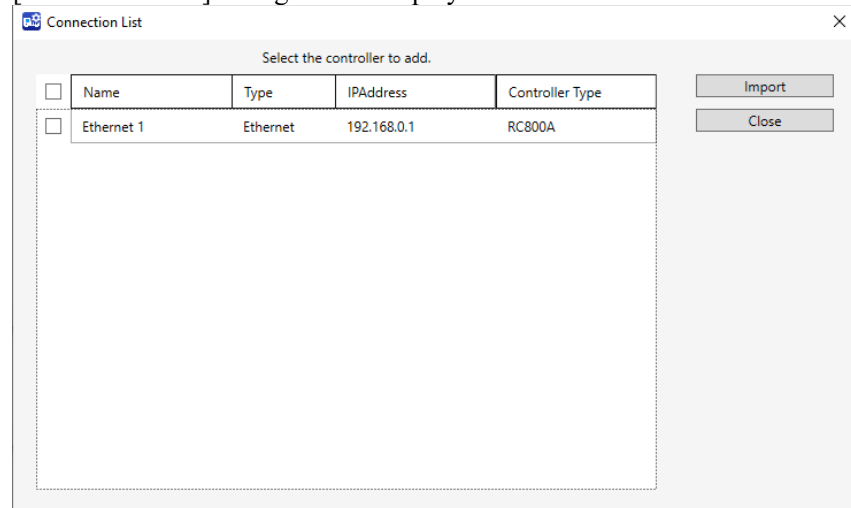


#### NOTE




The registered connections in Epson RC+ will be displayed.

- The connections that Type is USB or Virtual are not displayed.
- IP addresses already in OPC UA Configurator's list of connections, or connections matching those names, will not be displayed.


- (3) Check in the check box of the connection you want to import, and click the [Import] button.

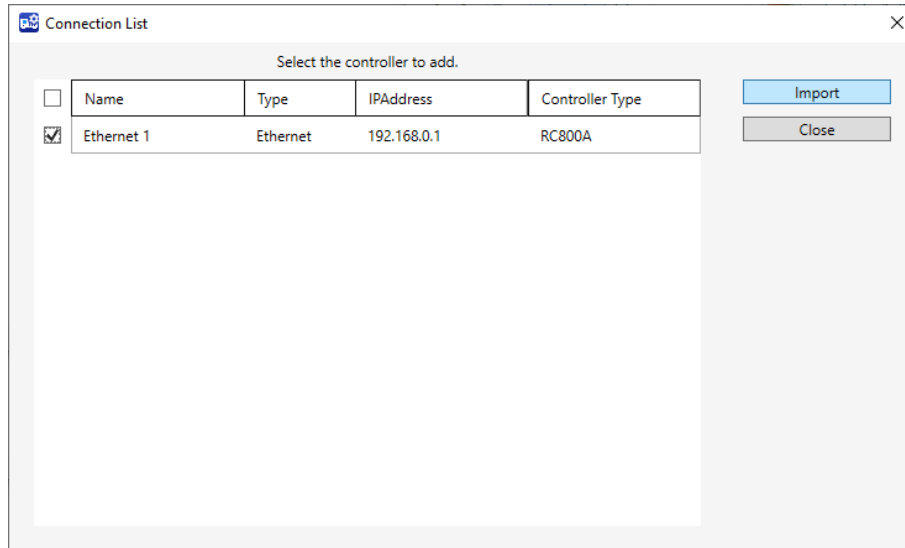


- (4) After the import is complete, the dialog will be displayed says the process is complete.

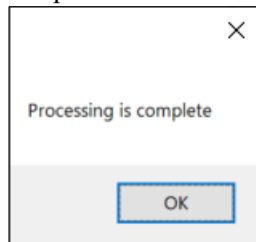

- (5) Click the [OK] button to go back to [Connection List] dialog. Click the [Close] button.

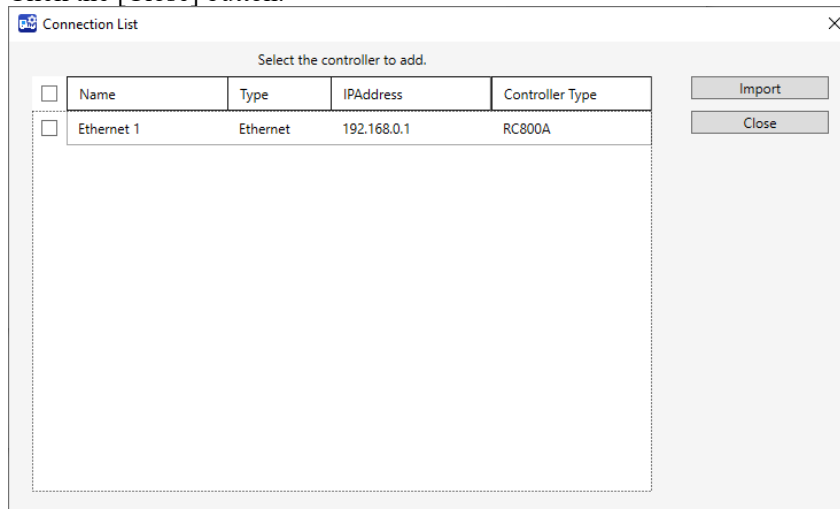

- (6) It goes back to the [Controller] dialog.  
The imported controller is added to the connection list as shown below.

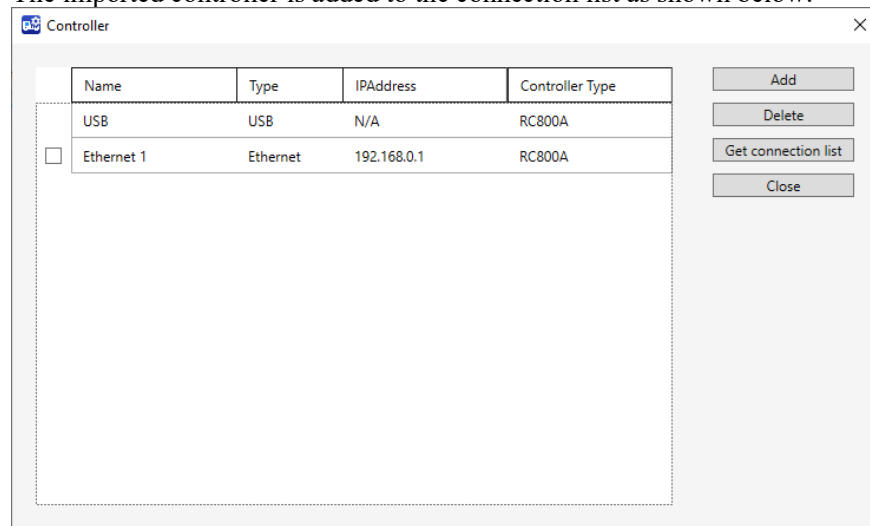

## 2.6 OPC UA Server Setting

It is possible to set at Home display Menu bar - [Server Setting]. Server Setting Menu has following items.

| Items          | Descriptions  |
|----------------|---|
| Basic Settings | Basic settings for the Server.  |
| User           | Displays users able to connect to the OPC UA Client in list-form.<br>It is possible to add/delete a user. |
| Activation     | Settings for the Server activation.   |
| Import         | Save the settings file saved on the PC to the Controller.   |
| Export         | Save the settings file saved on the Controller to the PC.   |



NOTE It is possible to use half-width alphanumeric character and underscore for file names. Other letters cannot be used.

If you select a single Controller that is using firmware version 8.0.0 or later, the Activation menu will not be selectable.


### 2.6.1 Basic Setting for Server

This section describes basic server settings.



- Be careful when changing encrypt method of the server. After changing the setting, client may not be able to access OPC UA Server. Make sure to check settings or connection of certificate referring *3.4 Connecting to OPC UA Server* after you've changed the encrypt settings.
- At normal usage, do not change the setting of Server Log of OPC UA Server. Default setting is OFF.

- (1) Select a Controller to configure from the check box of Controller Information List.
- (2) Select Home display Menu - [Server Setting] - [Basic Settings].  
[Basic settings] dialog to input OPC UA Server setting will be displayed.

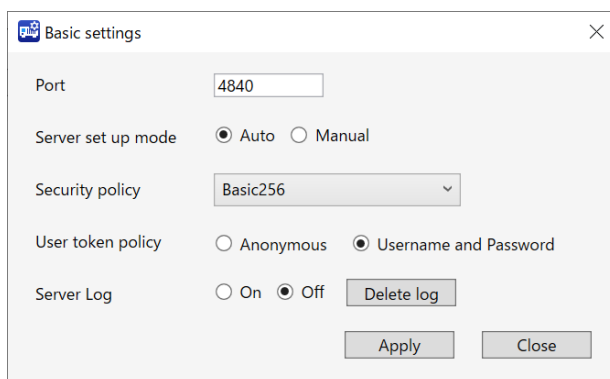


## (3) Set each item.

| Items              | Description   |
|--------------------|---|
| Port               | Input Port number to connect to the OPC UA Server.<br>Do not use Port number used in following: <ul style="list-style-type: none"> <li>- Remote Ethernet</li> <li>- Currently using TCP/IP Port number *</li> </ul> *: Check your Controller setting.<br>Refer to <i>Epson RC+ User's Guide TCP/IP Software Configuration</i> for more detail.  |
| Server set up mode | It is possible to select the way to start OPC UA Server.<br>AUTO : Start the Server when Controller is ON.<br>MANUAL : Start the Server from operation of OPC UA Configurator.  |
| Security policy    | Following types of encryption scheme can be selected. <ul style="list-style-type: none"> <li>None (no encrypt)</li> <li>Basic256</li> <li>Basic256Rsa15</li> <li>Basic256Sha256</li> <li>Aes128Sha256RsaOaep</li> <li>Aes256Sha256RsaPss</li> </ul> *: Be careful when changing encryption scheme types.  |
| User token policy  | Following types of User Certificate can be selected. <ul style="list-style-type: none"> <li>Anonymous</li> <li>UserName and Password</li> </ul>   |
| Delete log         | Delete log file of OPC UA Server.   |
| Server Log         | Following shows Log function of OPC UA Server. <ul style="list-style-type: none"> <li>On</li> <li>Off (Default)</li> </ul> *: Normally, do not change the setting. <ul style="list-style-type: none"> <li>- When changing Off to On, passcode input is required. Passcode is "199532".</li> <li>- The Server Log is turned On when a valid passcode entered.</li> </ul> OPC UA Server will stop when the Server Log capacity exceeds the specified value. |

(4) Input items and click [Apply] button. The changes saved.

When [Apply] button clicked, a dialog displayed says the Server will be stopped.

Click [OK] button.

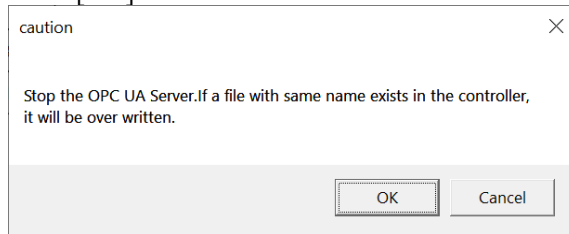

[Apply] button is not enabled when:

- some items are not inputted or unselected in setting dialog

An error dialog displayed when:

- wrong port number was inputted




## 2.6.2 Managing Users

### 2.6.2.1 Checking for User list

Displays all information of users who are allowed to connect OPC UA Server. The password will not be shown.


- (1) Select one Controller to configure from the check box of Controller Information List.
- (2) Select Home display Menu - [Server Setting] - [User].  
[UserList] dialog will be displayed.

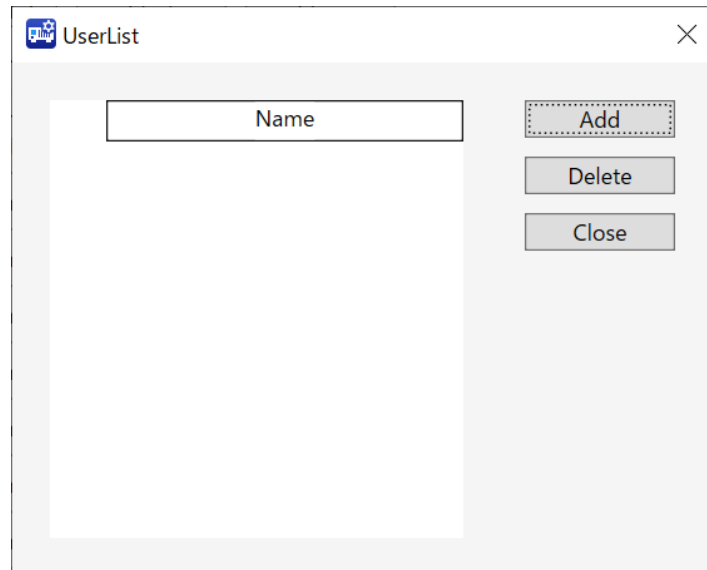

### 2.6.2.2 Adding User

Adding a user who are allowed to connect to OPC UA Server.


- (1) Select one Controller to configure from the check box of Controller Information List.
- (2) Select Home display Menu - [Server Setting] - [User].  
[UserList] dialog will be displayed.

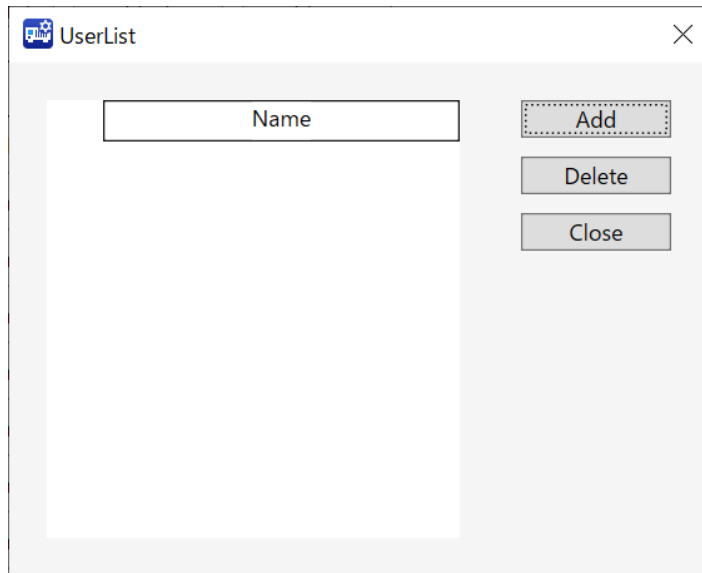

(2) [UserList] dialog will not be displayed, (3) [AddUser] dialog will be displayed instead when:

- selecting multiple Controllers at check box of Controller Information List.

- (3) Click [Add] button.  
[Add user] dialog will be displayed.

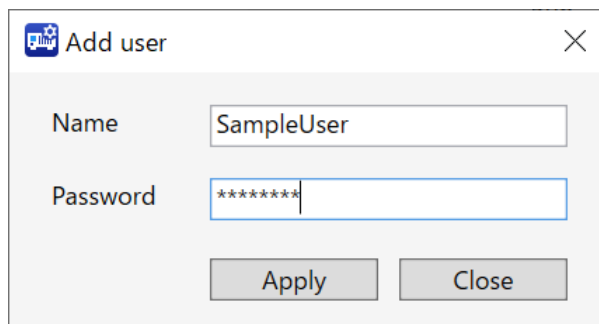

[Add] button is not enabled when:

- already 10 users are registered.


- (4) Set each item.

| Items    | Descriptions  |
|----------|---|
| Name     | Enter a username.<br>Enter 8 letters or more and 32 letters or less with half-width alphanumeric characters. (no symbols) |
| Password | Enter a password.<br>Enter 8 letters or more and 32 letters with half-width alphanumeric characters. (no symbols)         |

- (5) Click [Apply] button.


A dialog will be displayed says the Server will be stopped for server processing.

If you continue processing, click [OK] button. A user will be added. If [Cancel] button clicked, user will not be added.

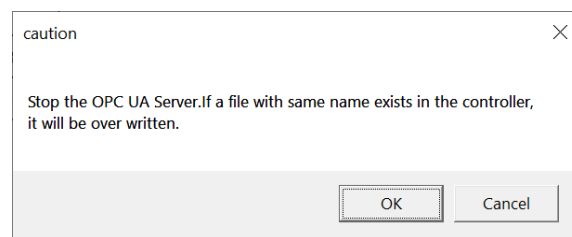


- (6) During the process of user adding, [Processing] dialog will be displayed. If you click [Cancel] button, a dialog displayed says the process will be stopped. To stop user adding process, click [OK] button.

Processing that has already been completed cannot be undone.

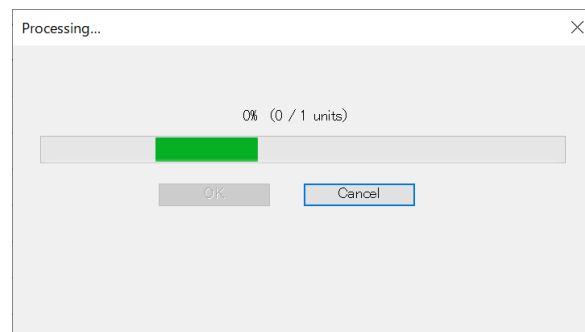


- (7) After the process complete, a message will be sent says process complete in the dialog. Click [OK] button.

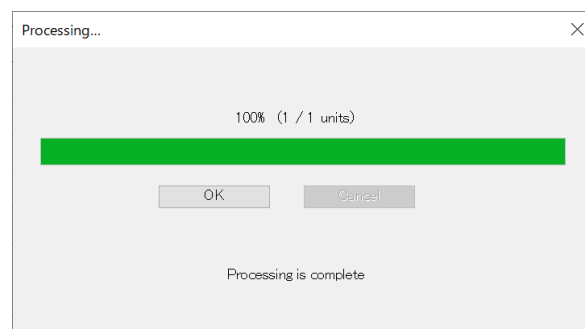


2.6.2.3 Deleting User

Deleting a user who are allowed to connect to OPC UA Server.

- (1) Select one Controller to configure from the checkbox of Controller Information List.
- (2) Select Home display Menu - [Server Setting] - [User].  
[UserList] dialog will be displayed.

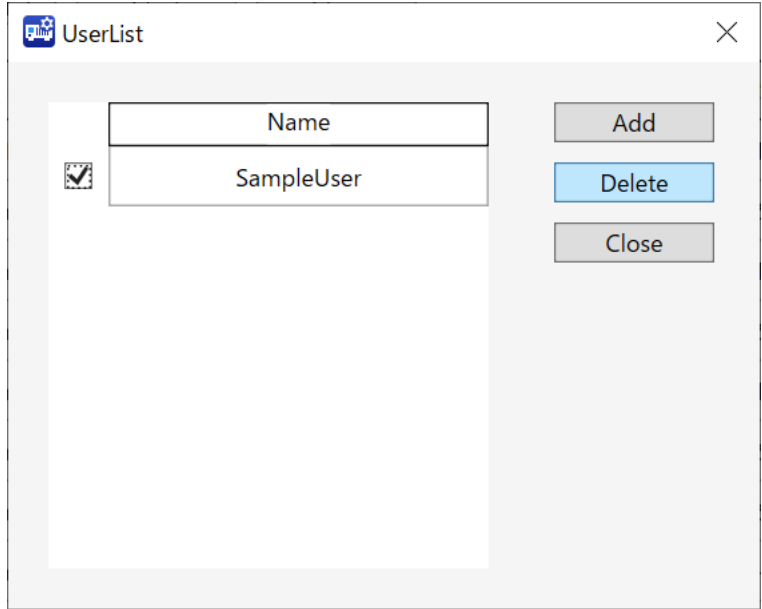


- (3) Check in the checkbox of users you want to delete from the list.

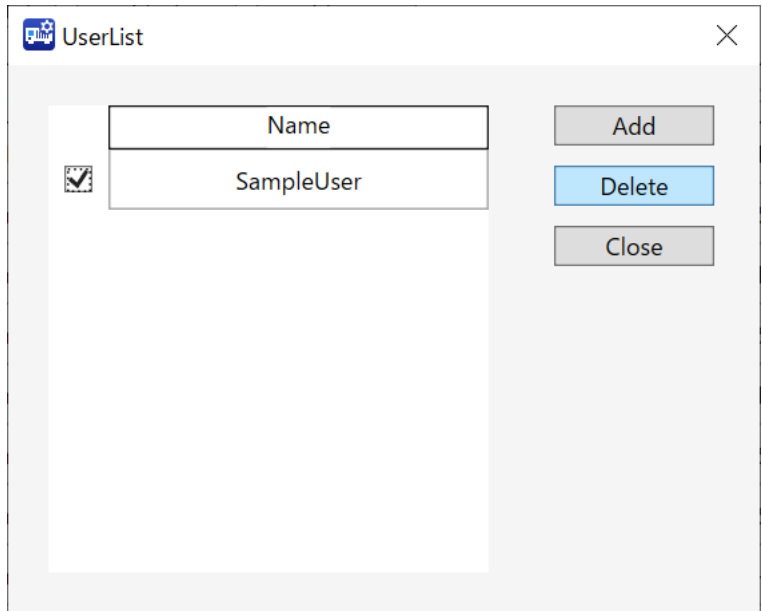

- (4) Click [Delete] button.


A dialog will be displayed says the Server will be stopped for server processing.

If you continue processing, click [OK] button. A user will be deleted. If [Cancel] button clicked, user will not be deleted.

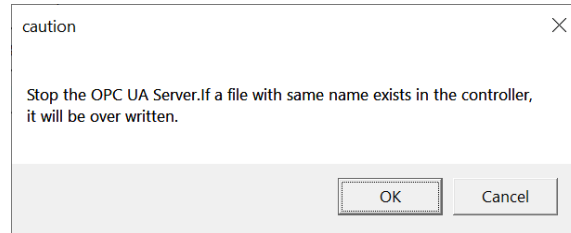


- (5) During the process of user deleting, [Processing] dialog will be displayed. If you click [Cancel] button, a dialog displayed says the process will be stopped. To stop user deleting process, Click [OK] button.

Processing that has already been completed cannot be undone.

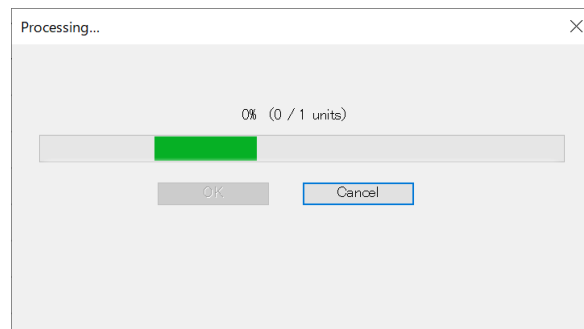

- (6) After the process complete, following dialog will be displayed. Click [OK] button.

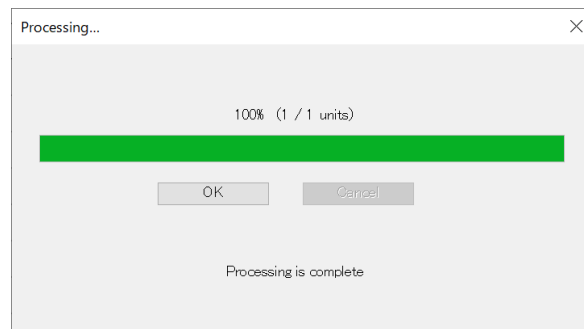

### 2.6.3 Activation (Firmware Versions Before 8.0.0 Only)

This function is enabled only for Controllers whose firmware version is earlier than 8.0.0. For Controllers with firmware version 8.0.0 and later, activation is executed from the Epson RC+ Options settings.

#### 2.6.3.1 Activate OPC UA Server Function

This section describes how to activate OPC UA Server function.

##### Activate a Controller one by one

- (1) Select a Controller to configure from the check box of Controller Information List.
- (2) Select Home display Menu – [Server Setting] - [Activation].  
[Activation] dialog to input setting will be displayed.

- (3) Set each item.

| Items          | Descriptions                                      |
|----------------|---|
| License key    | Enter a license key of OPC UA for Robotics Part1. |
| Activation key | Enter an activation key.                          |


For how to acquire the license key and the activation key, refer to 5. *About Purchasing Products*.

Click [Apply] button. Activation process will be started using information of key you've entered.

[Apply] button is not enabled when:


- Some items are not entered.
- Number of letters are not enough.
- Other than half-width alphanumeric character was entered.

A dialog displayed says the Server will be stopped for activation.

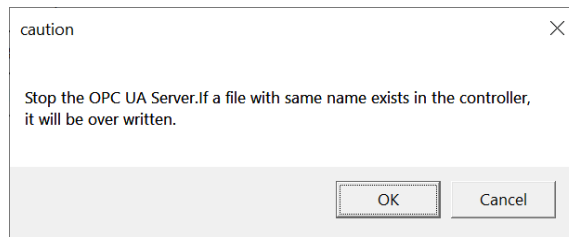


If you continue processing, click [OK] button. The Controller will be activated. If [Cancel] button clicked, activation will be canceled.

- (4) During the process of activation, following dialog will be displayed. If you click [Cancel] button, a dialog displayed says the process will be canceled. To stop the process of activation, click [OK] button.  
Processing that has already been completed cannot be undone.

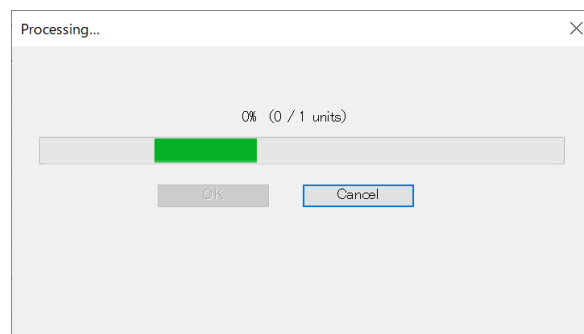


- (5) After the process complete, following dialog will be displayed. Click [OK] button.

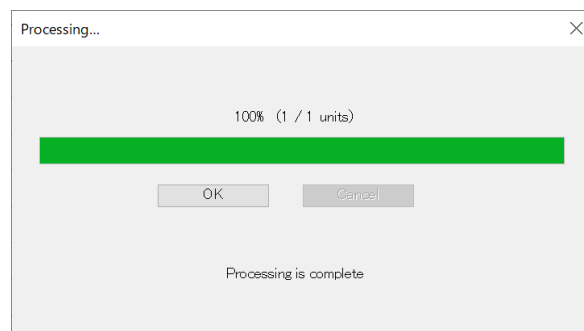


### Activate Multiple Controllers at Once

- (1) Select multiple Controllers to configure from the check box of Controller Information List.
- (2) Select Home display Menu - [Server Setting] - [Activation].  
[Activation] dialog will be displayed. Click [File selection] button.

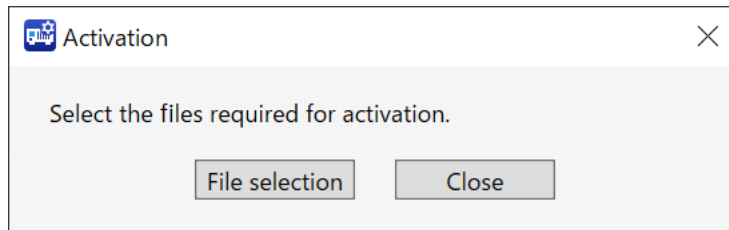


- (3) A dialog to select a file will be displayed.

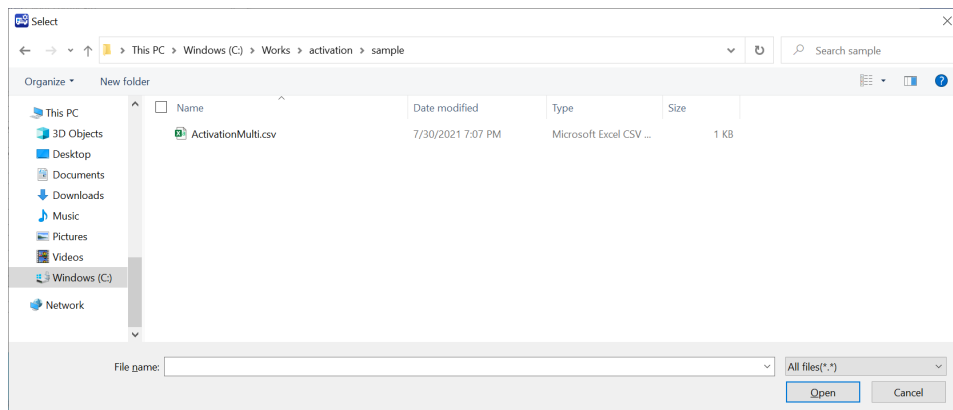

- (4) Select a file listed information for activation.
- (5) Input following contents in the file. About the file format, refer to the *Appendix A-Format of Activation File*.
  - Controller serial No.
  - License key
  - Activation key




- (6) Click [Apply] button of file setting dialog.  
A dialog will be displayed says the Server will be stopped for activation.

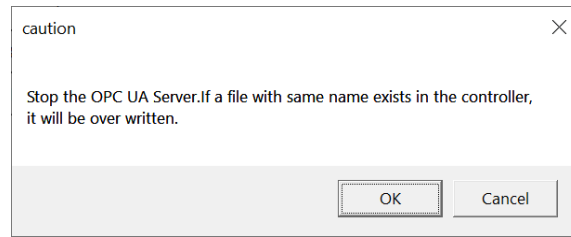

If you continue processing, click [OK] button. The Controller will be activated. If [Cancel] button clicked, the process of activation will be canceled.

- (7) During the process of activation, following dialog will be displayed. If you click [Cancel] button, it is possible to cancel the process.  
Processing that has already been completed cannot be undone.

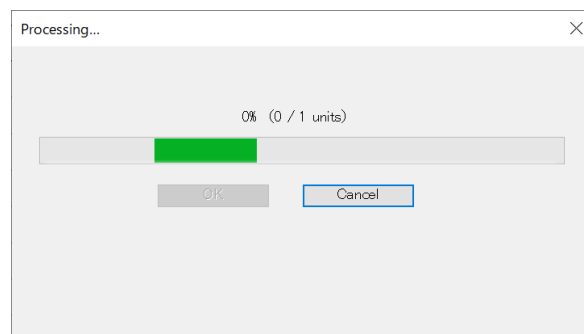


An error message will be displayed in processing dialog when:

- The information of the Controller selected in the check box is not listed in the file selected in the file setting dialog.

### 2.6.4 Export Settings (Firmware Versions Before 8.0.0 Only)

Export settings files related to the OPC UA Server from the Controller to a PC. For Controllers with firmware version 8.0.0 and later, it is recommended that you export the files using Epson RC+'s Backup function.


- (1) Select a Controller to configure from the check box of Controller Information List.
- (2) Select Home display Menu - [Server Setting] - [Export].  
[Export] dialog will be displayed.

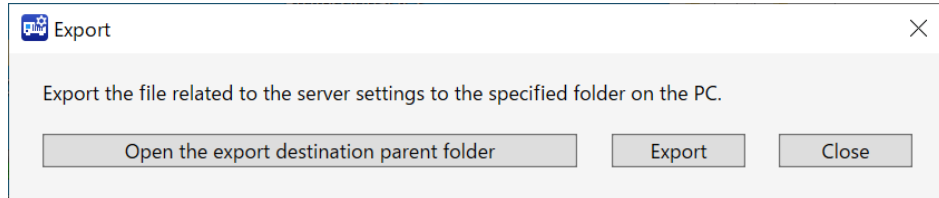


- (3) Set each item at export dialog.

| Items                                     | Descriptions   |
|---|--|
| Open the export destination parent folder | Displays the folder of export destination. Click [Open the export destination parent folder] button to open the parent folder of the export destination. |

- (4) Click [Export] button then a dialog displayed says it is overwriting on PC. To save and continue process, click [OK] button. The setting will be exported. Click [Cancel] button to cancel the export.

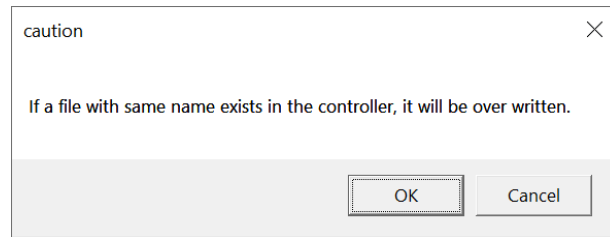


- (5) During the process of export, following dialog will be displayed.

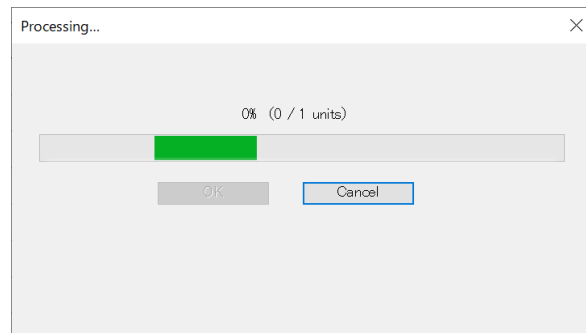

Click [Cancel] button, then a dialog displayed says export will be canceled. Click [OK] button to cancel the export. Processing that has already been completed exporting Controller cannot be undone.


- (6) After completing the export, following dialog will be displayed. Click [OK] button.

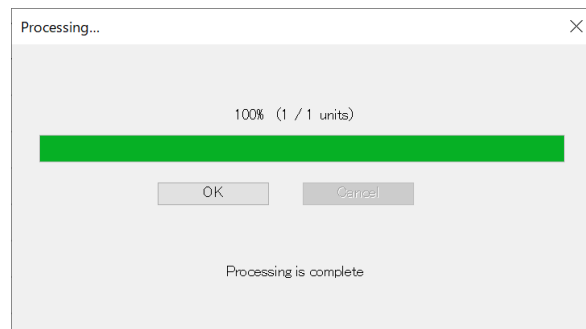

### 2.6.5 Importing Settings (Firmware Versions Before 8.0.0 Only)

Import a PC's activation key file and a server settings file to the Controller. For Controllers with firmware version 8.0.0 and later, it is recommended that you import the files using Epson RC+'s Backup function.

- (1) Select a Controller to configure from the check box of Controller Information List.
- (2) Select Home display Menu - [Server Setting] - [Import].  
[Import] dialog will be displayed.

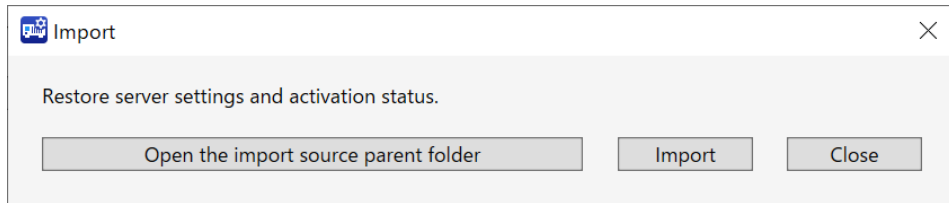


- (3) Set each item at import dialog.

| Item                                 | Description  |
|--------------------------------------|--|
| Open the import source parent folder | Displays the folder of export destination. Click [Open the import source parent folder] button to open the parent folder of the import source. |

- (4) Click [Import] button.  
Import will be executed.


An error dialog will be displayed before executing import when:

- File name to import is incorrect. (Do not rename the exported file.)

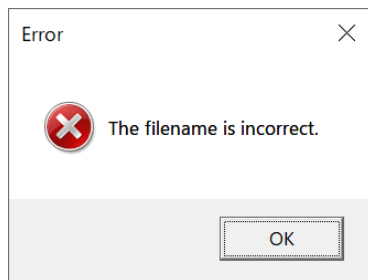


- (5) Click [Import] button. A dialog displayed says the server will be stopped and overwrite for import.

Click [OK] button to continue the process. The setting will be imported. Click [Cancel] button to cancel the import setting.

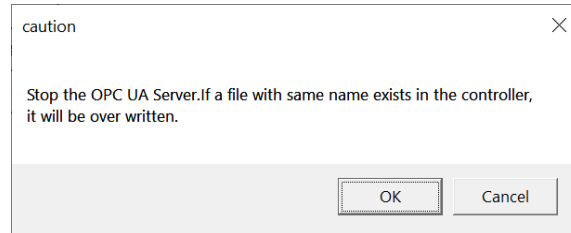


- (6) During the process of import, following dialog will be displayed. If you click [Cancel] button, a dialog displayed says the process will be canceled. Then you click [OK] button, import will be canceled.

Processing that has already been completed cannot be undone.

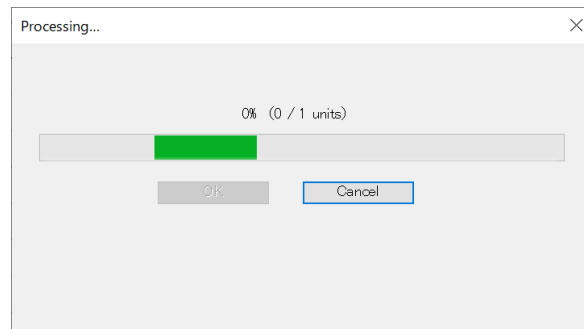

- (7) After completing the import, following dialog will be displayed. Click [OK] button.

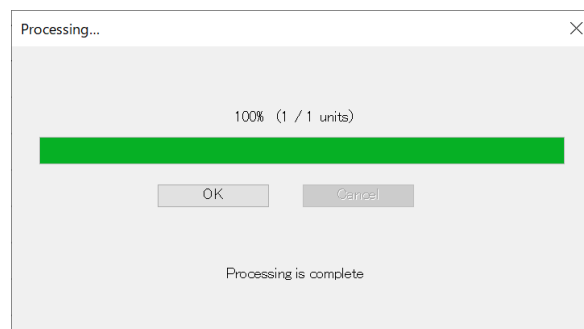

## 2.7 About Certificate

Following Certificates are possible to configure from Home display Menu bar-[Certificate]. It has following items.

| Items                   | Descriptions  |
|-------------------------|---|
| Create/Save             | Creates a Server Certificate or saves it in the Controller. |
| Export<br>(Self signed) | Exports Self signed Server Certificate to PC.               |
| Type select             | Setup type of the Server Certificate.                       |
| Client certificate      | Displays a Client Certificate or saves in the Controller.   |
| CRL                     | Manages registration of CRL.                                |

NOTE



It is possible to use half-width alphanumeric character and underscore for file names. Other letters cannot be used.

### 2.7.1 Creating/Saving Server Certificate

Creates / saves the Server Certificate to the Controller.

Select one of the three type of the Server Certificate describes in next section. And save it in the Controller. Mostly the last one saved is selected as a valid Server Certificate.

To activate OPC UA Server, a Server Certificate needs to be registered at minimum.


#### 2.7.1.1 Steps of Creating/Saving Server Certificate

- (1) Select a Controller to configure from the check box of Controller Information List.
- (2) Select Home display Menu - [Certificate] - [Create/Save], then pull down menu of Certificate type will be displayed. Following shows construction of the menu.  
However, User specified menus are enabled only when you have selected a single Controller whose firmware version is prior to 8.0.0.

| Items          | Descriptions  |
|----------------|---|
| Self signed    | Create and register of Self signed Certificate.       |
| User specified | Register a Certificate user prepared and private key. |
| CA signed      | Create CSR and register of CA Certificate.            |

### 2.7.1.2 Creating Self Signed Certificate

- (1) Select a Controller to configure from the check box of Controller Information List.
- (2) Select Home display Menu – [Certificate] – [Create/Save] – [Self signed].  
[Self signed] dialog to create Self signed Certificate will be displayed.

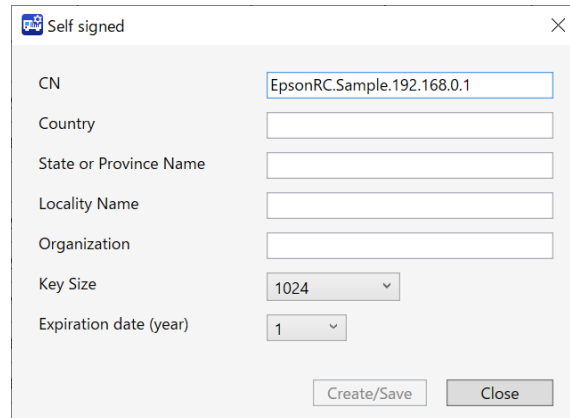

The screenshot shows a dialog box titled "Self signed" with a close button (X) in the top right corner. The dialog contains the following fields and controls:

- CN: Text input field containing "EpsonRC.Sample.192.168.0.1"
- Country: Empty text input field
- State or Province Name: Empty text input field
- Locality Name: Empty text input field
- Organization: Empty text input field
- Key Size: Dropdown menu showing "1024"
- Expiration date (year): Dropdown menu showing "1"
- Buttons: "Create/Save" and "Close" at the bottom right.

## 2. OPC UA Configurator


(3) Set each item at [Self signed] dialog to create Self signed Certificate.

| Items                  | Descriptions  | Examples                          |
|------------------------|---|-----------------------------------|
| CN                     | Enter a common name.<br><EpsonRC.Serial No. of Controller.IP Address] is entered at first. (It is same as Application Name of OPC UA server. If it changed, a warning when connecting from OPC UA client may displayed because name is not matched.)  | EpsonRC.SN0000123.192.168.010.001 |
| Country                | Enter your country.<br>Enter a country code referring ISO 3166-1 alpha-2.   | JP                                |
| State or Province Name | Enter your State or Province Name.  | Nagano                            |
| Locality Name          | Enter your Locality Name.   | Azumino                           |
| Organization           | Enter your Organization Name.   | Epson                             |
| Key Size               | Select a private key size to create.<br>Length of the key you can select depends on the communication encrypt system selected at [Basic Setting].<br>None: 2048(bit)<br>Basic256: 1024/2048(bit)<br>Basic128Rsa15: 1024/2048(bit)<br>Basic256Sha256: 2048/4096(bit)<br>Aes128Sha256RsaOaep:<br>2048/4096(bit)<br>Aes256Sha256RsaPss: 2048/4096(bit) | -                                 |
| Expiration date (year) | Select an expiration date of Self signed Certificate to create. 1 to 10 years can be entered.   | -                                 |

(4) Click [Create/Save] button.

A dialog displayed says the server will be stopped and overwritten to configure the server settings.


Click [OK] button to continue the process. Self signed Certificate will be created and registered. Click [Cancel] button to cancel saving Certificate.

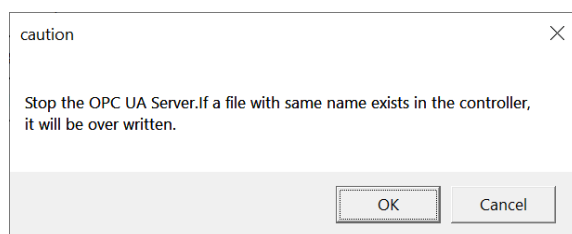




When doing back up the created Self signed Certificate automatically, please set it in the application settings. Refer to *2.8.1 Backup Setting* for more details.

- (5) During the process of creating Self signed Certificate, following dialog will be displayed. Click [Cancel] button, then a dialog displayed says process will be canceled. If you want to cancel creating Self signed Certificate, click [OK] button. The Self signed Certificate of Controller that has already been completed processing cannot be deleted.

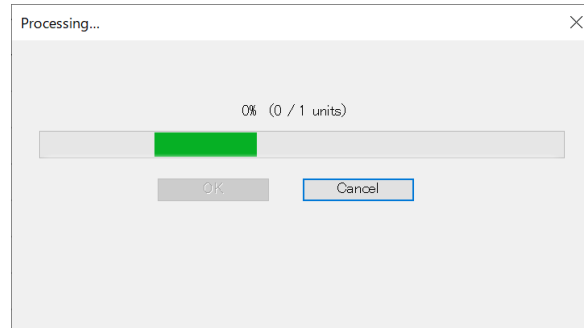

- (6) After completing the process of Creating Self signed Certificate, following dialog will be displayed. Click [OK] button.

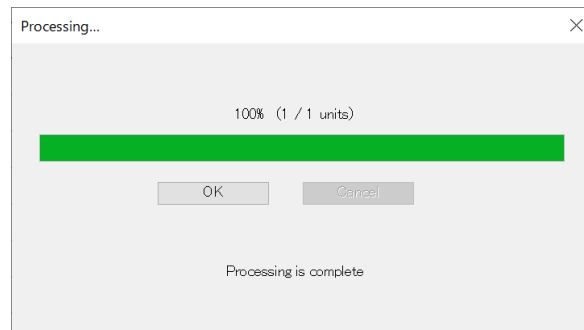


### Precautions when selecting multiple Controllers

- User editing is invalid for CN.
- Entered value other than CN will be applied for all controller's certificate.
- Self signed Certificate to create will be the same except CN.

### 2.7.1.3 Exporting Self Signed Certificate

- (1) Select a Controller to configure from the check box of Controller Information List.
- (2) Select Home display Menu – [Certificate] – [Export].  
[Export (Self signed)] dialog will be displayed.

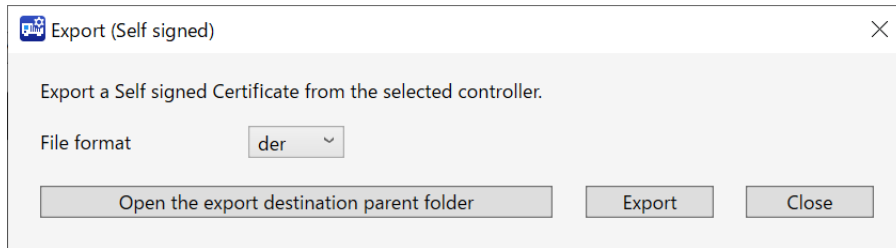


- (3) Click [Export] button at Export dialog.  
The exported files are saved for each Controller like following.

"C:\EpsonRC80\OPCUA\<Controller serial No.>\SelfSigned" folder


**NOTE**

 The extension is the one that setup in File Format of Export dialog. (.der or .pem)

Click [Export] button then a dialog displayed says it is saved in PC and overwritten. Click [OK] button to overwrite and continue the process. Self signed Certificate will be exported. Click [Cancel] button to cancel exporting the Self signed Certificate.

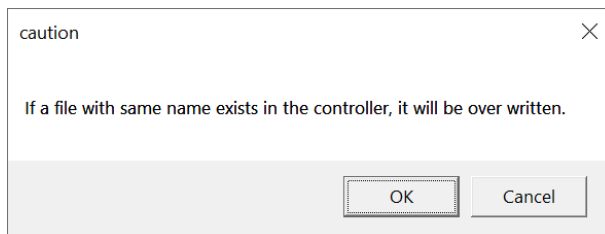


## 2.7.1.4 User Specified Certificate

|   |  |
|---|--|
| <br><b>CAUTION</b> | <ul style="list-style-type: none"> <li>■ When creating a Certificate or private key with a tool other than this application, for the certificate creation library such as OpenSSL used by the tool, use the version of OpenSSL installed on the PC using this application or one compatible with it. Operation is not guaranteed when using different version of OpenSSL.</li> </ul> |
|---|--|

This function is enabled only when you have selected a single Controller that is using a firmware version prior to 8.0.0.

- (1) Select a Controller to configure from the check box of Controller Information List.
- (2) Select Home display Menu - [Certificate] - [Create/Save] - [User specified].  
[User specified] dialog will be displayed.

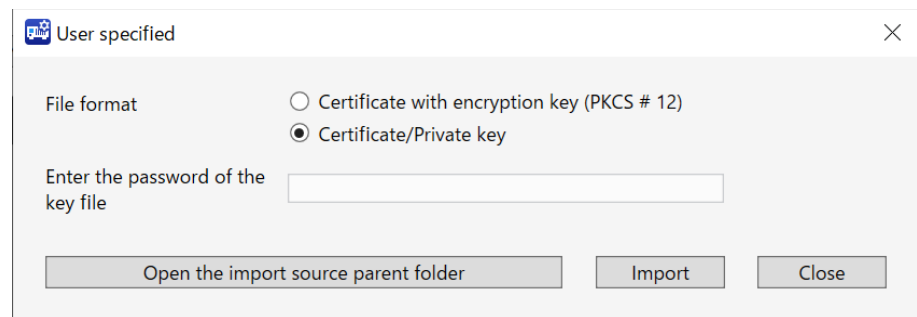

[User specified] can not be selected when:

- Selecting multiple Controllers.
- (3) Set each item at [User specified] dialog.

**When “Certificate with encryption key” is selected:**

- You will need to enter the password you set when you created the Certificate with encryption key.
- The Certificate files you want to register need to be saved only one in following folder for each Controller.  
"C:\EpsonRC80\OPCUA\\UserSpecified " folder

Name the Certificate file with half half-width alphanumeric characters and underscores. Enter the extension with pfx.

**When “Certificate/Private key” is selected:**

- The Certificate files you want to register need to be saved only one in following folder for each Controller.

"C:\EpsonRC80\OPCUA\\UserSpecified " folder

Name the Certificate file with half half-width alphanumeric characters and underscores. Enter the extension with der.

- The files of private key you want to register need to be saved only one in following folder for each Controller just.


"C:\EpsonRC80\OPCUA\\UserSpecified " folder

Name the Certificate file with half half-width alphanumeric characters and underscores. Enter the extension with key.

| Item                                 | Description  |
|--------------------------------------|--|
| Open the import source parent folder | Displays designated folder of export destination. Click [Open the import source parent folder] button to open designated folder of the import. |


- (4) Import the Certificate with encrypt or Certificate and private key from PC to the Controller depending on the type of the file you selected in (3). Click [Import] button, then a dialog will be displayed says the server will be stopped and overwritten for the import process.

Click [OK] button to continue the process. User specified Certificate will be imported. Click [Cancel] button to stop importing the Use specified Certificate.

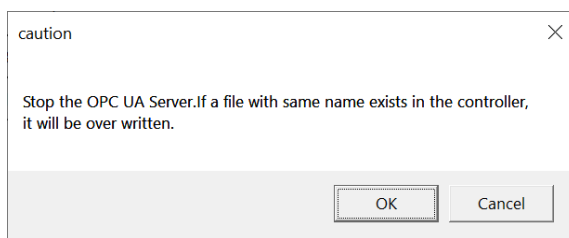


An error dialog will be displayed before importing when:

- File name to import is incorrect. For about correct file name, refer to step (3).

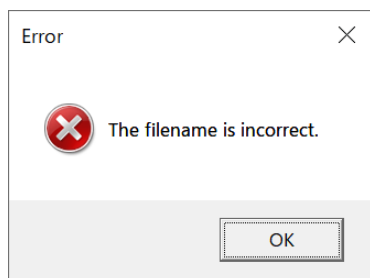

- (5) During the process of importing User specified Certificate, following dialog will be displayed. Click [Cancel] button then a dialog will be displayed says import will be canceled. Click [OK] button to stop importing the User specified Certificate. Processing that has already been completed cannot be undone.

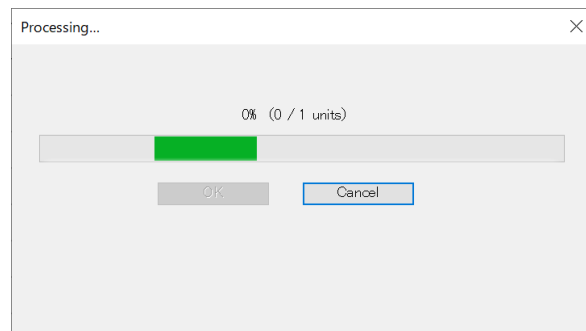


2.7.1.5 CA Signed Certificate

Creating CSR




- If you click the [Create / Save] button when creating a CSR, the CA certificate you are currently using will be invalidated.

- (1) Select a Controller to configure from the check box of Controller Information List.
- (2) Select Home display Menu - [Certificate] - [Create/Save] - [CA signed].  
[CA signed] will be displayed.

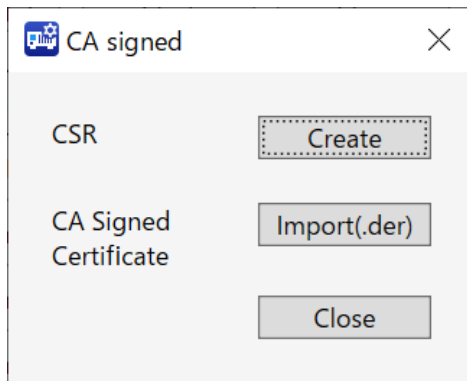

- (3) Click [Create] button.  
[CSR] dialog will be displayed. CSR will be needed when issuing the CA signed Certificate.

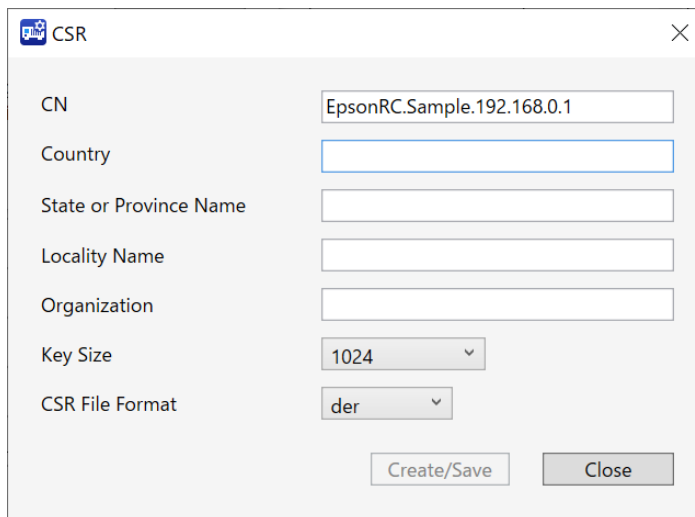

- (4) Set each item at dialog of creating CSR.

Created CSR files will be saved in following folder.

NOTE



"C:\EpsonRC80\OPCUA\<<Controller serial No.>\CSR" folder

The extension is the one that setup in CSR File Format of creating CSR dialog. (.der or .pem)

| Items                  | Descriptions   | Examples                          |
|------------------------|--|-----------------------------------|
| CN                     | Enter a common name.<br><EpsonRC.Serial No. of Controller.IP Address> is entered at first. (It is same as Application Name of OPC UA server. If it changed, a warning when connecting from OPC UA client may displayed because name is not matched.)   | EpsonRC.SN0000123.192.168.010.001 |
| Country                | Enter your country.<br>Enter a country code referring ISO 3166-1 alpha-2.  | JP                                |
| State or Province Name | Enter your State or Province Name.   | Nagano                            |
| Locality Name          | Enter your Locality Name.  | (city)<br>Azumino                 |
| Organization           | Enter your Organization Name.  | (company)<br>Epson                |
| Key Size               | Select a private key size to create.<br>Length of the key you can select depends on the communication encrypt system selected at [Basic Setting].<br>None: 2048(bit)<br>Basic256: 1024/2048(bit)<br>Basic128Rsa15: 1024/2048(bit)<br>Basic256Sha256: 2048/4096(bit)<br>Aes128Sha256RsaOaep:<br>2048/4096(bit)<br>Aes256Sha256RsaPss:<br>2048/4096(bit) | -                                 |
| CSR File Format        | Select a n encoding way of the private key file when generating the private key file.<br>der<br>pem  | -                                 |

- (5) Click [Create/Save] button.

Start creating CSR.

- (6) Clicking [Create/Save] button makes CA Certificate invalid that currently using.

Send the created CSR to CA and issuing the CA Certificate. Before start working on the step (7), save only one in each of the following folders corresponding to the target

Controller. Name the Certificate file with half-width alphanumeric characters and underscores. Enter the extension with der.

"C:\EpsonRC80\OPCUA\<<Controller serial No.>\CASigned " folder

### Precautions when selecting multiple Controllers

NOTE



CN will be setup automatically by OPC UA Configurator.


NOTE




Entered values except CN are applied to CSR of all Controllers.

### Importing CA Certificate

- (7) Select a Controller to configure from the check box of Controller Information List.
- (8) Start importing the CA Certificate to PC from Controller. Click [Import] button then a dialog will be displayed says the server stops when saving CA Certificate to the Controller and the Certificate will be overwritten.

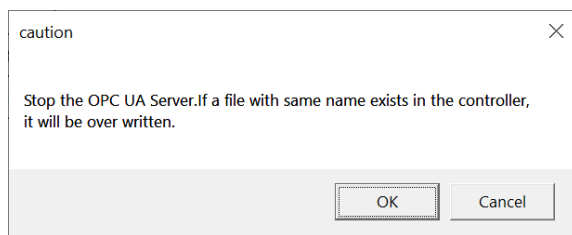


Click [OK] button, import will be done.

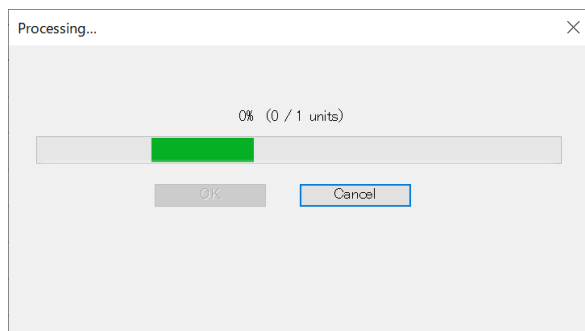

An error message will be displayed progress dialog and import will be canceled when:

- The certificate imported from PC to Controller and CSR that saved in Controller do not match.

- (9) After complete importing CA Certificate, following dialog will be displayed. Click [OK] button.

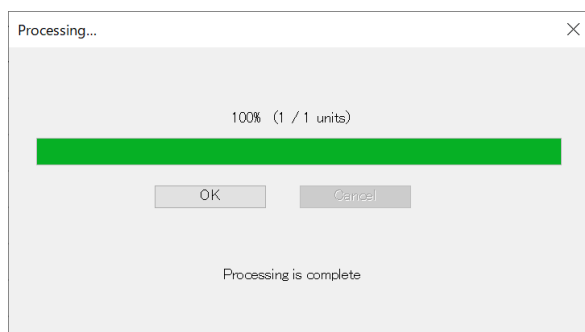



## 2.7.2 Setup using type of Server Certificate


There are some ways to create the Server Certificate. It is possible to specify the Certificate type using for OPC UA Configurator.

### 2.7.2.1 Auto Setup Function for Server Certificate


When saving the Certificate file in the Controller of OPCUA Configurator, the using type of Certificate will be selected automatically.

### 2.7.2.2 Type Setting of Server Certificate

- (1) Select a Controller to configure from the check box of Controller Information List.
- (2) Select Home display Menu – [Certificate] – [Type Selection].  
[Type select] dialog will be displayed.

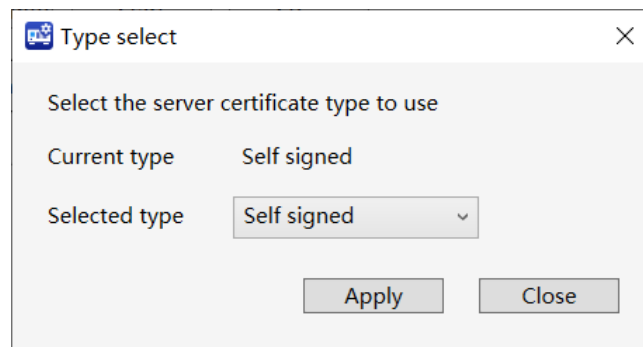

- (3) Select the Certificate type you want to use for the Server Certificate from the [Selected type] pull-down menu. However, if you have selected one Controller using firmware version 8.0.0 or later, “User specified” will not appear in the list.

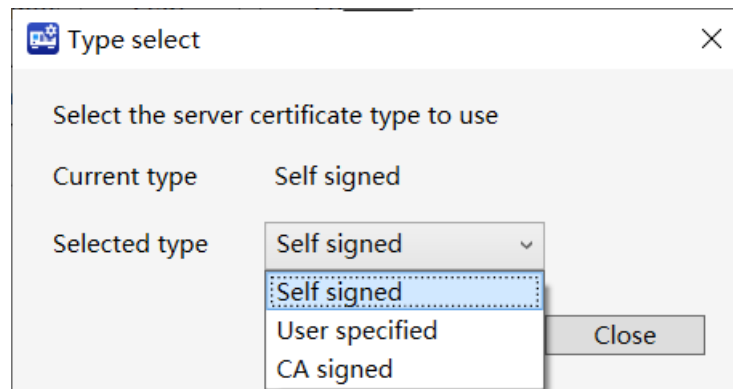


- (4) Click [Apply] button.  
Start setup for using type of the Server Certificate.

An error dialog will be displayed when:


- Selected Certificate is not saved.

- (5) Following dialog will be displayed to inform you that the server will be stopped for configuring the Server Certificate type displaying following dialog.

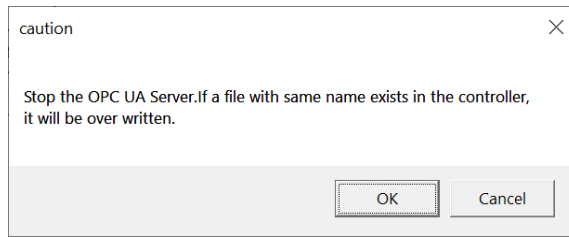


To continue the process, click [OK] button. The setting for using type of Server Certificate will be done. Click [Cancel] button to cancel the setting.

- (6) During the process of setting the Server Certificate type, following dialog will be displayed. Click [Cancel] button then a dialog will be displayed says the process will be canceled. Click [OK] button to stop setting up for Server Certificate type. Processing that has already been completed cannot be undone.

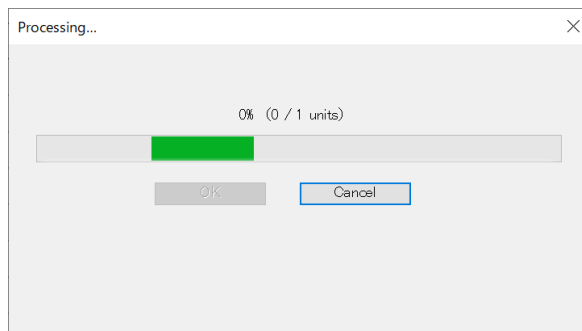

- (7) After completing the setup for the using type of Server Certificate, following dialog will be displayed. Click [OK] button.

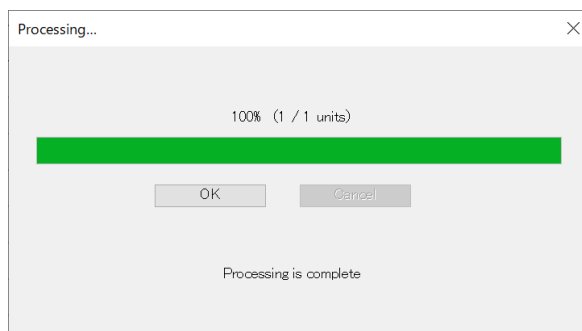

### 2.7.3 Client Certificate

Client Certificate will be used for Client authentication when connecting to OPC UA Sever. It is possible to import Client Certificate to OPC UA Server or to manage imported Client Certificate by using OPC UA Configurator. You can also manage Issuer certificates, which are included in certificate chains. The function for managing Issuers' certificates is supported by Controllers using firmware version 8.0.0 or later.

#### 2.7.3.1 Displaying Information of Client Certificate

- (1) Select a Controller to configure from the check box of Controller Information List.
- (2) Select Home display Menu– [Certificate] – [Client Certificate].
- (3) After the process, a dialog displayed says it is completed. Click [OK] button, then [Client certificate] dialog will be displayed.


The following describes the Trust, Rejected, and Issuers lists displayed in the [Client certificate] dialog.

| Items           | Descriptions                                       |
|-----------------|--|
| Name            | File name of the Client Certificate that acquired. |
| Issued to       | The issue destination of the Client Certificate.   |
| Issued by       | The issuer of the Client Certificate.              |
| Serial No.      | Serial Number of the Client Certificate.           |
| Expiration date | The expiration date of the Client Certificate.     |


### 2.7.3.2 Deleting Client Certificate

It is possible to select and delete the Client Certificate imported in the OPC UA Server.

- (1) Select a Controller to configure from the check box of Controller Information List.
- (2) Select Home display Menu – [Certificate] – [Client Certificate].  
[Client certificate] dialog will be displayed.

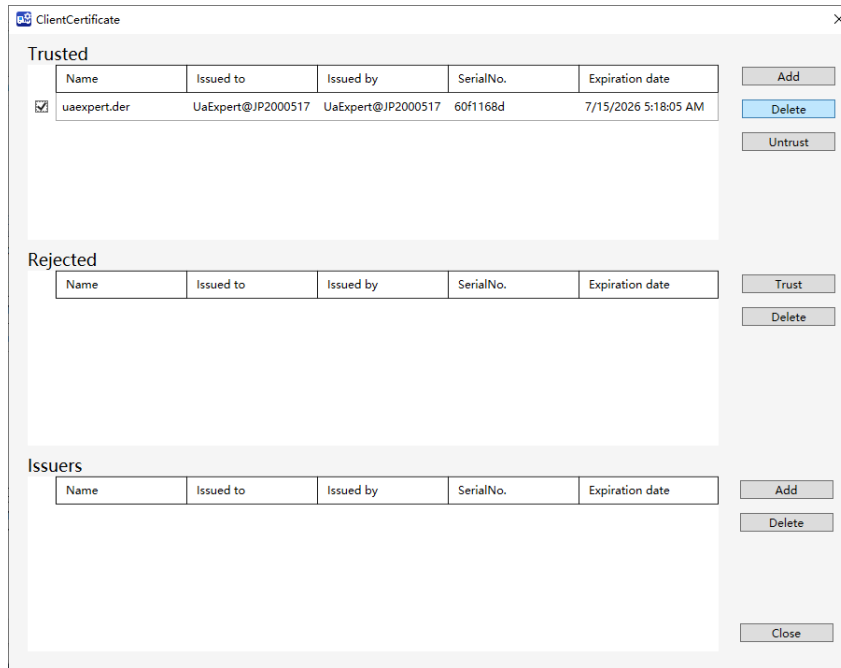

- (3) Check in the check box in next of the list, click [Delete] button.  
The Client Certificate will be deleted from the Certificate list.

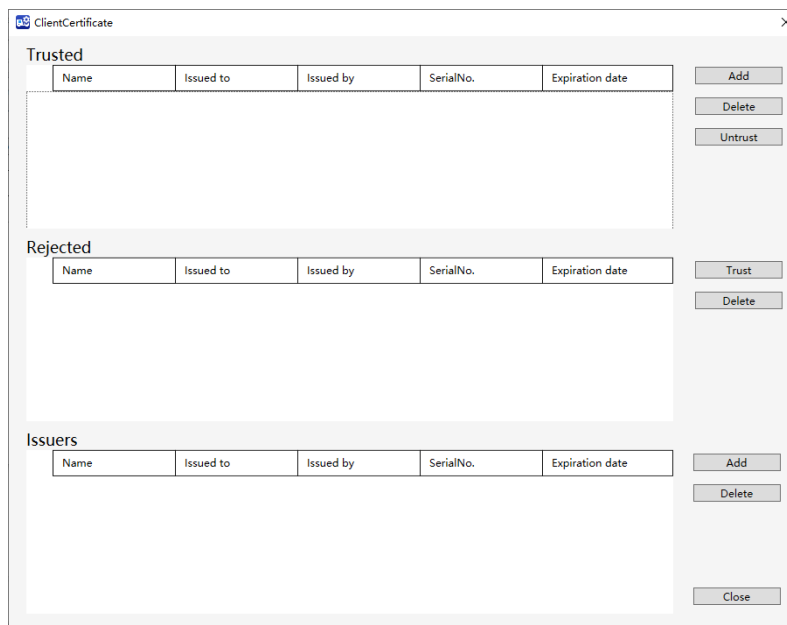


### 2.7.3.3 Importing Client Certificate


It is possible to import (register) Client Certificate to OPC UA Server.

#### When importing with one Controller

- (1) Select a Controller to configure from the check box of Controller Information List.
- (2) Select Home display Menu – [Certificate] – [Client Certificate].  
[Client certificate] will be displayed.  
Add to Trusted: Click the [Add] button to the right of the Trusted list.  
Add to Issuers: Click the [Add] button to the right of the Issuers list.

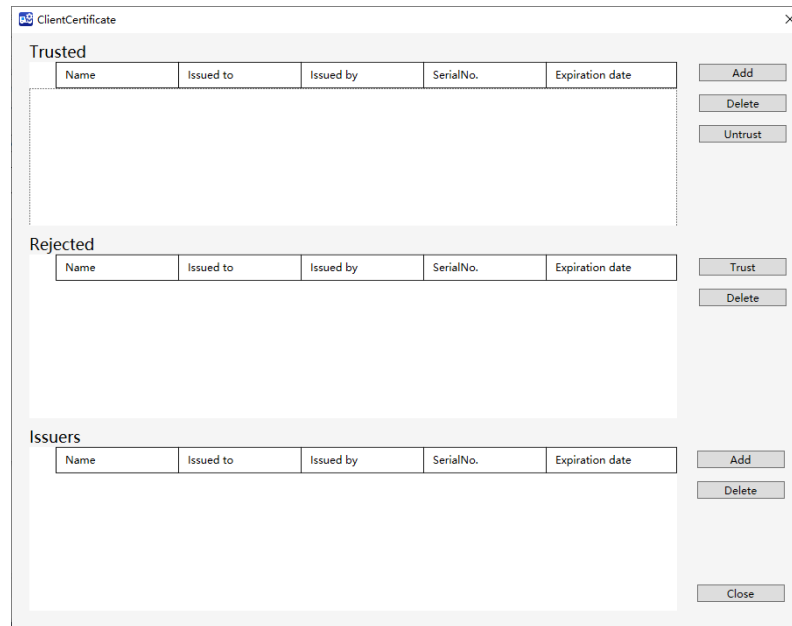

- (3) Following dialog to select a file will be displayed. Click [Open] button.

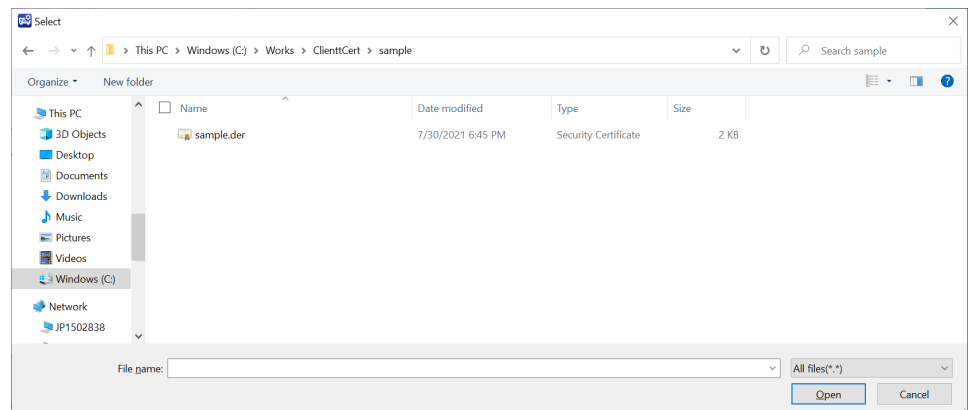


#### NOTE



Do not use space or full-width character for the file name.

- (4) A dialog will be displayed says it is overwritten for import process.


To overwrite and continue the process, click [OK] button. The Client Certificate will be imported. If you click [Cancel] button, importing the Client Certificate will be canceled.

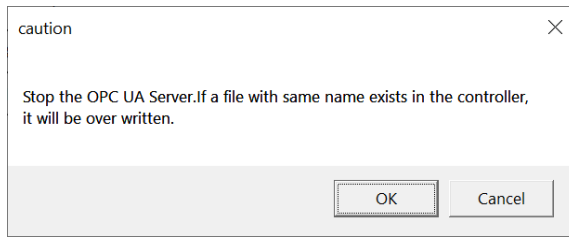


An error dialog is displayed, and import will be canceled when:

- There are no files, or the file is invalid.
- The number of files exceeds the upper limit (up to 10 files)

- (5) During the importing the Client Certificate, following dialog will be displayed. Click [Cancel] button, a dialog will be displayed says the process will be canceled. Click [OK] button to stop importing the Client Certificate. Processing that has already been completed cannot be undone.

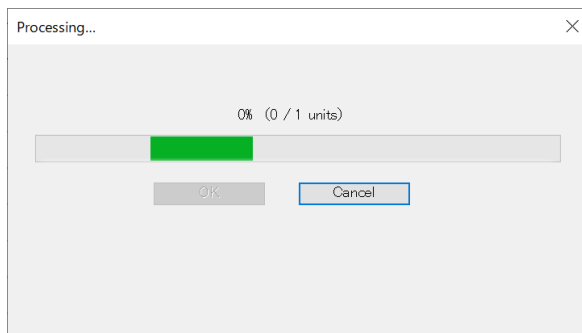


- (6) After complete importing the Client Certificate, following dialog will be displayed. Click [OK] button of the dialog.

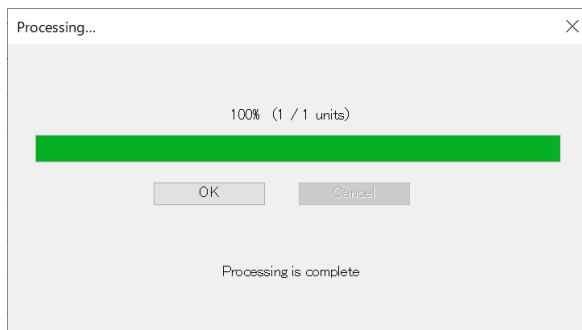


### When importing with multiple Controllers

- (1) Select multiple Controller to configure from the check box of Controller Information List.
- (2) Select Home display Menu – [Certificate] – [ClientCertificate].  
[Client certificate] dialog will be displayed. Click the [Trusted] or [Issuers] button depending on which list you want to add to.

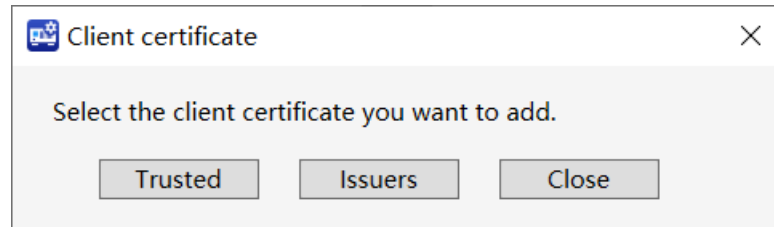


- (3) A dialog to select a file will be displayed. Click [Open] button.

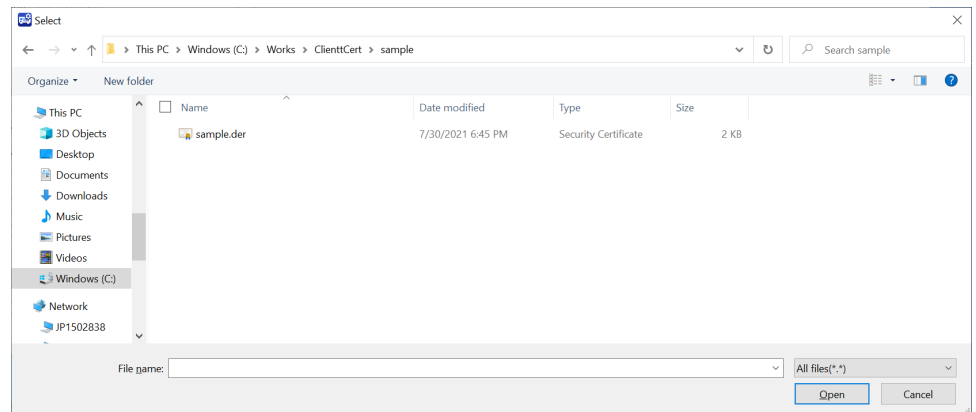

Do not use space or full-width character for the file name.

- (4) A dialog will be displayed says the Server will stop and overwritten to import. Click [OK] button

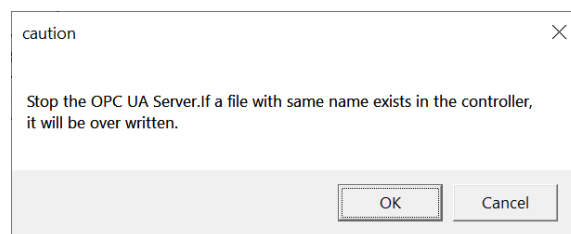


An error dialog will be displayed, and import will not be performed when:

- The number of files exceeds the upper limit (up to 50 files).
- There are no files, or the file is invalid.

### 2.7.3.4 Displaying CRL Files in a List-Form

- (1) Select one Controller to configure from the check box of Controller Information List.
- (2) Select Home display Menu – [Certificate] – [CRL].
- (3) [CRL] dialog will be displayed.

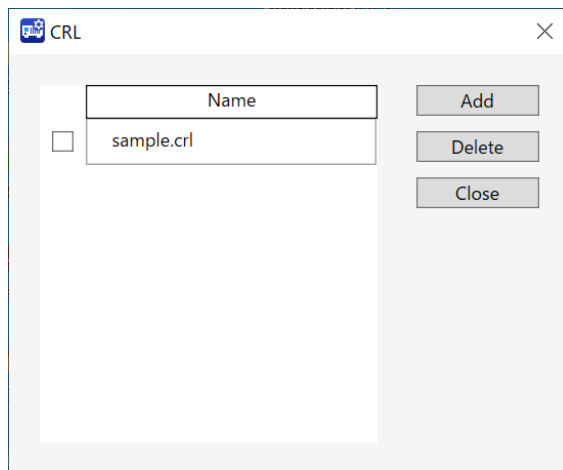


CRL dialog will not be displayed when:

- Multiple Controllers are selected.




### 2.7.3.5 Deleting CRL Files

- (1) Select one Controller to configure from the check box of Controller Information List.
- (2) Select Home display Menu – [Certificate] – [CRL].
- (3) [CRL] dialog will be displayed.

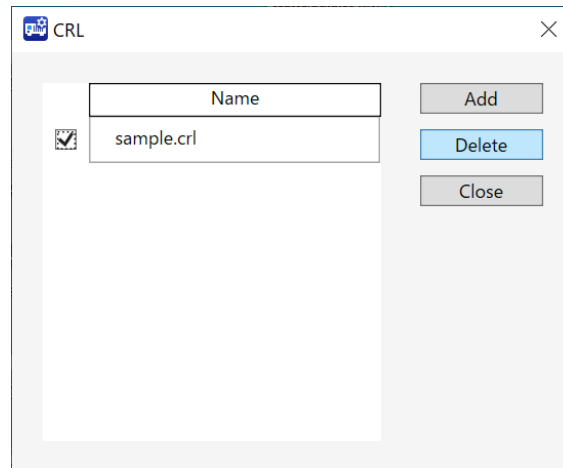


- (4) Check in the check box in next of the list and click [Delete] button.
- (5) A dialog will be displayed says the Server will be stopped. Click [OK] button.

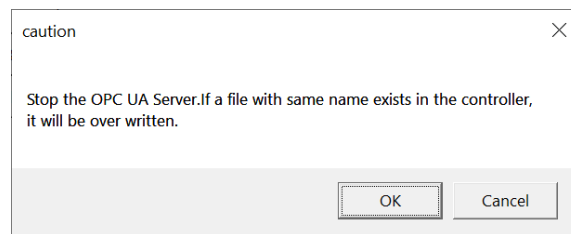


### 2.7.3.6 Importing CRL Files

#### When importing with one Controller:

- (1) Select a Controller to configure from the check box of Controller Information List.
- (2) Select Home display Menu – [Certificate] – [CRL].  
[CRL] dialog will be displayed. Click [Add] button.

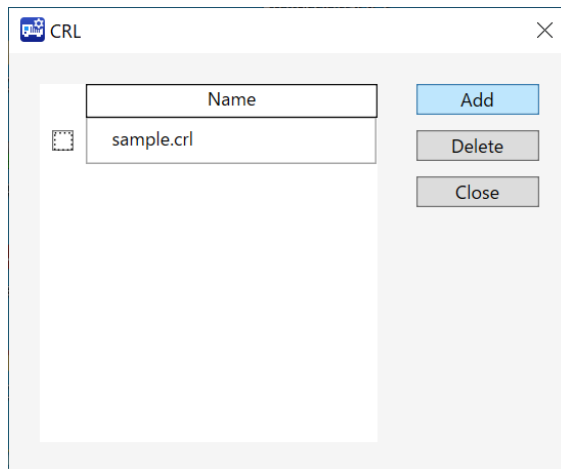

- (3) A dialog to select a file will be displayed. Click [Open] button.

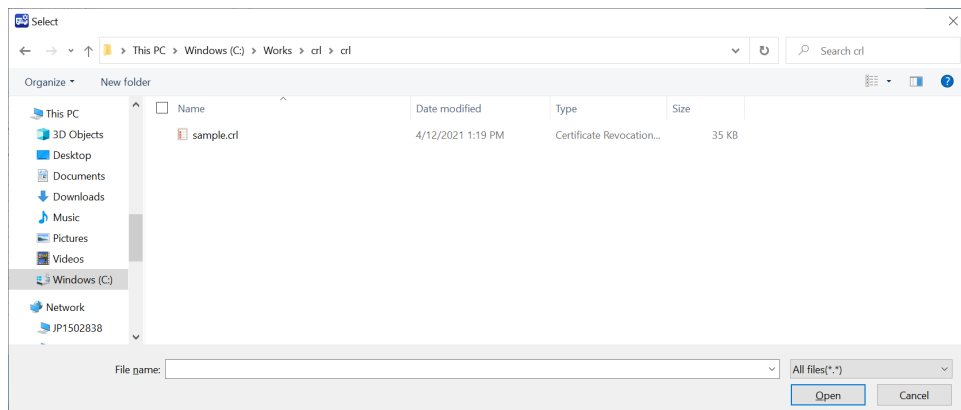


**NOTE**



Do not use space or full-width character for the file name.

- (4) A dialog will be displayed says the Server will stop and overwritten to import.  
Click [OK] button.

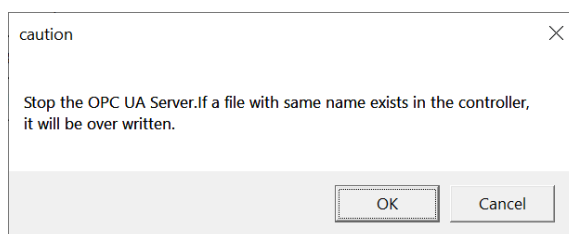


An error dialog will be displayed, and import will not be performed when:


- There are no files, or the file is invalid.
- The number of files exceeds the upper limit (up to 50 files).

**When importing with multiple Controllers:**

- (1) Select multiple Controllers to configure from the check box of Controller Information List.
- (2) Select Home display Menu – [Certificate] – [CRL].  
[CRL] dialog will be displayed. Click [File selection] button.

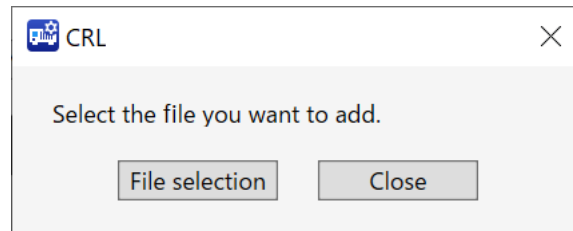


- (3) A dialog to select a file will be displayed. Click [Open] button.

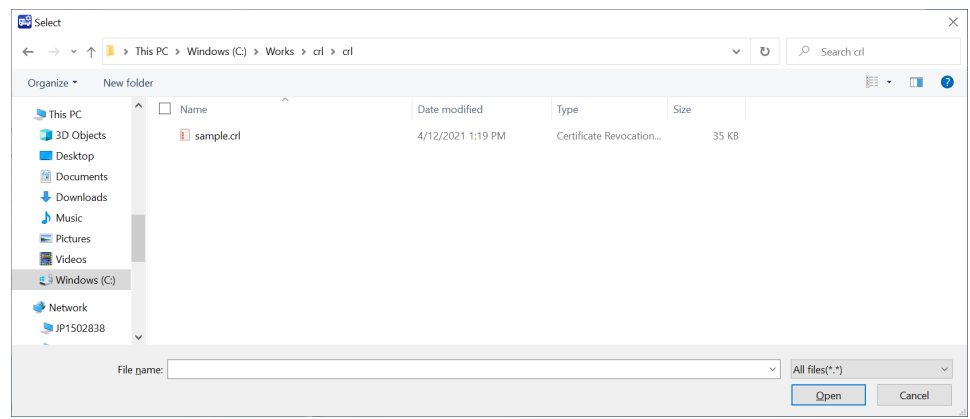**NOTE**

Do not use space or full-width character for the file name.

- (4) A dialog will be displayed says the Server will stop and overwritten to import. Click [OK] button.

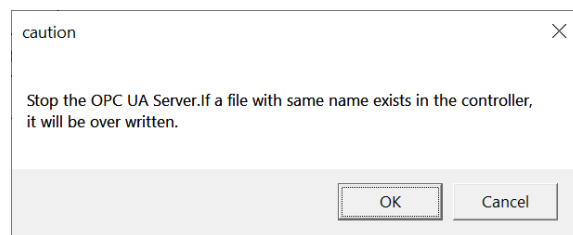

An error dialog will be displayed, and import will not be performed when:

- There are no files, or the file is invalid.
- The number of files exceeds the upper limit (up to 50 files)


## 2.8 Setting of OPC UA Configurator

It is possible to configure in Home display Menu - [Option]. Option menu has following items.

| Items   | Descriptions  |
|---------|---|
| Back up | Setting the backup function of the file created with the application. |

### 2.8.1 Backup Setting


When you create the Self signed Server Certificate, you can configure whether to back up the created Server Certificate and private key to the PC.



**CAUTION**

■ The private key is very important for the security. Be careful managing the private key.

- (1) Select Home display Menu – [Option] – [Back up] to start configuring back up.

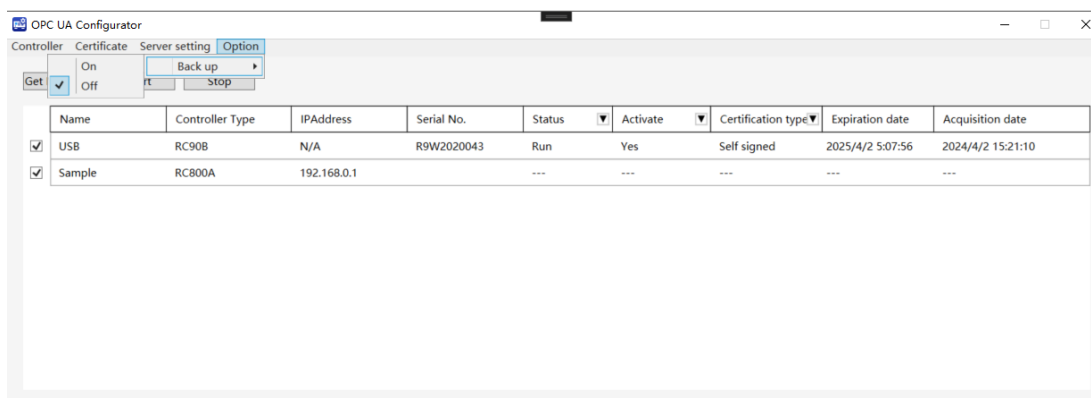

- (2) If [On] selected, the backup of file you created is automatically created.

Created files are in:

Self Signed Certificate

"C:\EpsonRC80\OPCUA\<<Controller serial No.>\CASigned" folder

If [Off] selected, no backups created.

You can backup Self signed Server Certificate created in this application, Private key file or CSR and Private key file. However, for Controllers with firmware version 8.0.0 or later, no backup will be generated for the Private key file.

CA signed Server Certificate, a Server Certificate prepared by customer, Client Certificate and CRL need to be backed up by the customers.

## 3. OPC UA Server

### 3.1 Specifications of the OPC UA Server

Following shows specification of OPC UA Server.

| Items                       | Specifications  |
|-----------------------------|---|
| OPC UA Version              | Ver.1.04  |
| Data Encoding               | UA Binary   |
| Security Mode               | Sign&Encrypt<br>Sign<br>None  |
| Security Policy             | None<br>Basic256<br>Basic128Rsa15<br>Basic256Sha256<br>Aes128Sha256RsaOaep<br>Aes256Sha256RsaPss  |
| Client Certificate          | Authentication by Certificate.<br>Possible to register up to 10 files for Client Certificate/CRL. |
| User Token Policy           | UserName and Password<br>Anonymous  |
| User Certificate            | Authentication by UserName and Password.<br>Possible to register up to 10 users.                  |
| Endpoint URL                | opc.tcp://<IP Address>:<PortNo.>  |
| Minimum Publishing Interval | 100 ms  |

### 3.2 Address Space

#### 3.2.1 Introduction

For OPC UA, the unit that represents the information and functions of the target device is called as “node”. Each node has various parameters (also called as Attribute or Property), and each content of parameter shows actual information of target device. Also tying a node and other node with a relationship of “Reference” is how node is structured. The space in which such structured nodes are (conceptually) arranged is called the address space. Address space is a where data used by OPC UA Sever is placed.



- When changing structure of Robot or option (DU, I/O board tec.), the node ID may be changed. After changed the structure, check for the node ID.

### 3.2.2 Covered Companion Spec


This product covers CS (Companion Specification) Robotics Part1 Ver1.00.

Following describes address space of this product and data assigned in each node.


Refer to OPC UA Online Reference for detailed specification of each node.

#### 3.2.2.1 Supporting for OPC UA for Robotics

##### Device Set

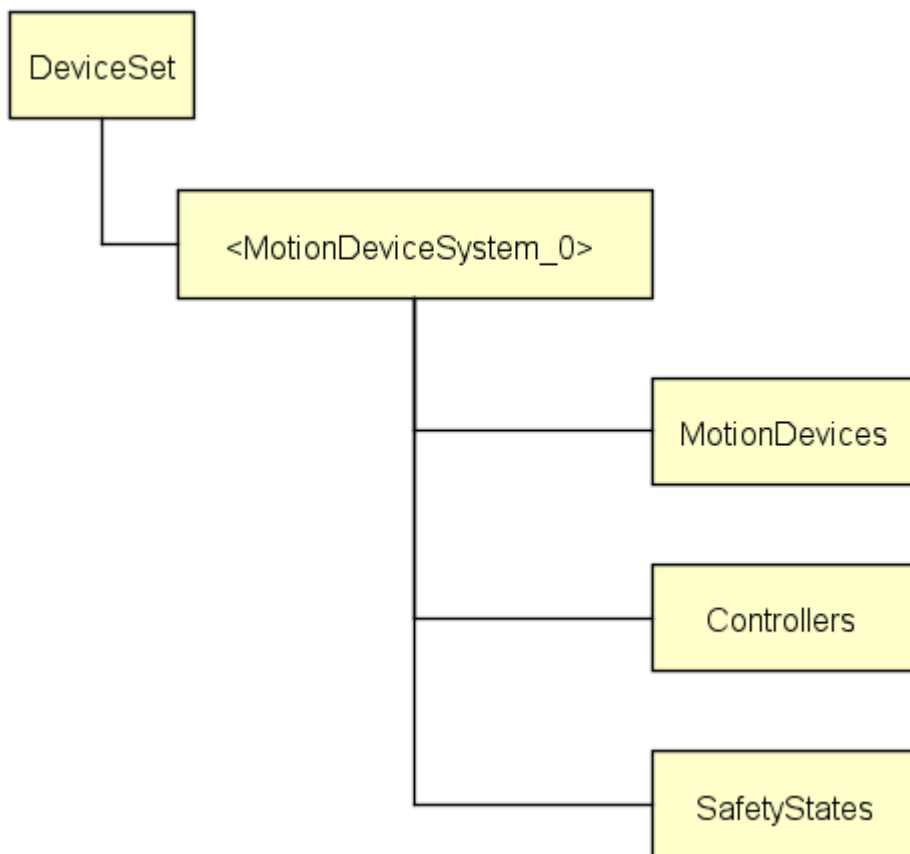


| Names                  | Descriptions  |
|------------------------|---|
| <MotionDeviceSystem_0> | Indicates a Controller installed OPC UA Server and a device that under its control. |
| MotionDevices          | Container of instance of MotionDeviceType.  |
| Controllers            | Container of instance of ControllerType.  |
| SafetyStates           | Container of instance of SafetyStateType.   |

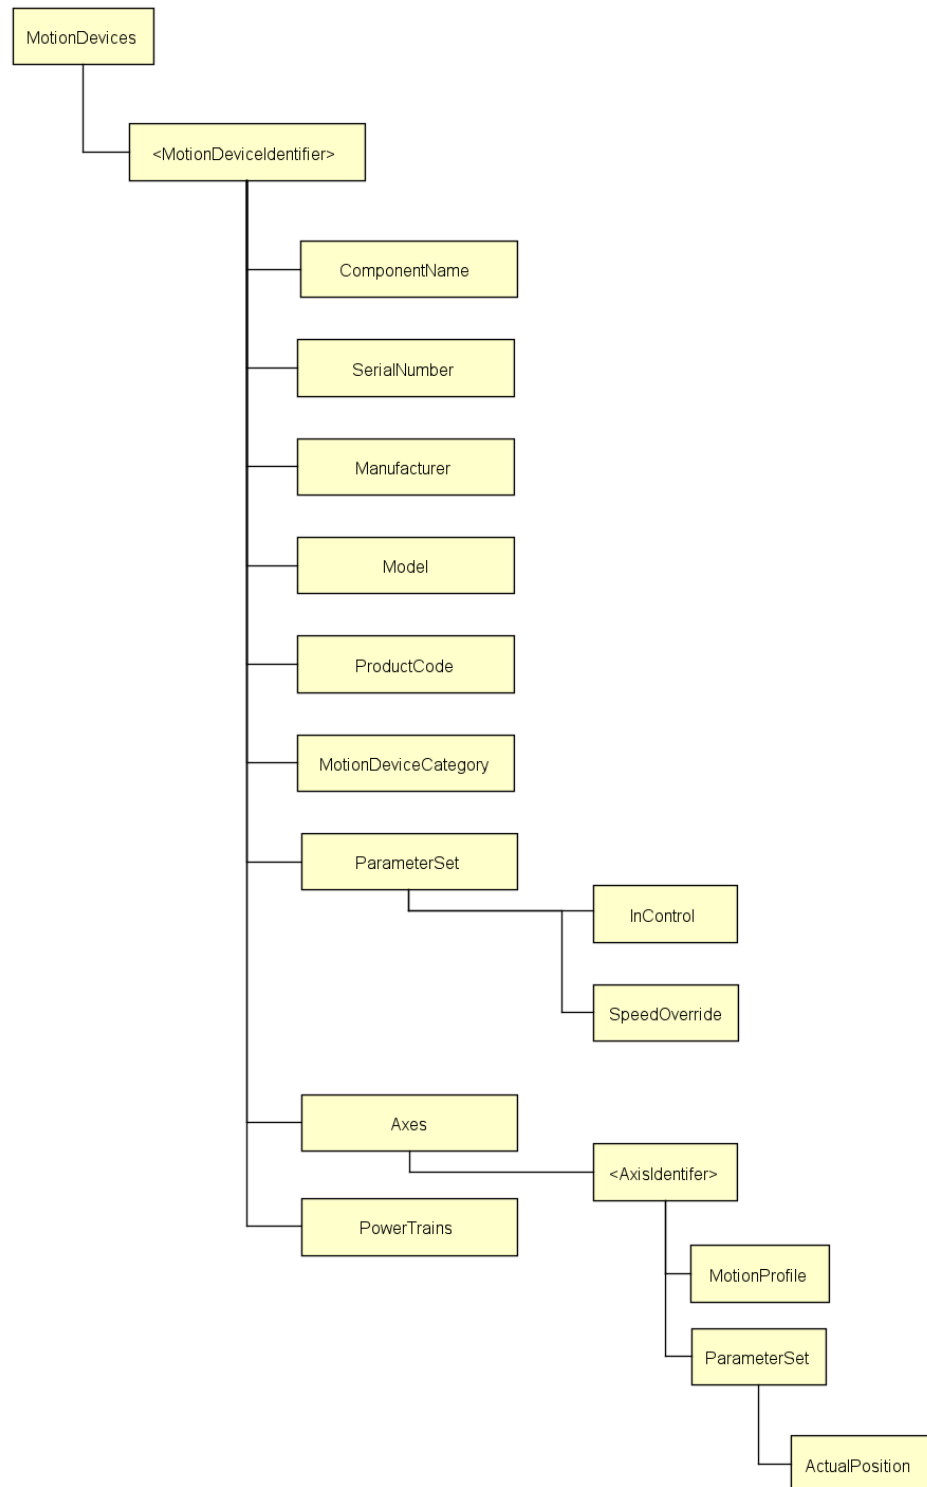**MotionDevices**

### 3. OPC UA Server


| Names                    | Descriptions  |
|--------------------------|---|
| <MotionDeviceIdentifier> | Indicates robot itself.   |
| ComponentName            | Indicates robot name.<br>It is possible to setup in Epson RC+.  |
| SerialNumber             | Serial number of the robot.   |
| Manufacturer             | Manufacturer of the robot.  |
| Model                    | Model name of the robot.  |
| ProductCode              | Model name of the robot.  |
| MotionDeviceCategory     | Robot category based on ISO 8373.<br>(1 for 6-axis robot, 2 for SCARA robot)  |
| InControl                | Indicates the motor is ON or OFF.   |
| SpeedOverride            | Percentage of current speed.<br>A value that can be configured in SpeedFactor command.  |
| Axes                     | Container of instance of AxisType.  |
| <AxisIdentifier>         | Indicates a movable axis.   |
| MotionProfile            | Indicates a kind of axis.<br>Rotation axis is 1, straight axis is 3.<br>For example, J3 is 3 for SCARA robot, and others are 1. |
| ActualPosition           | Current position of axis.   |
| PowerTrains              | Container of instance of PowerTrainType.  |

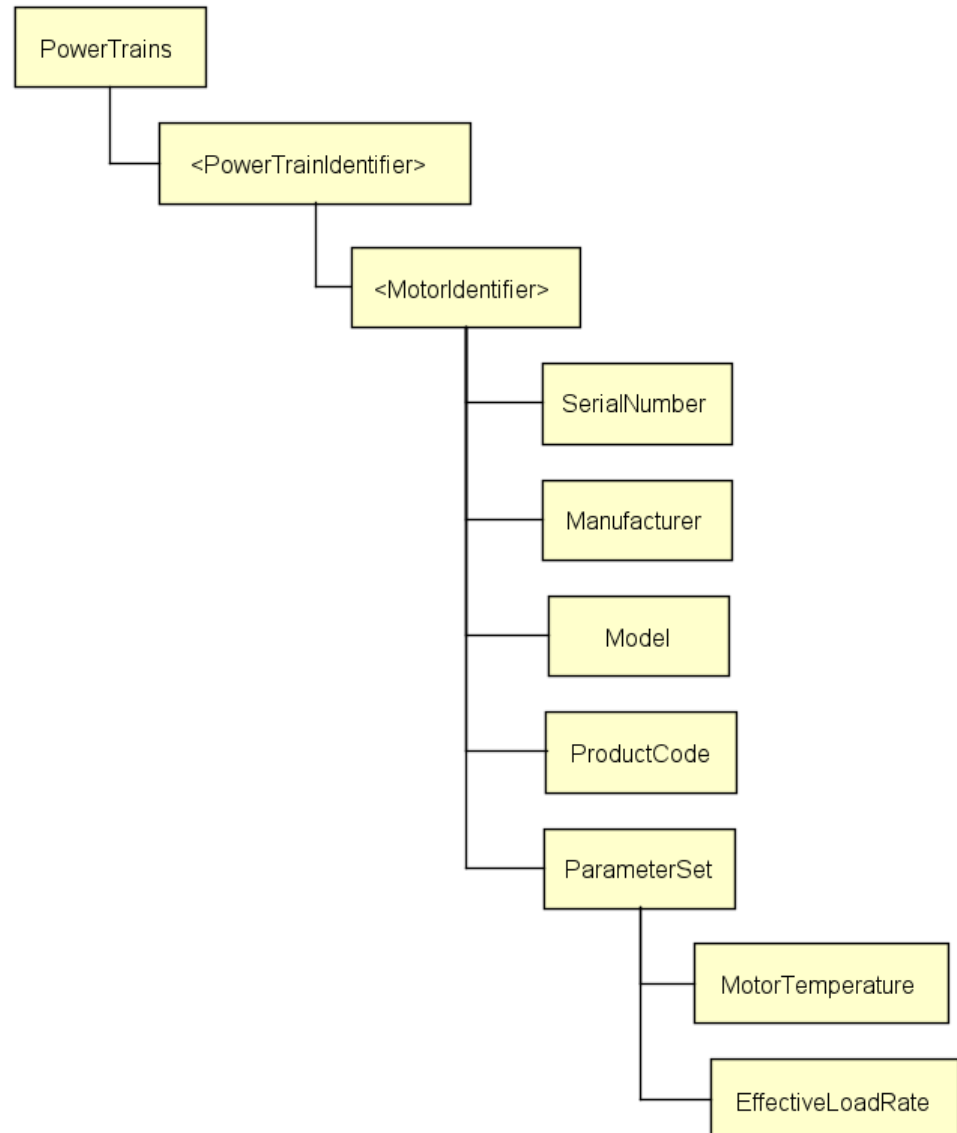


**PowerTrains**

| Names                  | Descriptions   |
|------------------------|--|
| <PowerTrainIdentifier> | Drive mechanism (a pair of motor and gear)                 |
| <MotorIdentifier>      | Motor  |
| SerialNumber           | Not supported (Null)                                       |
| Manufacturer           | Not supported (Null)                                       |
| Model                  | Not supported (Null)                                       |
| ProductCode            | Not supported (Null)                                       |
| MotorTemperature       | Not supported (Null)                                       |
| EffectiveLoadRate      | Loading factor of axis<br>A value OLRate command indicates |


### Controllers

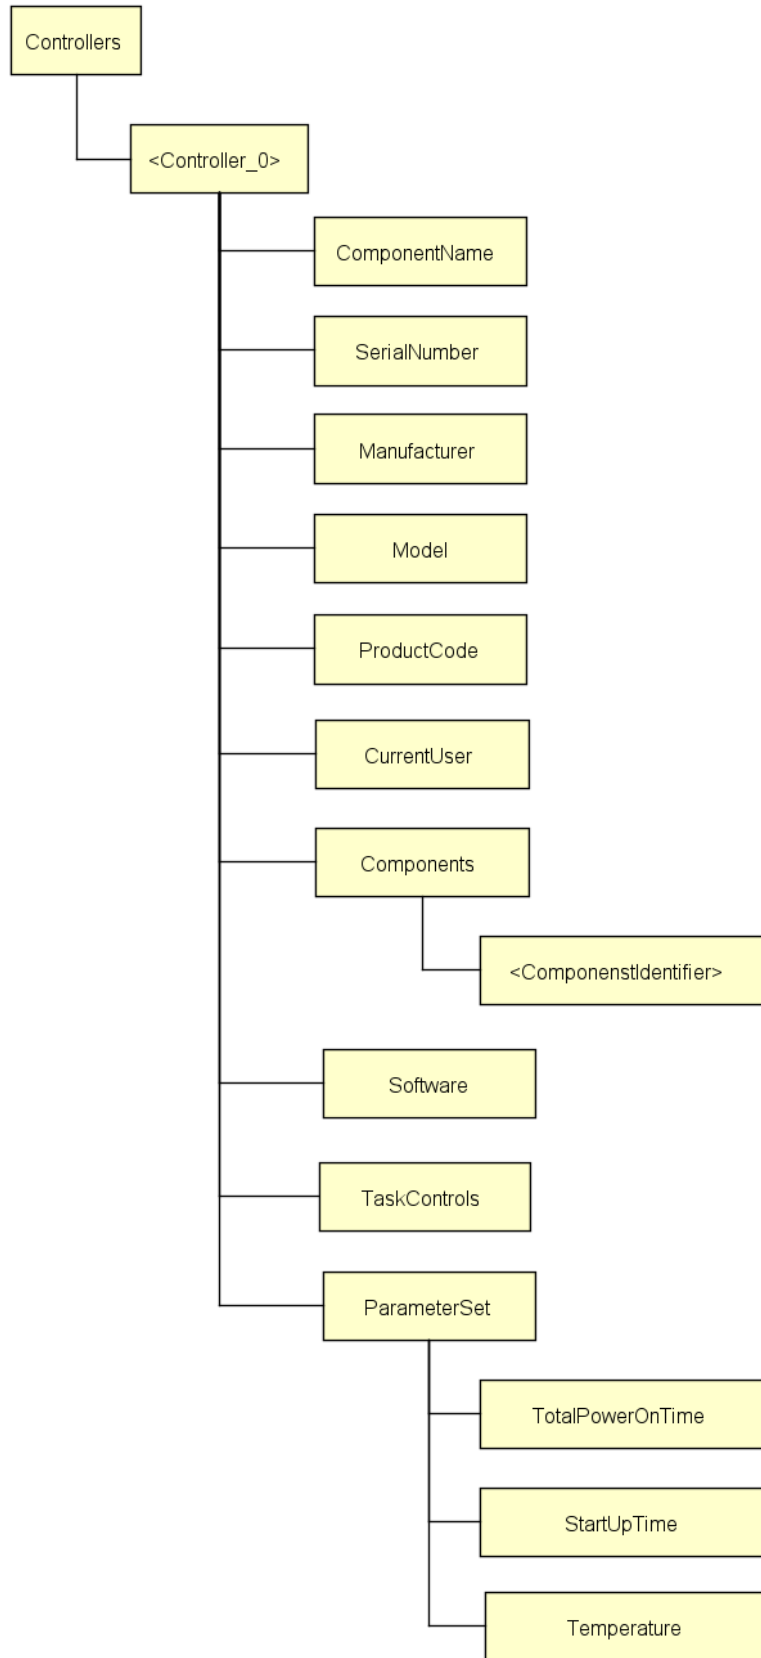

| Names            | Descriptions  |
|------------------|---|
| <Controller_0>   | Controller  |
| ComponentName    | Controller name<br>It can be configured in Epson RC+  |
| SerialNumber     | Serial number of Controller   |
| Manufacturer     | Manufacturer of Controller  |
| Model            | Model name of Controller  |
| ProductCode      | Model name of Controller  |
| CurrentUser      | Not supported (Null)  |
| Components       | Container of component related to Controller  |
| Software         | Container of Software node  |
| Components       | Container of instance of derived ComponentType<br>I/O node describes in 3.2.3.1 <i>Specification of I/O Node</i> will be placed here. |
| Software         | Container of instance of SoftwareType   |
| TotalPowerOnTime | Amount of time the Controller has been turned ON  |
| StartUpTime      | Last date and time the Controller has turned ON   |
| Temperature      | Temperature of inside of the Controller   |

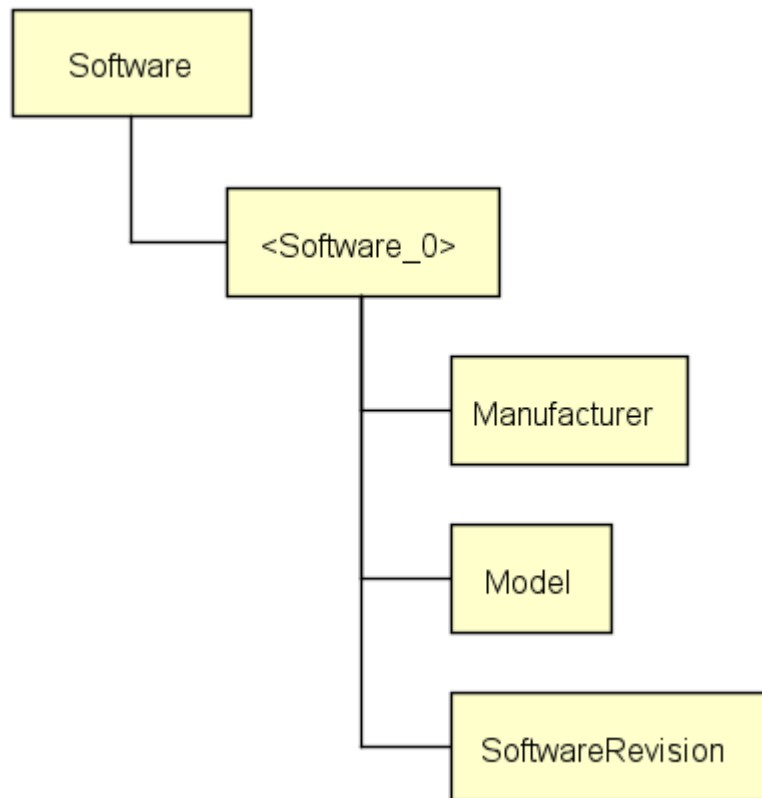
**Software**

| Names            | Descriptions             |
|------------------|--------------------------|
| <Software_0>     | Software                 |
| Manufacturer     | Manufacturer of software |
| Model            | Model name of software   |
| SoftwareRevision | Version of software.     |

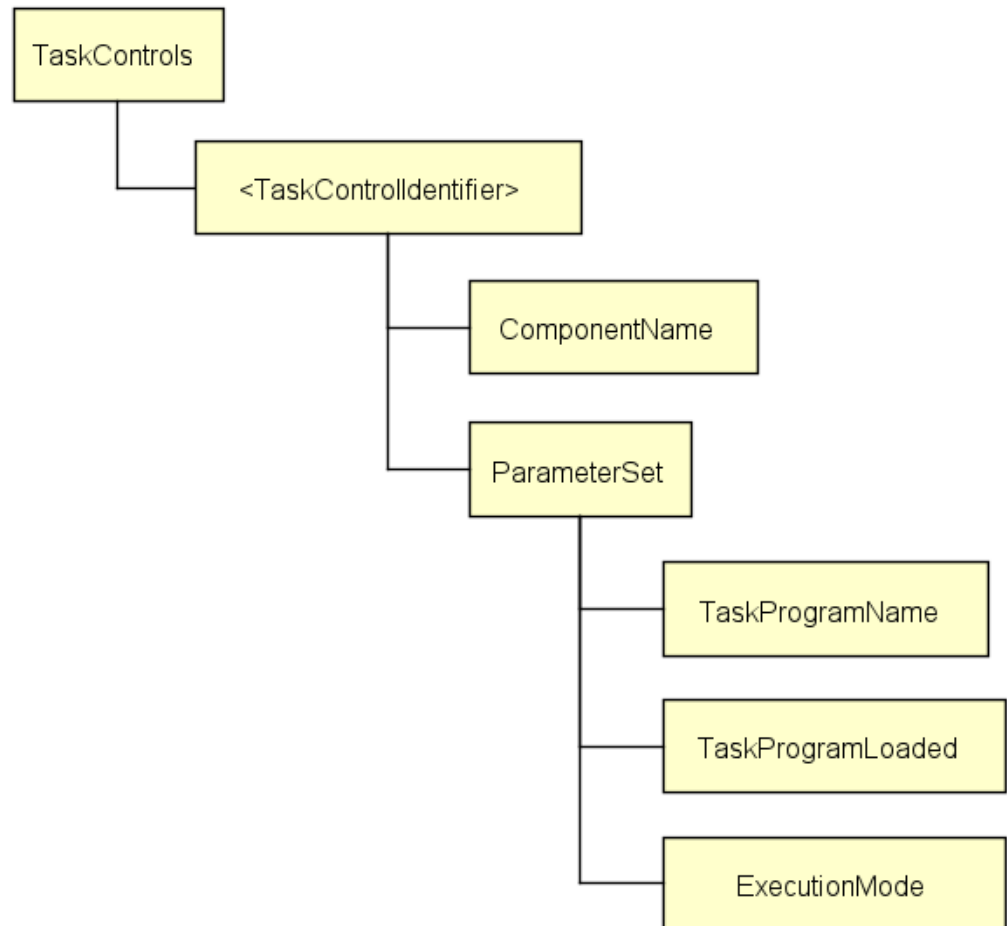**TaskControls**

| Names                   | Descriptions  |
|-------------------------|---|
| <TaskControlIdentifier> | Indicates tasks.<br>Refer to <i>Epson RC+ User's Guide</i> for details of the task.                           |
| ComponentName           | Function name   |
| TaskProgramName         | Program name  |
| TaskProgramLoaded       | True when task is executing (includes wait or pause)  |
| ExecutionMode           | Indicates executing state of the program.<br>Normal execute is CYCLE.<br>Step in, Step over or Walk are STEP. |

**SafetyStates**

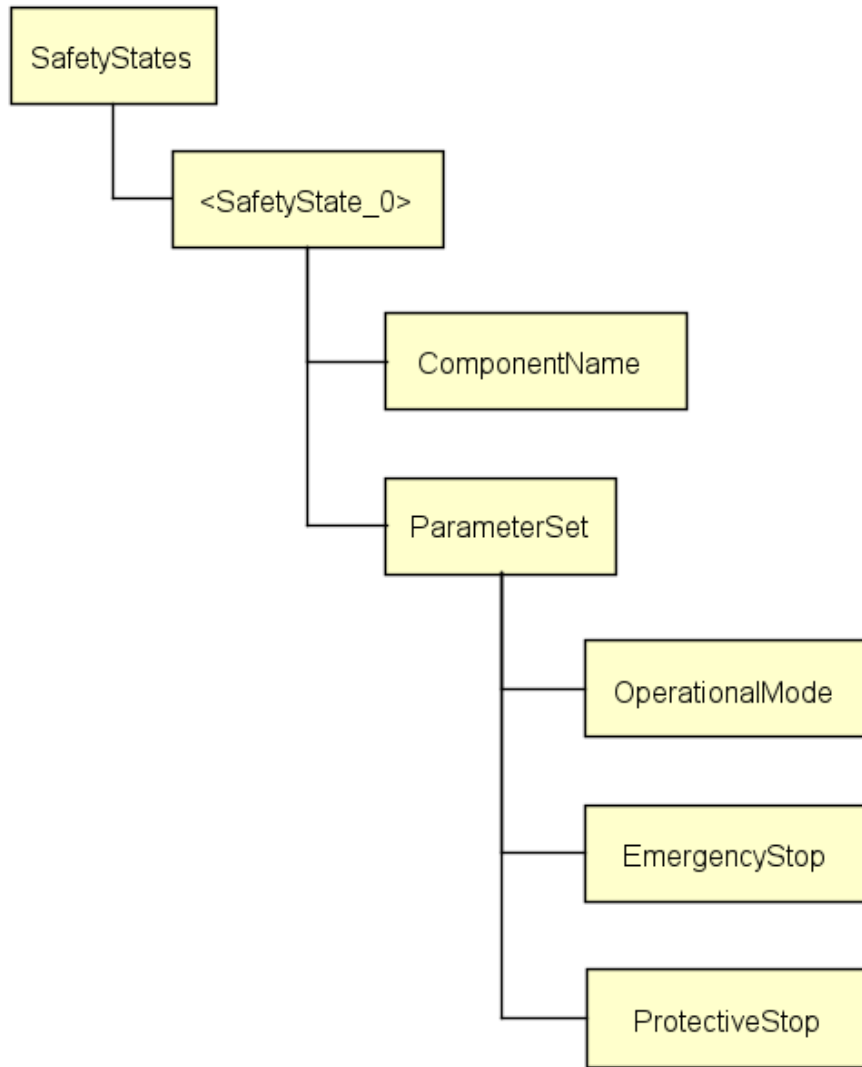

| Names           | Descriptions   |
|-----------------|--|
| SafetyState_0   | Safety state of robot and Controller.  |
| ComponentName   | Target name of safety state.   |
| OperationalMode | Current operation mode.<br>Either of MANUAL_REDUCED_SPEED,<br>MANUAL_HIGH_SPEED and AUTOMATIC. |
| EmergencyStop   | ON/OFF in emergency stop   |
| ProtectiveStop  | ON/OFF in protective stop (Safety door open/close)   |

### 3.2.2.2 Robot Displayed in Address Space

Following Robot are displayed in address space.

- Epson SCARA Robots
- Epson 6 Axis Robots



PG robots and robots other than those listed above are not supported. Unsupported robots are not displayed in the address space even if they are connected to the Controller.

### 3.2.3 Epson Original Node

#### For:

The following chart shows which firmware versions support Epson's original nodes.

| Node                              | Prior to version 8.0.0 | Version 8.0.0 or later |
|-----------------------------------|------------------------|------------------------|
| I/O Node                          | ○                      | ○                      |
| ForceSensorMonitorSystemType Node | ○                      | ○                      |
| SPELProjectType Node              | ○                      | ○                      |
| MotionLogSystemType Node          | ×                      | ○                      |
| RobotNumber Node                  | ×                      | ○                      |
| RobotStatus Node                  | ×                      | ○                      |
| ConsumableStatus Node             | ×                      | ○                      |
| AdditionalInfo Node               | ×                      | ○                      |
| AdditionalInfo Node               | ×                      | ○                      |
| ControllerStatus                  | ×                      | ○                      |

### 3.2.3.1 Specification of I/O Node

#### I/O Port


Following shows supported I/O port.

All I/O including Out port are Read-only in this system.

| I/O Type            | Prior to 8.0.0 | 8.0.0 or later |
|---------------------|----------------|----------------|
| Standard I/O        | ○              | ○              |
| Extended I/O        | ○              | ○              |
| Fieldbus Slave I/O  | ×              | ○              |
| Fieldbus Master I/O | ×              | ○              |
| Memory I/O          | ×              | ○              |

**Relation of CS Robotics Part1**

I/O node is placed as the one of <ComponentIdentifier> under the Components node on address space of CS Robotics Part1 Ver.1.00.

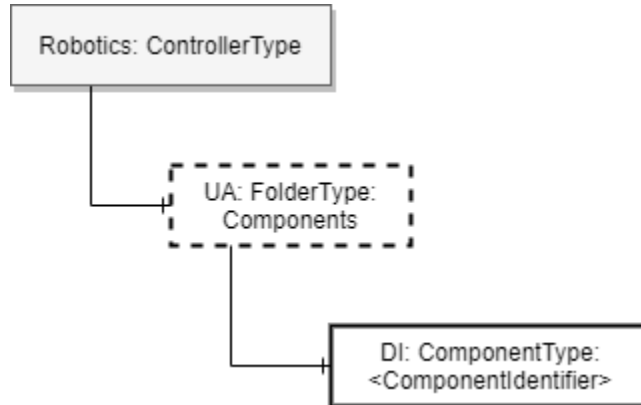


**IOSystemType ObjectType Definition**

Overview

IOSystemType indicates I/O system installed in the Controller.

Instancing this type for each type of I/O system installed in the Controller.

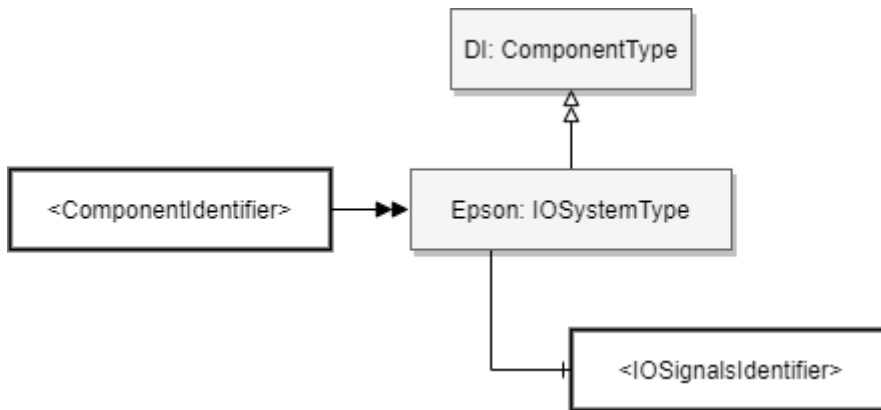



### ObjectType Definition

Following shows definition of IOSystemType.

| Attribute   | Value        |                       |          |                      |                      |
|---|--------------|-----------------------|----------|----------------------|----------------------|
| BrowseName  | IOSystemType |                       |          |                      |                      |
| IsAbstract  | FALSE        |                       |          |                      |                      |
| References  | Node Class   | BrowseName            | DataType | TypeDefinition       | Modelling Rule       |
| Subtype of the ComponentType defined in OPC Unified Architecture for Devices (DI) |              |                       |          |                      |                      |
| HasComponent  | Object       | <IOSignalsIdentifier> | -        | Epson: IOSignalsType | MandatoryPlaceholder |

### ObjectType Description


Object <IOSignalsIdentifier>

<IOSignalsIdentifier> indicates I/O system is including more than one I/O port and indicated by IOSignalsType instance.

### IOSignalsType ObjectType Definition

#### Overview

IOSignalsType indicates I/O port including multiple I/O signals, and it functions as a container of Variable node indicating I/O signals. Instancing this Type for each type of I/O signal such as In/Out.

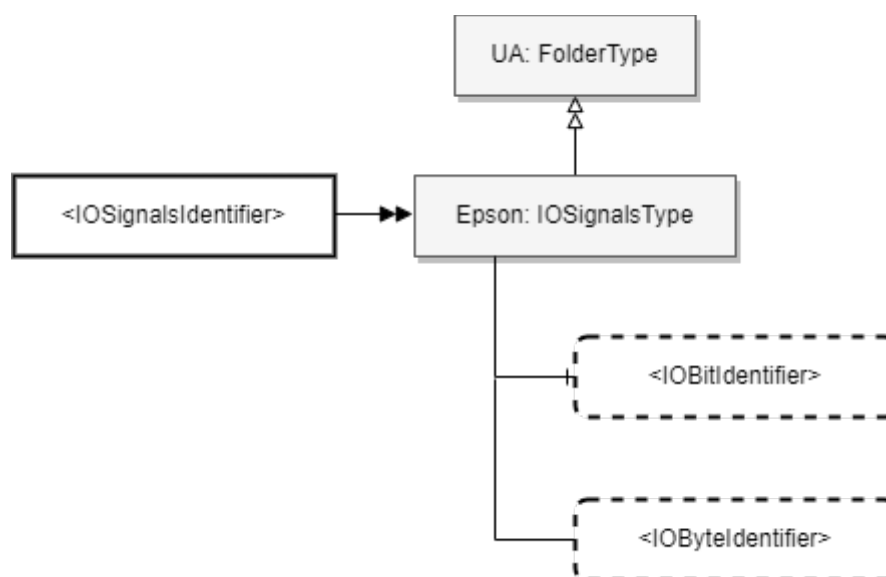

ObjectType Definition

Following shows definition of IOSignalsType.

| Attribute   | Value         |                    |           |                      |                     |
|---|---------------|--------------------|-----------|----------------------|---------------------|
| BrowseName  | IOSignalsType |                    |           |                      |                     |
| IsAbstract  | FALSE         |                    |           |                      |                     |
| References  | Node Class    | BrowseName         | Data Type | Type Definition      | Modelling Rule      |
| Subtype of the FolderType defined in OPC Unified Architecture |               |                    |           |                      |                     |
| HasComponent  | Variable      | <IOBitIdentifier>  | Boolean   | BaseDataVariableType | OptionalPlaceholder |
| HasComponent  | Variable      | <IOByteIdentifier> | Byte      | BaseDataVariableType | OptionalPlaceholder |

ObjectType Description

Variable <IOBitIdentifier>


<IOBitIdentifier> indicates I/O port is including multiple I/O signals, and there are this Variable node exists for each bit of the I/O signal. Value=TRUE means I/O signal is ON, FALSE means I/O signal is OFF.

Variable<IOByteIdentifier>

<IOByteIdentifier>, like <IOBitIdentifier>, indicates that the I/O port is including multiple I/O signals. This variable node exists for every byte of the I/O signal. When the Value is converted into a binary bit string, the port of the number(0~) of the bit that becomes 1 means ON in the I/O signal, and the port of the number of the bit that becomes 0 means OFF in the I/O signal.

## Examples of Address Space

Following the definitions of the nodes described above, examples of address spaces whose nodes have been instantiated are as follows:

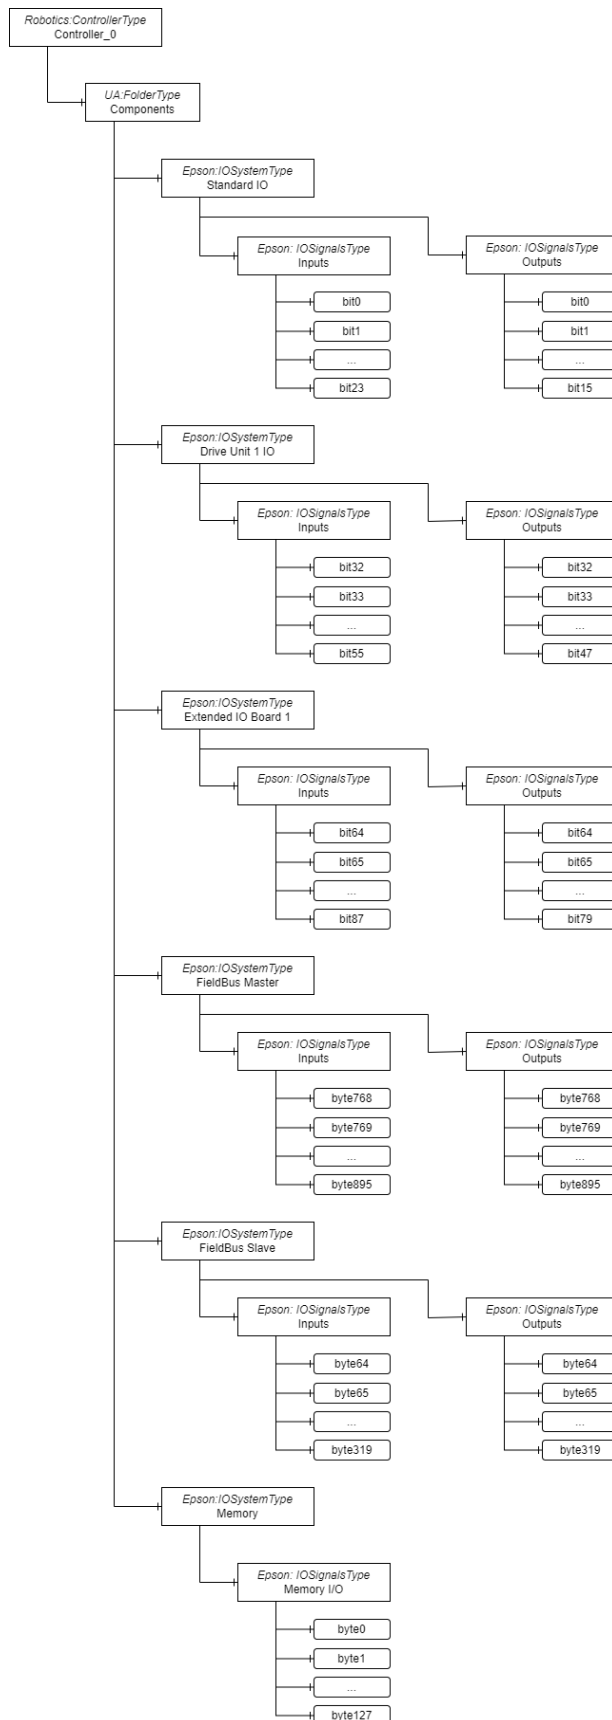


3.2.3.2 Specifications of Force Sensor Node

This section describes the specifications of the force sensor node. For details on usage, see “4.1 Acquisition of Sensor Data”.

**ForceSensorMonitorSystemType ObjectType Definition**

Overview

ForceSensorMonitorSystemType indicates the monitoring system for the force sensor data in the Controller. Instantiate this type for each force sensor monitoring system installed in the Controller.

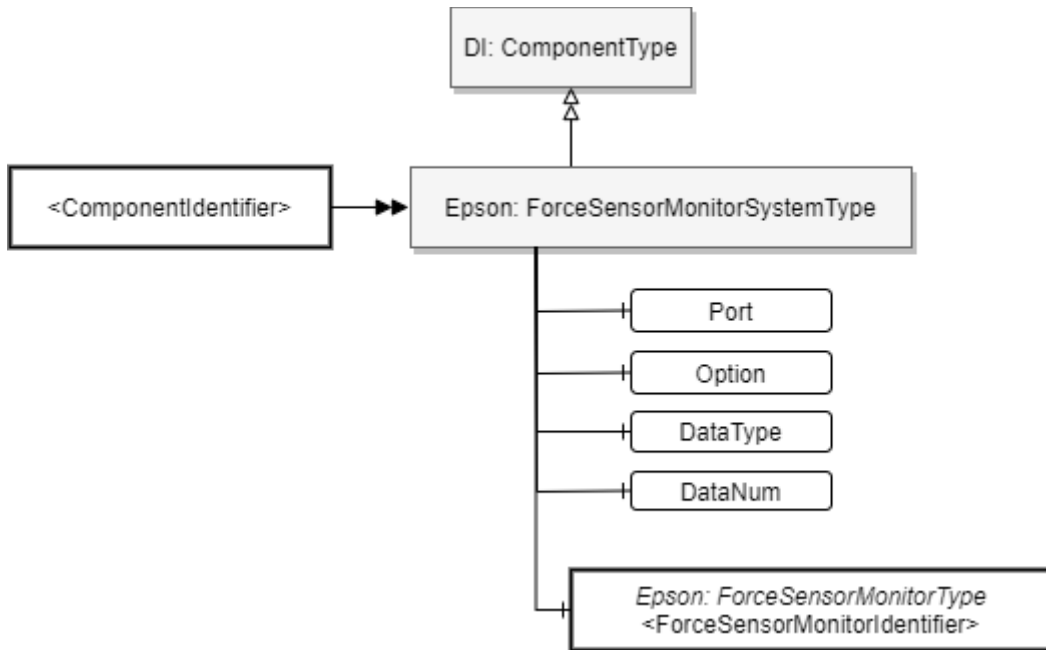

ObjectType Definition

ForceSensorMonitorSystemType is defined below.

| Attribute   | Value                        |                                 |           |                               |                       |
|---|------------------------------|---------------------------------|-----------|-------------------------------|-----------------------|
| BrowseName  | ForceSensorMonitorSystemType |                                 |           |                               |                       |
| IsAbstract  | FALSE                        |                                 |           |                               |                       |
| References  | Node Class                   | BrowseName                      | Data Type | TypeDefinition                | ModellingRule         |
| Subtype of the ComponentType defined in OPC Unified Architecture for Devices (DI) |                              |                                 |           |                               |                       |
| HasComponent  | Variable                     | Port                            | Boolean   | BaseDataVariableType          | Mandatory             |
| HasComponent  | Variable                     | Option                          | String    | BaseDataVariableType          | Mandatory             |
| HasComponent  | Variable                     | DataType                        | UInt16    | BaseDataVariableType          | Mandatory             |
| HasComponent  | Variable                     | DataNum                         | UInt16    | BaseDataVariableType          | Mandatory             |
| HasComponent  | Object                       | <ForceSensorMonitor Identifier> |           | Epson: ForceSensorMonitorType | MandatoryPlace holder |

## ObjectType Description

### Variable Port

This is a configuration node for switching the data output destination. It determines whether data will be output to OPC UA or to an existing output destination (Epson RC+).

The values are described in the following table.

| Value | Description                |
|-------|----------------------------|
| True  | Outputs data to OPC UA.    |
| False | Outputs data to Epson RC+. |

#### NOTE



Data is output to either Epson RC+ or OPC UA.

### Variable Option

This node is not normally used. Do not change the value.

### Variable DataType

DataType is a configuration node for selecting the data to be acquired. The relationship between the value and the data to be acquired is shown in the following table.

| Value | Data to be acquired  |
|-------|--|
| 0     | ElapsedTime, Force, CurPos, RefPos, Diff, TCPSpeed, CurAngle, OLRate, FCon, StepID, SeqNo, ObjNo, Time |
| 1     | ElapsedTime, CurPos, TCPSpeed, CurAngle, OLRate, StepID, SeqNo, ObjNo, Time                            |
| 2     | ElapsedTime, Force, CurPos, StepID, SeqNo, ObjNo   |
| 3     | ElapsedTime, CurPos, StepID, SeqNo, ObjNo  |

For details on the data to be acquired, see *4.1.3 Data Formatting*.

### Variable DataNum

The DataNum node is used to specify the maximum number of data items to be acquired from the server at one time.

| Value | Description  |
|-------|--|
| 0     | Does not set maximum number of data items (Determined by server) |
| 1~    | Sets maximum number of data items                                |

### Object <ForceSensorMonitorIdentifier>

<ForceSensorMonitorIdentifier> indicates that the force sensor monitoring system has one or more monitoring channels. It is expressed by an instance of ForceSensorMonitorType.




When a sensor data acquisition instruction (RecordStart) is executed, data and status are output to a node under ForceSensorMonitor\_1. If two cases are executed simultaneously, the data and status of the second case will be output to a node under ForceSensorMonitor\_2.

### ForceSensorMonitorType ObjectType Definition

#### Overview

ForceSensorMonitorType indicates the monitor data generated by the ForceSensorMonitorSystemType instance in 3.2.3.2. This type is instantiated for each monitor data item (each monitor channel) contained in the ForceSensorMonitorSystemType instance.

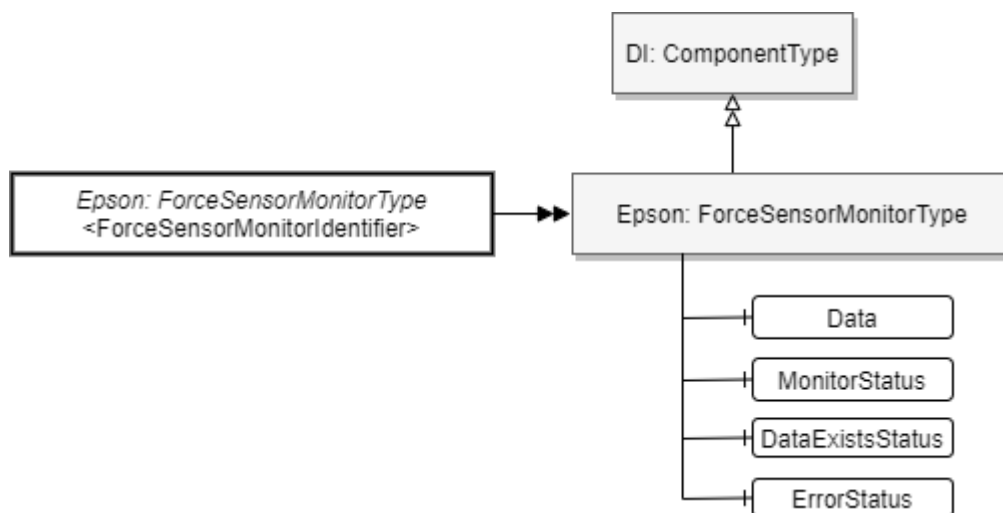

### ObjectType Definition

ForceSensorMonitorType is defined below.

| Attribute   | Value                  |                  |            |                      |                |
|---|------------------------|------------------|------------|----------------------|----------------|
| BrowseName  | ForceSensorMonitorType |                  |            |                      |                |
| IsAbstract  | FALSE                  |                  |            |                      |                |
| References  | Node Class             | BrowseName       | Data Type  | Type Definition      | Modelling Rule |
| Subtype of the ComponentType defined in OPC Unified Architecture for Devices (DI) |                        |                  |            |                      |                |
| HasComponent  | Variable               | Data             | ByteString | BaseDataVariableType | Mandatory      |
| HasComponent  | Variable               | MonitorStatus    | String     | BaseDataVariableType | Mandatory      |
| HasComponent  | Variable               | DataExistsStatus | String     | BaseDataVariableType | Mandatory      |
| HasComponent  | Variable               | ErrorStatus      | String     | BaseDataVariableType | Mandatory      |

### ObjectType Description

#### Variable Data

This is the node to which the data will be output. When this node is read, data can be acquired by the force sensor. For data formatting, see “4.1.3 Data Formatting”.

After data acquisition has successfully started by SPEL command, the data held inside the Controller at that time can be read by acquiring this node.

If there is no data held inside the Controller, Null is returned when the node is read. The types of data that can be acquired include header, data part, and footer, all of which can be acquired from this node. Only one type of data can be acquired in a single read: header, data part, or footer. Headers and data parts, data parts and footers, and such are not mixed.

**Variable MonitorStatus**

Indicates the execution status of sensor data acquisition. The values are described below.

| Value | Description  |
|-------|--|
| Stop  | Indicates that sensor data acquisition is stopped  |
| Run   | Indicates that sensor data acquisition is in progress<br>Executing the RecordStart command results in this value |

**Variable DataExistsStatus**

Indicates whether data can be acquired from the Data node. The data acquisition timing can be determined from this value. The values are described below.

| Value | Description   |
|-------|---|
| Empty | Indicates that there is no data that can be acquired from the Data node |
| Ready | Indicates that there is data that can be acquired from the Data node    |

**Variable ErrorStatus**


Indicates the occurrence of errors and warnings during data acquisition. From this value, you can determine how to handle the data. The values are described below.

| Value   | Description  |
|---------|--|
| None    | Indicates that there is no abnormality   |
| Warning | Indicates that data overwriting has occurred<br>Data acquisition will continue |
| Error   | Indicates that data acquisition has been interrupted                           |



### Example of address space

The following is an example of an instance of address space when the force sensor data acquisition function is available.

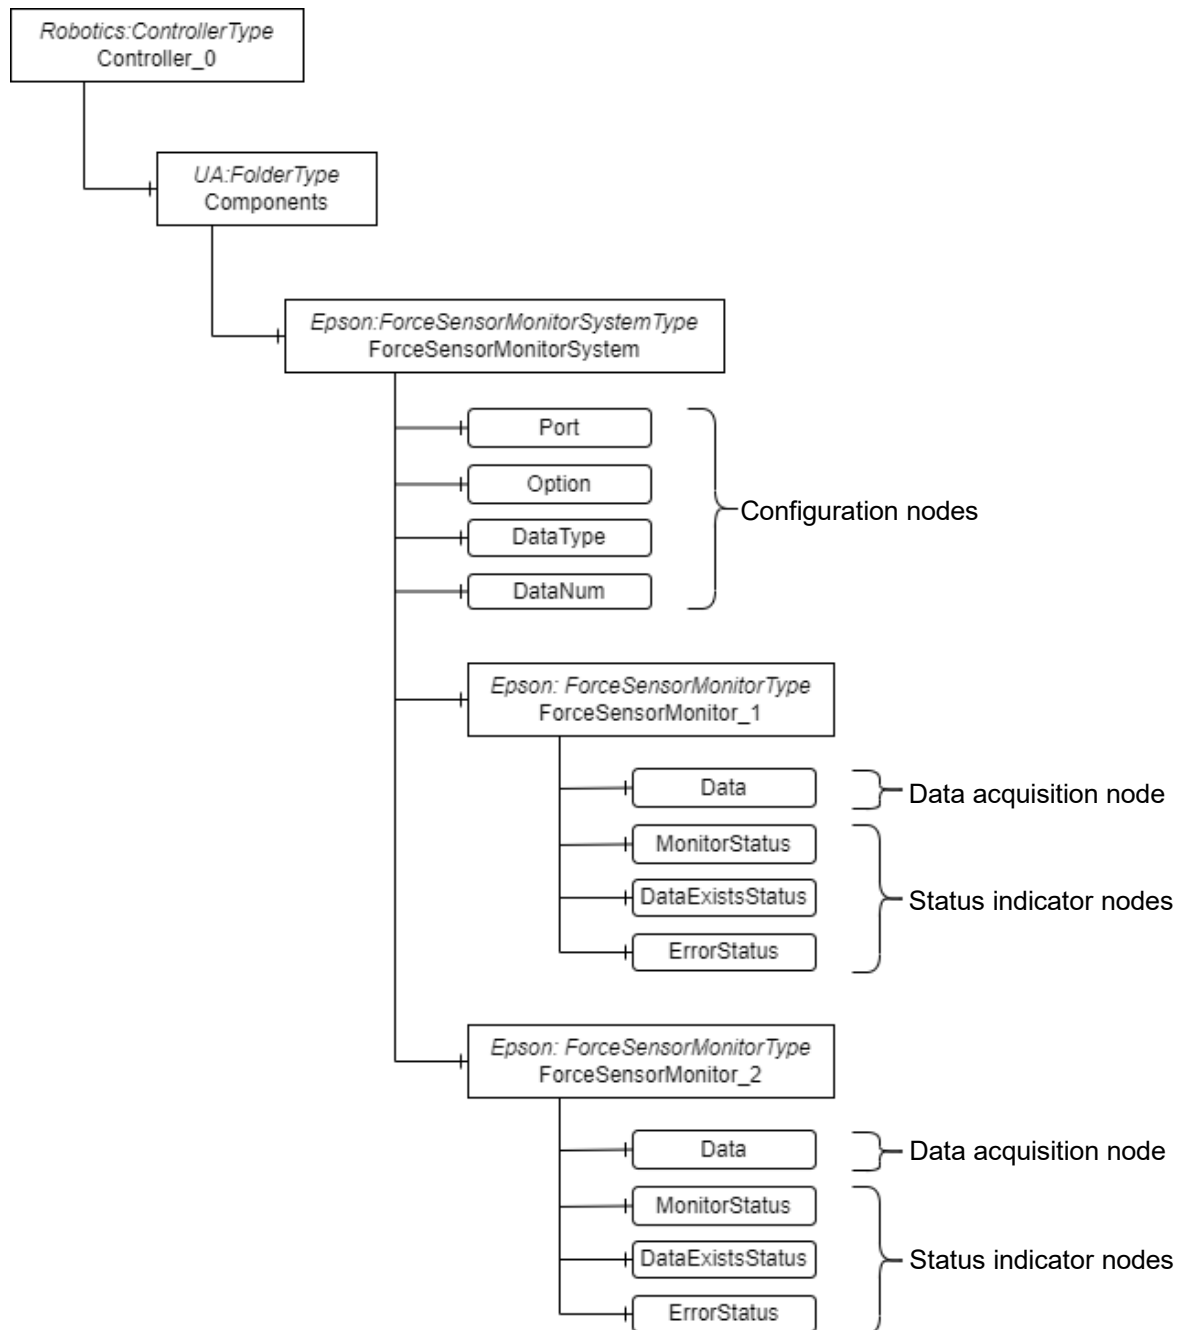


3.2.3.3 Specifications of SPEL Project Node

**SpelProjectType ObjectType Definition**

**Overview**

SpelProjectType indicates the SPEL project loaded in the Controller.

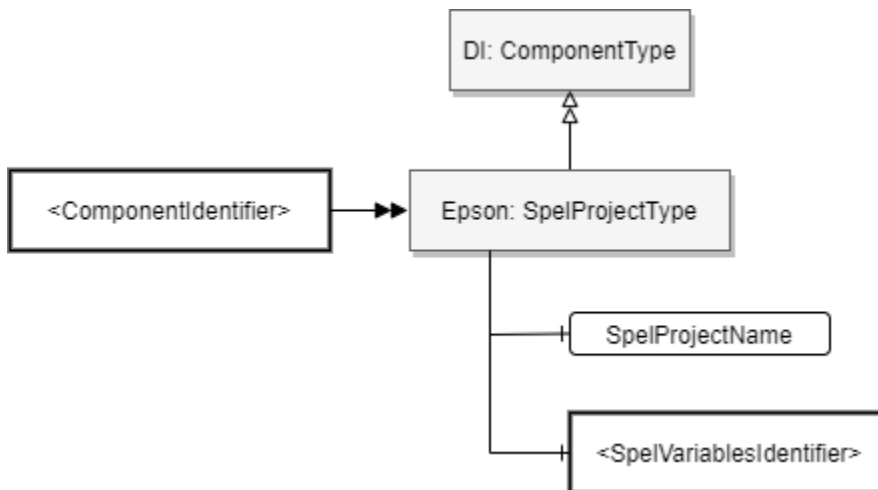

**ObjectType Definition**

SpelProjectType is defined below.

| Attribute   | Value           |                           |          |                        |                |
|---|-----------------|---------------------------|----------|------------------------|----------------|
| BrowseName  | SpelProjectType |                           |          |                        |                |
| IsAbstract  | False           |                           |          |                        |                |
| References  | Node Class      | BrowseName                | DataType | TypeDefinition         | Modelling Rule |
| Subtype of the ComponentType defined in OPC Unified Architecture for Devices (DI) |                 |                           |          |                        |                |
| HasComponent  | Variable        | SpelProjectName           | String   | BaseDataVariableType   | Mandatory      |
| HasComponent  | Variable        | <SpelVariablesIdentifier> |          | Epson:SpelVariableType | Mandatory      |

**ObjectType Description**

- Variable SpelProjectName

Indicates the name of the SPEL project loaded in the Controller.


- Object <SpelVariablesIdentifier>

<SpelVariablesIdentifier> indicates the set of variables included in the SPEL project and is expressed by a SpelVariableType instance.

## SpelVariablesType

### Overview

SpelVariablesType indicates a set of multiple SPEL variables and serves as a container to group together Variable nodes representing SPEL variables. Only backup variables are subject to instantiation with this function.

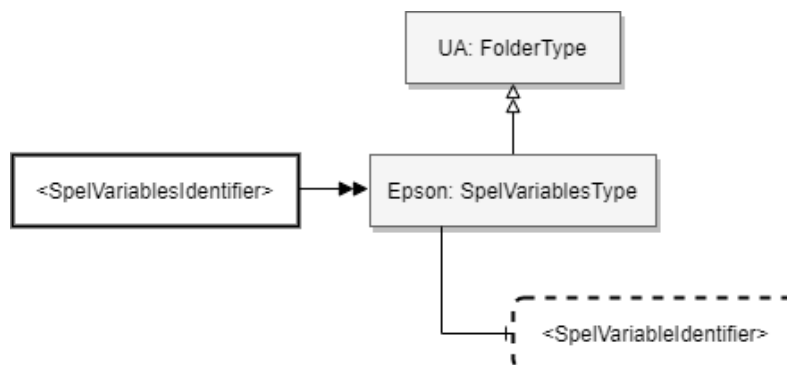

### ObjectType Definition

SpelVariableType is defined below.

| Attribute   | Value            |                           |           |                      |                     |
|---|------------------|---------------------------|-----------|----------------------|---------------------|
| BrowseName  | SpelVariableType |                           |           |                      |                     |
| IsAbstract  | False            |                           |           |                      |                     |
| References  | Node Class       | BrowseName                | Data Type | Type Definition      | Modelling Rule      |
| Subtype of the ComponentType defined in OPC Unified Architecture for Devices (DI) |                  |                           |           |                      |                     |
| HasComponent  | Variable         | <SpelVariablesIdentifier> | Boolean   | BaseDataVariableType | OptionalPlaceholder |
| HasComponent  | Variable         | <SpelVariablesIdentifier> | SByte     | BaseDataVariableType | OptionalPlaceholder |
| HasComponent  | Variable         | <SpelVariablesIdentifier> | Int16     | BaseDataVariableType | OptionalPlaceholder |
| HasComponent  | Variable         | <SpelVariablesIdentifier> | Int32     | BaseDataVariableType | OptionalPlaceholder |
| HasComponent  | Variable         | <SpelVariablesIdentifier> | Int64     | BaseDataVariableType | OptionalPlaceholder |
| HasComponent  | Variable         | <SpelVariablesIdentifier> | Byte      | BaseDataVariableType | OptionalPlaceholder |
| HasComponent  | Variable         | <SpelVariablesIdentifier> | UInt16    | BaseDataVariableType | OptionalPlaceholder |
| HasComponent  | Variable         | <SpelVariablesIdentifier> | UInt32    | BaseDataVariableType | OptionalPlaceholder |
| HasComponent  | Variable         | <SpelVariablesIdentifier> | UInt64    | BaseDataVariableType | OptionalPlaceholder |
| HasComponent  | Variable         | <SpelVariablesIdentifier> | Float     | BaseDataVariableType | OptionalPlaceholder |
| HasComponent  | Variable         | <SpelVariablesIdentifier> | Double    | BaseDataVariableType | OptionalPlaceholder |
| HasComponent  | Variable         | <SpelVariablesIdentifier> | String    | BaseDataVariableType | OptionalPlaceholder |

**ObjectType Description**

- Variable <SpelVariablesIdentifier>

This node indicates a SPEL variable. One node represents one SPEL variable.


This node is read only.

The correspondence between type of SPEL variable and OPC UA DataType is shown in the table below.

| SPEL variable type | OPC UA Data Type |
|--------------------|------------------|
| Boolean            | Boolean          |
| Byte               | SByte            |
| Short, Integer     | Int16            |
| Long, Int32        | Int32            |
| Int64              | Int64            |
| UByte              | Byte             |
| UShort             | UInt16           |
| UInt32             | UInt32           |
| UInt64             | UInt64           |
| Real               | Float            |
| Double             | Double           |
| String             | String           |

### Example of address space

Here is an example of an instance of an address space related to the SPEL variable read function.

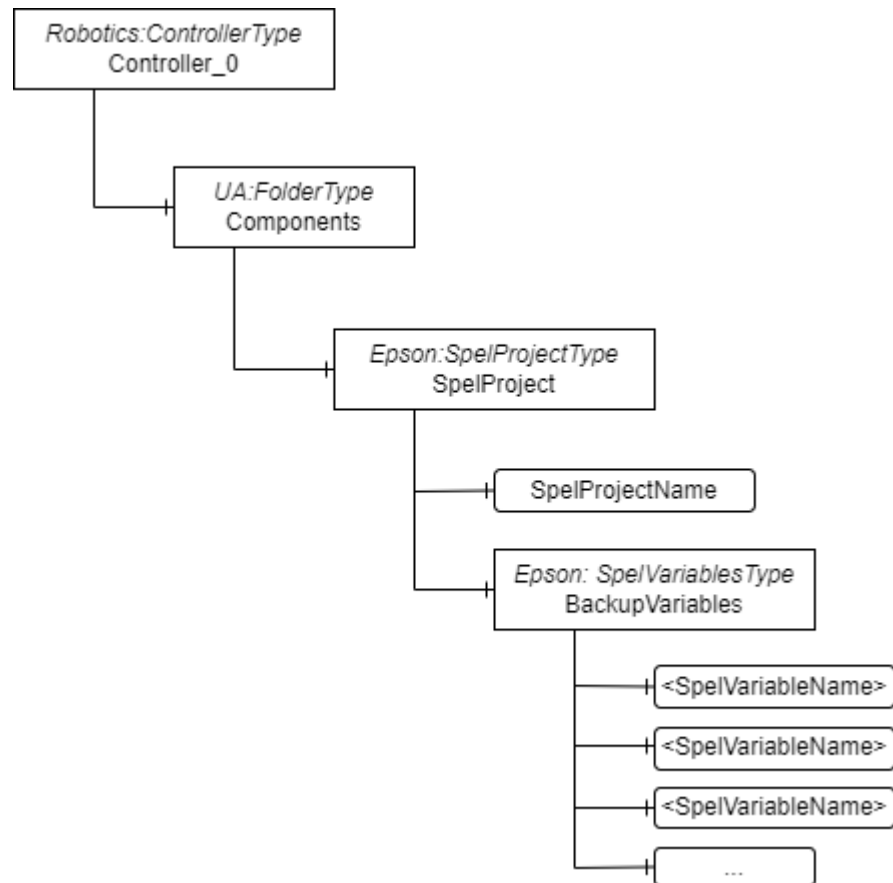

**3.2.3.4 Specifications of the MotionLogSystemType Node**


This section describes the specifications of the MotionLogSystemType node. For details on usage, see "4.3 Acquisition of Sensor Data".

This node is supported by firmware version 8.0.0 and later.

**MotionLogSystemType ObjectType Definition**

Overview

MotionLogSystemType refers to a monitoring system loaded in the Controller which monitors a robot's motion log data.

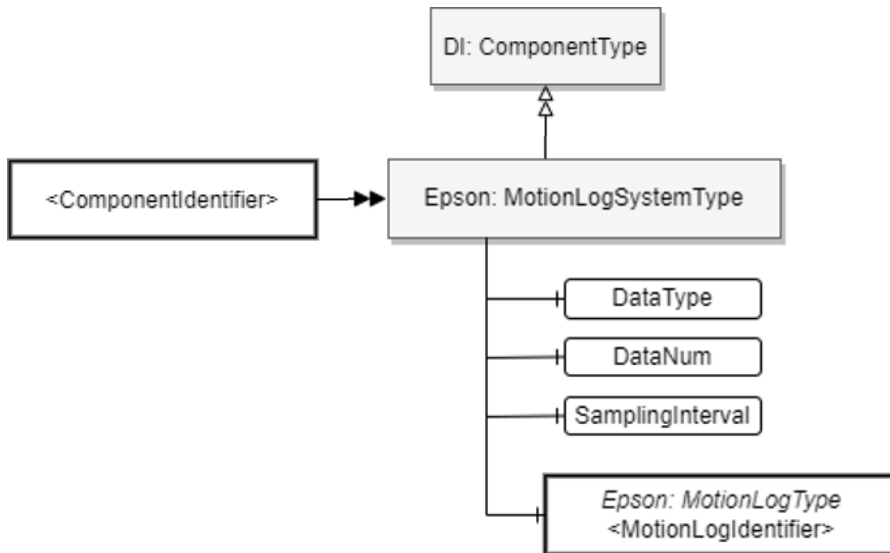

**ObjectType Definition**

MotionLogSystemType is defined below.

| Attribute   | Value               |                       |          |                      |                       |
|---|---------------------|-----------------------|----------|----------------------|-----------------------|
| BrowseName  | MotionLogSystemType |                       |          |                      |                       |
| IsAbstract  | FALSE               |                       |          |                      |                       |
| References  | Node Class          | BrowseName            | DataType | TypeDefinition       | ModelingRule          |
| Subtype of the ComponentType defined in OPC Unified Architecture for Devices (DI) |                     |                       |          |                      |                       |
| HasComponent  | Variable            | DataType              | UInt16   | BaseDataVariableType | Mandatory             |
| HasComponent  | Variable            | DataNum               | UInt16   | BaseDataVariableType | Mandatory             |
| HasComponent  | Variable            | SamplingInterval      | UInt16   | BaseDataVariableType | Mandatory             |
| HasComponent  | Object              | <MotionLogIdentifier> |          | Epson: MotionLogType | MandatoryPlace holder |

## ObjectType Description

### Variable DataType

This is a configuration node for switching the dataset's type. The only value this can be set to is "0".

### Variable DataNum

The DataNum node is used to specify the maximum number of data items to be acquired from the server at one time. The allowable values are described below.

| Value  | Description  |
|--------|--|
| 0      | Does not set maximum number of data items (Determined by server) |
| 1~ 200 | Sets the maximum number of data items                            |



We recommend setting this to "0" unless there is a special reason to do otherwise. If you do not set DataNum to "0" or a sufficiently high value, it may not be possible to acquire continuous Motion Log data.

### Variable SamplingInterval

This node is used to set the sampling interval for data acquired from the server. The minimum value this can be set to is "0". When the sampling interval value is set to a nonzero value "n", you can acquire data at a sampling interval that is  $2^n$  times that of when the value is zero. The allowable values are described below.

| Value | Description                      |
|-------|----------------------------------|
| 0~4   | Sets the data sampling interval. |



The smaller you set the SamplingInterval, the higher the sampling rate you can acquire. However, depending on the operational environment of the Controller, you may be unable to acquire continuous Motion Log data at the designated SamplingInterval. In such cases, set a larger SamplingInterval to improve the performance.

### Object <MotionLogIdentifier>

<MotionLogIdentifier> indicates the channel by which data is acquired from the MotionLog function and expresses it with a MotionLogType instance.




If no data exists, the TIMESTAMP (Refer to 4.3.3 Data Format) will become "0". Because of this, the TIMESTAMP interval may not match the value set for the SamplingInterval.

### MotionLogType ObjectType Definition

#### Overview

MotionLogType indicates the data generated by a MotionLogSystemType instance (refer to Section 3.2.3.4). This Type is instantiated for each monitor channel contained in the MotionLogSystemType instance.

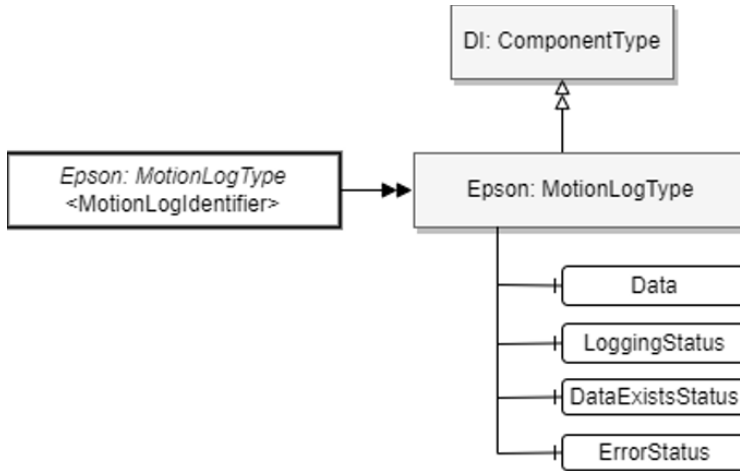

#### ObjectType Definition

MotionLogType is defined below.

| Attribute   | Value         |                  |            |                      |               |
|---|---------------|------------------|------------|----------------------|---------------|
| BrowseName  | MotionLogType |                  |            |                      |               |
| IsAbstract  | FALSE         |                  |            |                      |               |
| References  | Node Class    | BrowseName       | DataType   | TypeDefinition       | Modeling Rule |
| Subtype of the ComponentType defined in OPC Unified Architecture for Devices (DI) |               |                  |            |                      |               |
| HasComponent  | Variable      | Data             | ByteString | BaseDataVariableType | Mandatory     |
| HasComponent  | Variable      | LoggingStatus    | String     | BaseDataVariableType | Mandatory     |
| HasComponent  | Variable      | DataExistsStatus | String     | BaseDataVariableType | Mandatory     |
| HasComponent  | Variable      | ErrorStatus      | String     | BaseDataVariableType | Mandatory     |

#### ObjectType Description

##### Variable Data

This is the node to which the data will be output. When this node is read, the client can acquire data recorded by the MotionLog function. For specifications of the data that can be acquired from this node, refer to "4.3.3 Data Formatting."

If there is no data held inside the controller, Null is returned when the node is read.



### Variable LoggingStatus

Indicates the status of data recording by the MotionLog function. The values are described in the following table.

| Value | Description  |
|-------|--|
| Stop  | Data recording by the MotionLog function is stopped. |
| Run   | Data recording by the MotionLog function is running. |

### Variable DataExistsStatus

Indicates whether data can be acquired from the Data node. The data acquisition timing can be determined from this value. The values are described in the following table.

| Value | Description   |
|-------|---|
| Empty | Indicates that there is no data that can be acquired from the Data node |
| Ready | Indicates that there is data that can be acquired from the Data node    |

### Variable ErrorStatus

Indicates the occurrence of errors and warnings during data acquisition. From this value, you can determine how to handle the data. The values are described in the following table.

| Value   | Description  |
|---------|--|
| None    | Indicates that there is no abnormality   |
| Warning | Indicates that data overwriting has occurred                                       |
| Error   | Indicates that something has interrupted data recording by the MotionLog function. |

NOTE




When the ErrorStatus is “Error,” there is no guarantee that normal data can be read, so it is recommended that the OPC UA client stop data acquisition.

When the ErrorStatus is “Warning,” it means that the acquired data is not contiguous. There is no problem with continuing to read data.

**Example of address space**

Indicates a series of instances of the Robot MotionLog data acquisition function's address space.

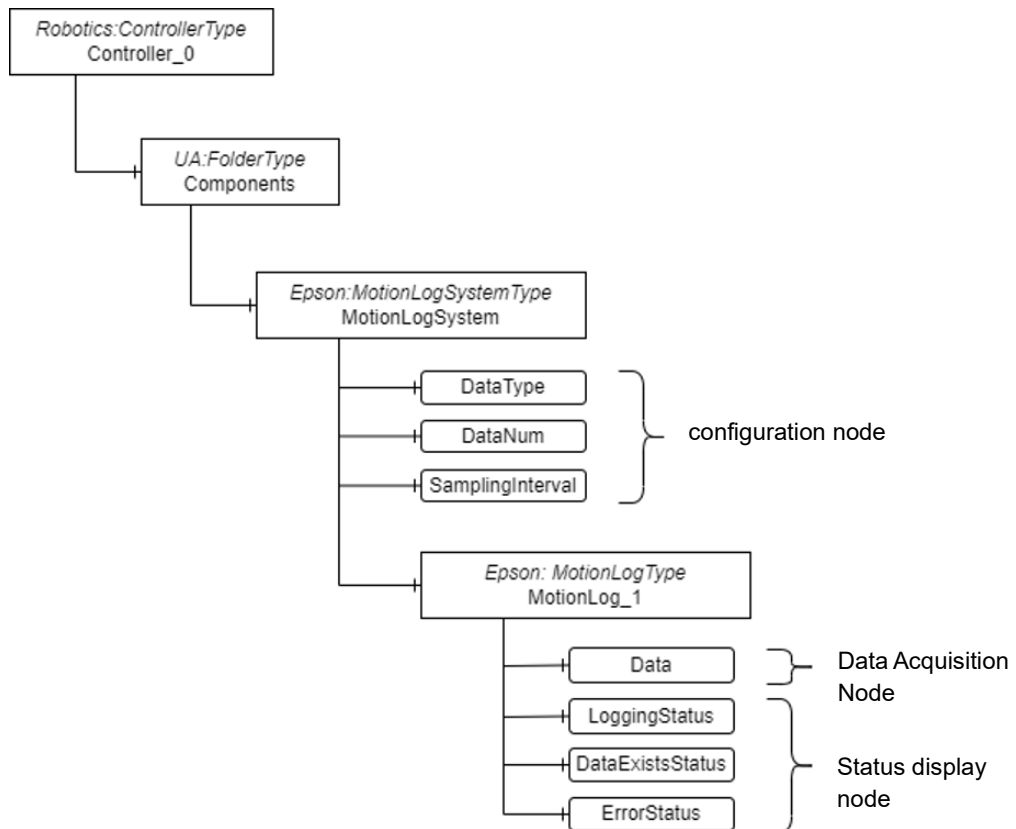

3.2.3.5 Specifications of the RobotNumber Node

**RobotNumber**

Overview

The RobotNumber node indicates robot numbers used by the Controller.  
This node is supported by firmware version 8.0.0 and later.

### 3.2.3.6 Specifications of the RobotStatus Node

#### RobotStatus

##### Overview

The RobotStatus node indicates the status of the robot.

This node is supported by firmware version 8.0.0 and later.

#### Object Type Definition

RobotStatus is defined below.

| Attribute   | Value       |                        |                |                      |               |
|---|-------------|------------------------|----------------|----------------------|---------------|
| BrowseName  | RobotStatus |                        |                |                      |               |
| IsAbstract  | False       |                        |                |                      |               |
| References  | Node Class  | BrowseName             | Data Type      | Type Definition      | Modeling Rule |
| Subtype of the ComponentType defined in OPC Unified Architecture for Devices (DI) |             |                        |                |                      |               |
| HasComponent  | Variable    | Power                  | Boolean        | BaseDataVariableType | Mandatory     |
| HasComponent  | Variable    | Home                   | Boolean        | BaseDataVariableType | Mandatory     |
| HasComponent  | Variable    | IntegrationMotorOnTime | DurationString | BaseDataVariableType | Mandatory     |
| HasComponent  | Variable    | MotorOnCount           | UInt32         | BaseDataVariableType | Mandatory     |

#### ObjectType Description

##### Variable Power

Indicates whether the robot is on high or low power. The values are described in the following table.

| Value | Description |
|-------|-------------|
| True  | Power HIGH  |
| False | Power LOW   |

##### Variable Home

Indicates whether the robot is presently in the Home position. The values are described in the following table.

| Value | Description  |
|-------|--|
| True  | The present position is Home.  |
| False | The present position is not Home, or the Home position is not specified. |

##### Variable IntegrationMotorOnTime

Indicates the manipulator's excitation time.

##### Variable MotorOnCount

Indicates the number of times the manipulator undergoes excitation.

## 3.2.3.7 Specifications of the ConsumableStatus Node

**ConsumableStatus**

## Overview

The ConsumableStatus node indicates data on consumables for the Controller, the robot, each of the robot's axes.

This node is supported by firmware version 8.0.0 and later.

The parent nodes added by the Consumable node and the data that can be acquired on consumables are as shown below.

| Parent Node              | Consumable from which data can be acquired          |
|--------------------------|---|
| <ControllerIdentifier>   | Battery   |
| <MotionDeviceIdentifier> | Battery   |
| <AxisIdentifier>         | Battery, Belt, Grease, Motor, Gear, BallScrewSpline |

**ObjectType Definition**

ConsumableStatus is defined below.

| Attribute   | Value            |                   |          |                |                      |
|---|------------------|-------------------|----------|----------------|----------------------|
| BrowseName  | ConsumableStatus |                   |          |                |                      |
| IsAbstract  | False            |                   |          |                |                      |
| References  | Node Class       | BrowseName        | DataType | TypeDefinition | Modeling Rule        |
| Subtype of the FolderType defined in OPC Unified Architecture |                  |                   |          |                |                      |
| HasComponent  | Variable         | <PartsIdentifier> |          | BaseObjectType | MandatoryPlaceholder |

**ObjectType Description**

Object <PartsIdentifier>

<PartsIdentifier> indicates that it has information on one or more consumable.

**PartsIdentifier**

## Overview

PartsIdentifier displays consumables information generated by the ConsumableStatus object (see Section 3.2.3.6). One of these objects will be generated for each consumable.

### ObjectType Definition

PartsIdentifier is defined below.

| Attribute   | Value             |                  |           |                      |               |
|---|-------------------|------------------|-----------|----------------------|---------------|
| BrowseName  | <PartsIdentifier> |                  |           |                      |               |
| IsAbstract  | False             |                  |           |                      |               |
| References  | Node Class        | BrowseName       | Data Type | Type Definition      | Modeling Rule |
| Subtype of the ComponentType defined in OPC Unified Architecture for Devices (DI) |                   |                  |           |                      |               |
| HasComponent  | Variable          | Available        | Boolean   | BaseDataVariableType | Mandatory     |
| HasComponent  | Variable          | InstallationDate | Date Time | BaseDataVariableType | Mandatory     |
| HasComponent  | Variable          | MonthRemaining   | Double    | BaseDataVariableType | Mandatory     |
| HasComponent  | Variable          | ConsumptionRate  | Double    | BaseDataVariableType | Mandatory     |

### ObjectType Description

#### Variable Available

Indicates whether the parts' consumables are being managed. The values are described in the following table.

| Value | Description  |
|-------|--|
| True  | Consumables management is enabled.                         |
| False | Consumables management is disabled, or there are no parts. |

#### Variable InstallationDate

Indicates the dates on which consumables were replaced. If "Available" is False, a null character goes here.

#### Variable MonthRemaining


Indicates the number of months remaining until the recommended time for replacing consumables. If "Available" is False, this is -1.

#### Variable ConsumptionRate

Indicates the rate at which consumables are being consumed. If "Available" is False, this is -1.

### Example of address space

An example of an Address Space is shown below. When the parent nodes are <MotionDeviceIdentifier>, <AxisIdentifier>, and <ControllerIdentifier>, it will look like this.

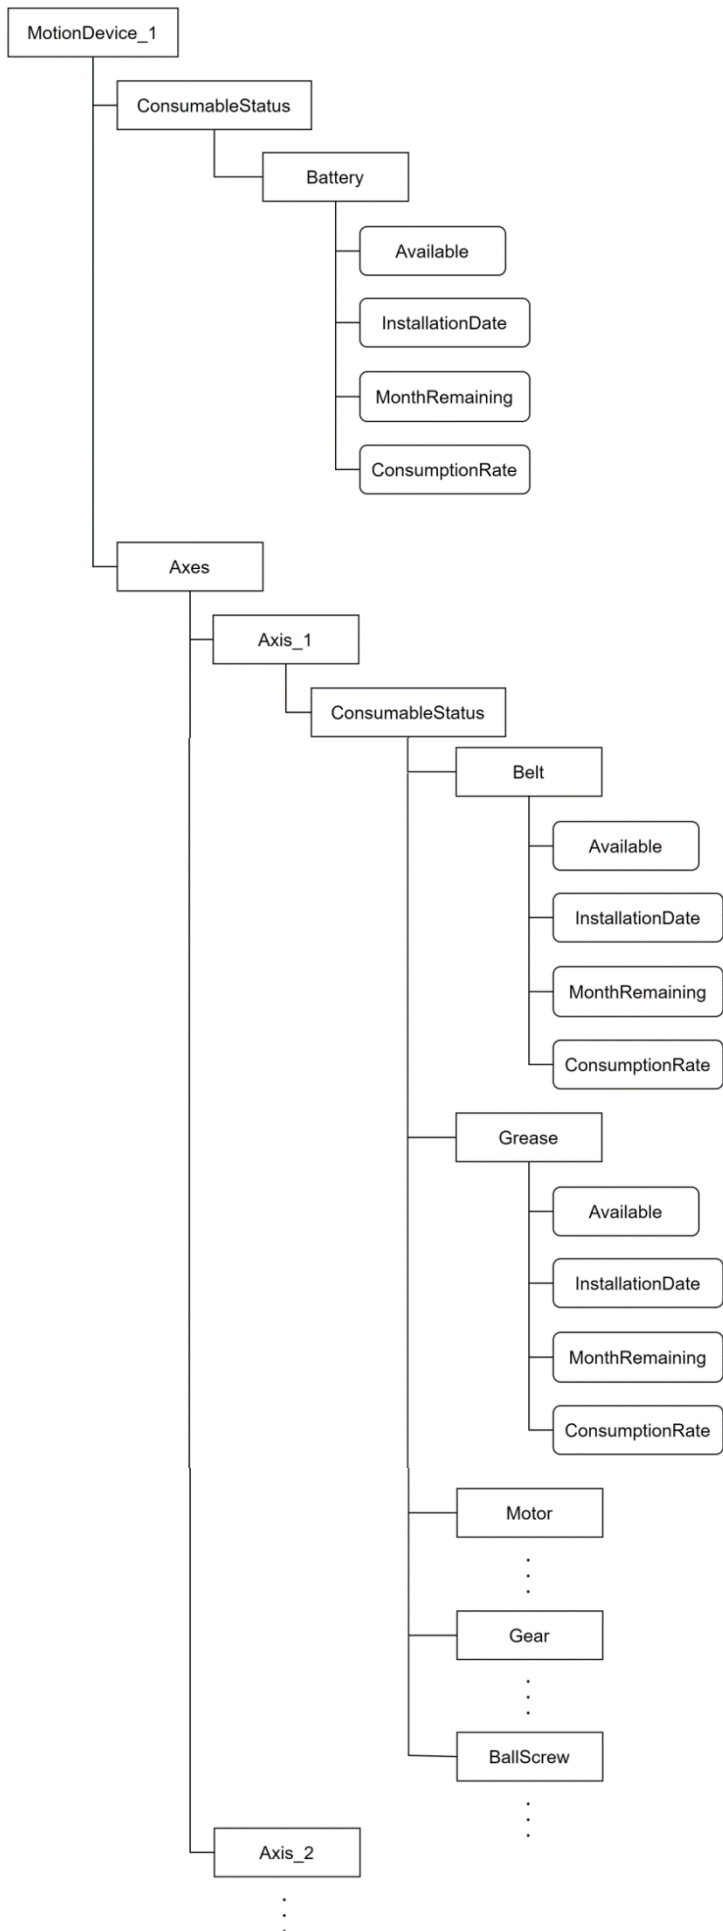

### 3.2.3.8 Specifications of the AdditionalInfo Node

#### AdditionalInfo

##### Overview

The AdditionalInfo node indicates additional information about the robot. This node is supported by firmware version 8.0.0 and later.

#### ObjectType Definition

AdditionalInfo is defined below.

| Attribute   | Value          |            |           |                      |               |
|---|----------------|------------|-----------|----------------------|---------------|
| BrowseName  | AdditionalInfo |            |           |                      |               |
| IsAbstract  | False          |            |           |                      |               |
| References  | Node Class     | BrowseName | Data Type | Type Definition      | Modeling Rule |
| Subtype of the ComponentType defined in OPC Unified Architecture for Devices (DI) |                |            |           |                      |               |
| HasComponent  | Variable       | CurPos     | String    | BaseDataVariableType | Mandatory     |
| HasComponent  | Variable       | RealPos    | String    | BaseDataVariableType | Mandatory     |

#### ObjectType Description

##### Variable CurPos

Indicates the position of the robot's current movement destination. The format of the coordinates is described below.

```
{"X":0.0, "Y":0.0, "Z":0.0., "U":0.0, "V":0.0, "W":0.0}
```

##### Variable RealPos

Indicates the robot's current position. The format of the coordinates is described below.

```
{"X":0.0, "Y":0.0, "Z":0.0., "U":0.0, "V":0.0, "W":0.0}
```

## 3.2.3.9 Specifications of the AdditionalInfo Node

**AdditionalInfo**

## Overview

This AdditionalInfo node shows additional information about the axes. This node has the same name as the AdditionalInfo node in Section 3.2.3.8, but the configuration of its child nodes is different.

This node is supported by firmware version 8.0.0 and later.

**ObjectType Definition**

AdditionalInfo is defined below.

| Attribute   | Value          |            |           |                      |               |
|---|----------------|------------|-----------|----------------------|---------------|
| BrowseName  | AdditionalInfo |            |           |                      |               |
| IsAbstract  | False          |            |           |                      |               |
| References  | Node Class     | BrowseName | Data Type | Type Definition      | Modeling Rule |
| Subtype of the ComponentType defined in OPC Unified Architecture for Devices (DI) |                |            |           |                      |               |
| HasComponent  | Variable       | Torque     | Double    | BaseDataVariableType | Mandatory     |
| HasComponent  | Variable       | Hofs       | Double    | BaseDataVariableType | Mandatory     |

**ObjectType Description**

## Variable Torque

Indicates the torque on the axis.

## Variable Hofs

Indicates the Hofs information of the axis.



## 3.2.3.10 Specifications of the ControllerStatus Node

**ControllerStatus**

## Overview

ControllerStatus is a node that indicates the status of the Controller. This node is supported by firmware version 8.0.0 and later.

**ObjectType Definition**

ControllerStatus is defined below.

| Attribute  | Value            |                    |           |                      |                      |
|--|------------------|--------------------|-----------|----------------------|----------------------|
| BrowseName   | ControllerStatus |                    |           |                      |                      |
| IsAbstract   | False            |                    |           |                      |                      |
| References   | Node Class       | BrowseName         | Data Type | Type Definition      | Modeling Rule        |
| Subtype of the ComponentType defined in OPC Unified Architecture |                  |                    |           |                      |                      |
| HasComponent   | Variable         | <StatusIdentifier> | Boolean   | BaseDataVariableType | MandatoryPlaceholder |
| HasComponent   | Variable         | StatusCode         | UInt16    | BaseDataVariableType | Mandatory            |
| HasComponent   | Variable         | CPUload            | Double    | BaseDataVariableType | Mandatory            |

**ObjectType Description**

## Variable &lt;StatusIdentifier&gt;

Indicates the status of the Controller. One node shows one status, and whether that status is On or Off. The values are described in the following table.

| Value | Description  |
|-------|--|
| True  | Indicates that the Controller presently has this status.           |
| False | Indicates that the Controller presently does not have this status. |

## Variable StatusCode


Indicates the Controller's status code, warning numbers, and error numbers.

## Variable CPUload

Indicates the load on the Controller's CPU.

### Example of address space

An example of an Address Space is shown below.

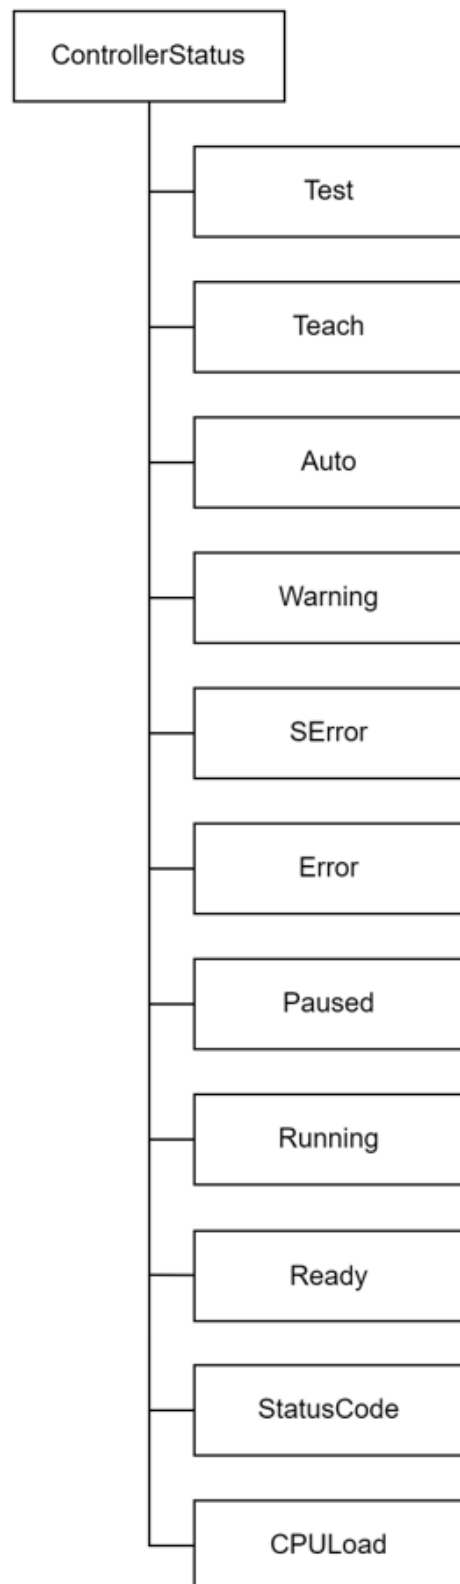

## 3.3 Activate / Deactivate OPC UA Server

### 3.3.1 Activating OPC UA Server

There are two ways to activate the server.

- Activate automatically: Server turns ON automatically when the Controller is turned ON.
- Activate manually: Server turns ON by an operation of OPC UA Configurator.

**NOTE**



It takes several minutes to activate the OPC UA Server.

If you turn ON automatically activate, it will take longer to turn ON the Controller.

### 3.3.2 Deactivating OPC UA Server

To deactivate the server, stop it manually by operating OPC UA Configurator.

## 3.4 Connecting to OPC UA Server

### 3.4.1 Overview

This section describes example of connecting to OPC UA Server installed in Robot Controller from OPC UA Client. UaExpert (from Unified Automation <https://www.unified-automation.com/>) is used for OPC UA Client in the described example.

### 3.4.2 Preparations

Before starting following steps, follow the procedure of 2. *OPC UA Configurator* and activate OPC UA Server beforehand.

#### 3.4.2.1 Setting for Server

- (1) Configure the Server in OPC UA Configurator. Refer to 2.6.1 *Basic Setting for Server* for more details of setting. In this example, the setting are as follows.

| Items             | Set values        |
|-------------------|-------------------|
| Port              | 4840              |
| Server Setup Mode | AUTO              |
| Security Policy   | Basic256Sha256    |
| User Token Policy | Username/Password |

- (2) Configure user in OPC UA Configurator. Refer to 2.6.2 *Managing Users*. In this example, the setting are as follows.


| Items    | Set values |
|----------|------------|
| Username | test0001   |
| Password | *****      |

### 3.4.2.2 Setting for Server Certificate

- (1) Prepare the Server Setting. This example uses the Server Certificate created in 2.7.1.2 *Creating Self Signed Certificate* by using OPC UA Configurator.
- (2) Set the using type of the Server Certificate in OPC UA Configurator. Refer to 2.7.2 *Setup using type of Server Certificate* for more details. In this example, the setting are as follows.

| Item        | Set value      |
|-------------|----------------|
| Select Type | 1: Self signed |

- (3) Register the Server Certificate in UaExpert. Click [UaExpert] - [Setting] – [Manage Certificates...] - Open Certificate Location. Copy the Server Certificate you created to the opened folder. Check for the Server is added to the Certificates list, and [Status] states “Trusted”.

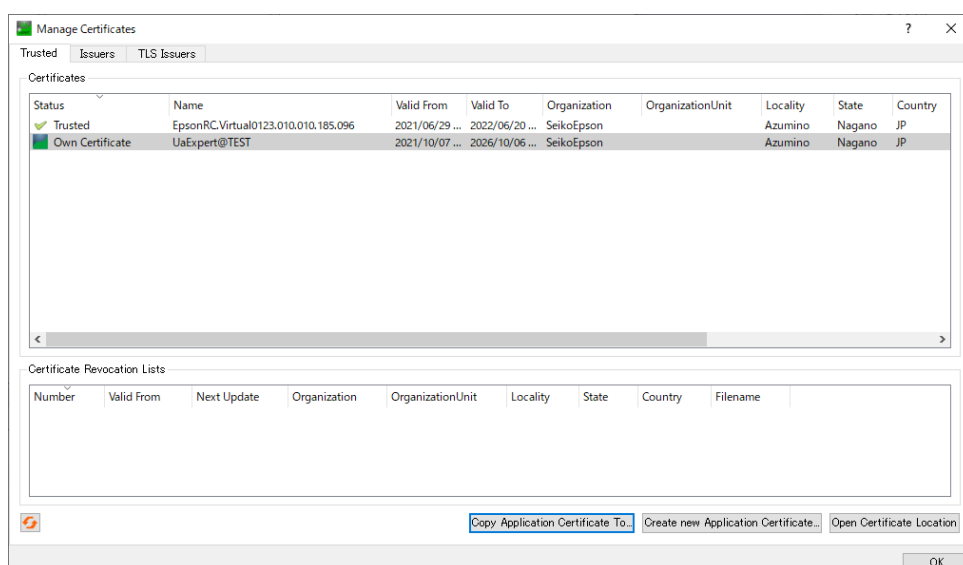

#### 3.4.2.3 Setting for Client Certificate

- (1) Start creating Application Certificate of UaExpert. Open [UaExpert] - [Setting] – [Manage Certificates...] and click [Create New Application Certificate] button. Fill in the blanks and click [OK] button.
- (2) Acquire the Application Certificate of UaExpert. Click [Copy Application Certificate To..] and save the Certificate where you want to.
- (3) Import the Client Certificate in OPC UA Configurator, add the Certificate saved in step (2) to “Trusted” list. Refer to 2.7.3.3 *Importing Client Certificate* for more details.

### 3.4.3 Procedures of connecting to OPC UA Server

#### 3.4.3.1 Adding Server

(1) Registering the OPC UA Server in UaExpert.

Open [UaExpert] - [Server] - [Add].


Enter like following in the [Advanced] panel and click [OK] button. For the values entered here, use the value set in 3.4.2.1 *Setting for Server*.

NOTE  



It is possible to select OPC UA Server to connect from [Discovery] panel instead of (1).

3.4.3.2 Connecting to Server

- (1) Select the Server added in 3.4.3.1 *Adding Server* from [UaExpert] – [Project] window – [Servers]. Right-click and select “Connect”.

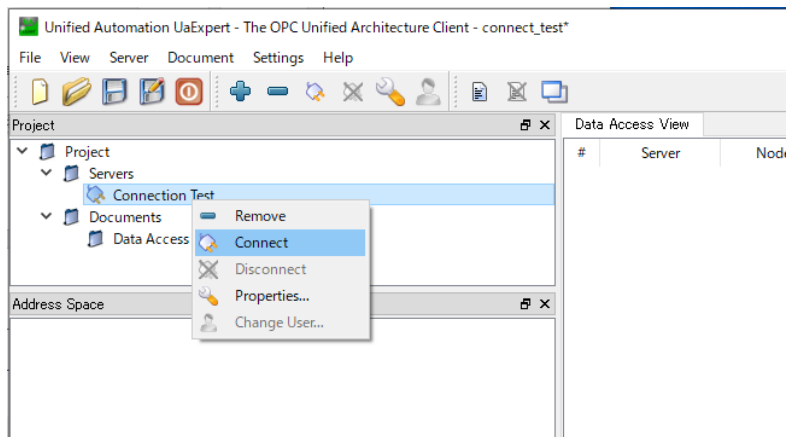

- (2) If UaExpert succeeds to connecting to OPC UA Server, node is displayed in Address Space window like following below.

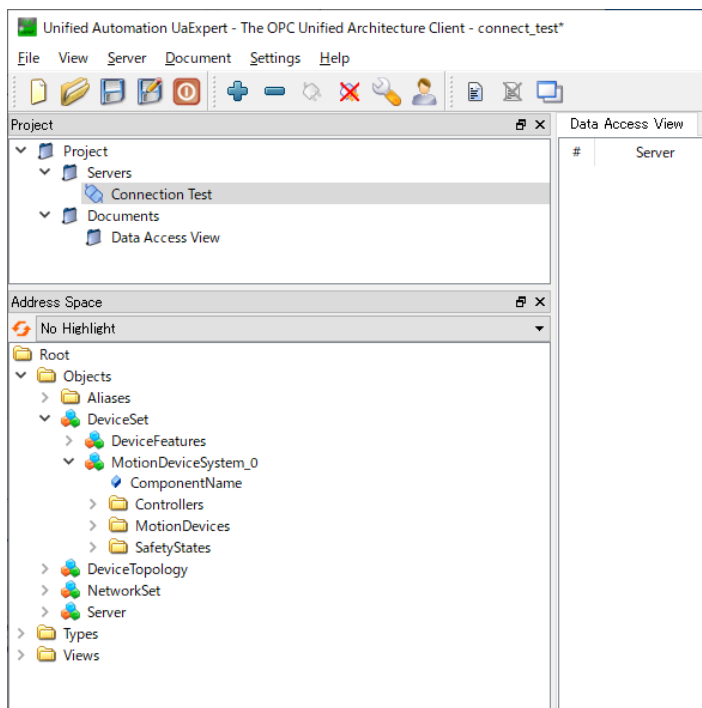



## 4. How to Use Epson Original Nodes

### 4.1 Acquisition of Force Sensor Data

#### 4.1.1 Overview


If you use the node of the force sensor, you can acquire the force sensor data from OPC UA Client. The data you can acquire is the same with the one you can acquire when you connecting to Epson RC+.

Below is an example of a system configuration.

NOTE



Data is output to either Epson RC+ or OPC UA.

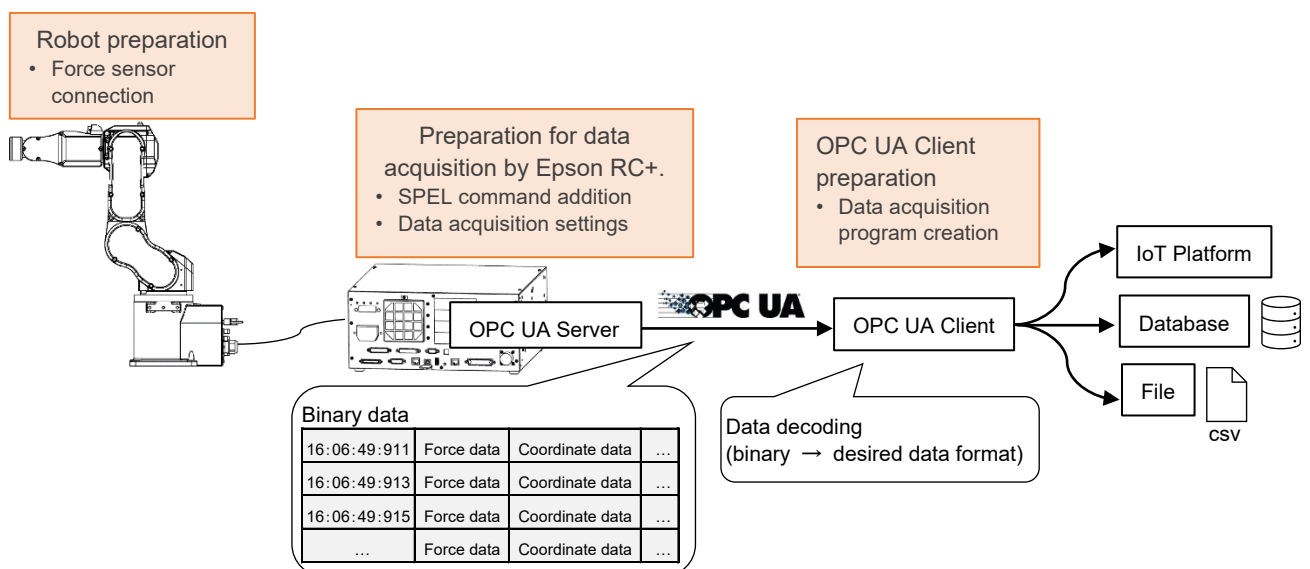

To use this function, prepare the three items below after completing the OPC UA Server configuration. For details, see “4.1.2 Usage”.

- Robot preparation: Prepare a manipulator to which a force sensor can be connected and connect it to the force sensor.
- Creation of data acquisition program by Epson RC+: Add the “RecordStart” command to the SPEL program for using.
- Preparation of OPC UA Client: Create an OPC UA Client program to acquire data from the OPC UA Server. Convert acquired data to fit your system.

#### 4.1.2 Usage

Prepare the Robot and OPC UA Client software as explained below.

##### 4.1.2.1 Robot Preparation

Connect the force sensor to the Robot by referring to the following manual:

*Epson RC+ Option Force Guide 8.0*

### 4.1.2.2 Creation of Data Acquisition Program by Epson RC+

To start force sensor data acquisition, use the “RecordStart” property of the FM object in the SPEL program. This method is the same as when outputting data by the Epson RC+. For detailed control and setting information, see the following manual:

*Epson RC+ Optional Force Guide 8.0*

*SPEL+ Language Reference*

If you already have a program that uses RecordStart, you can use it as is. \*

\*: One concurrent execution of RecordStart is recommended. If two RecordStart cases are executed simultaneously, the data and status of the second case will be output to a node under ForceSensorMonitor\_2.

Acquiring force sensor data ends when the task ends or the measurement time is reached. Or you can end it whenever you want by executing “RecordEnd” property.

Force sensor data acquisition settings (selection of sensors to acquire data, configuration of coordinate system, etc.) are made with the properties of the FM object, an existing Epson RC+ object. For more information on FM object settings, see the following manual:

*Epson RC+ Option Force Guide 8.0*

After creating a program, see the following manual and perform a build:


*Epson RC+ 8.0 User's Guide*

## 4.1.2.3 Creation of OPC UA Client Program

**Overview**

Prerequisite: It is assumed that an OPC UA Client library (such as node-opcua library of Node.js, and opcua-asyncio library of python) will be used.

Creates an OPC UA Client program to acquire and utilize force sensor data with OPC UA. The data acquisition flowchart of the OPC UA client for acquiring the data for one RecordStart is shown below.

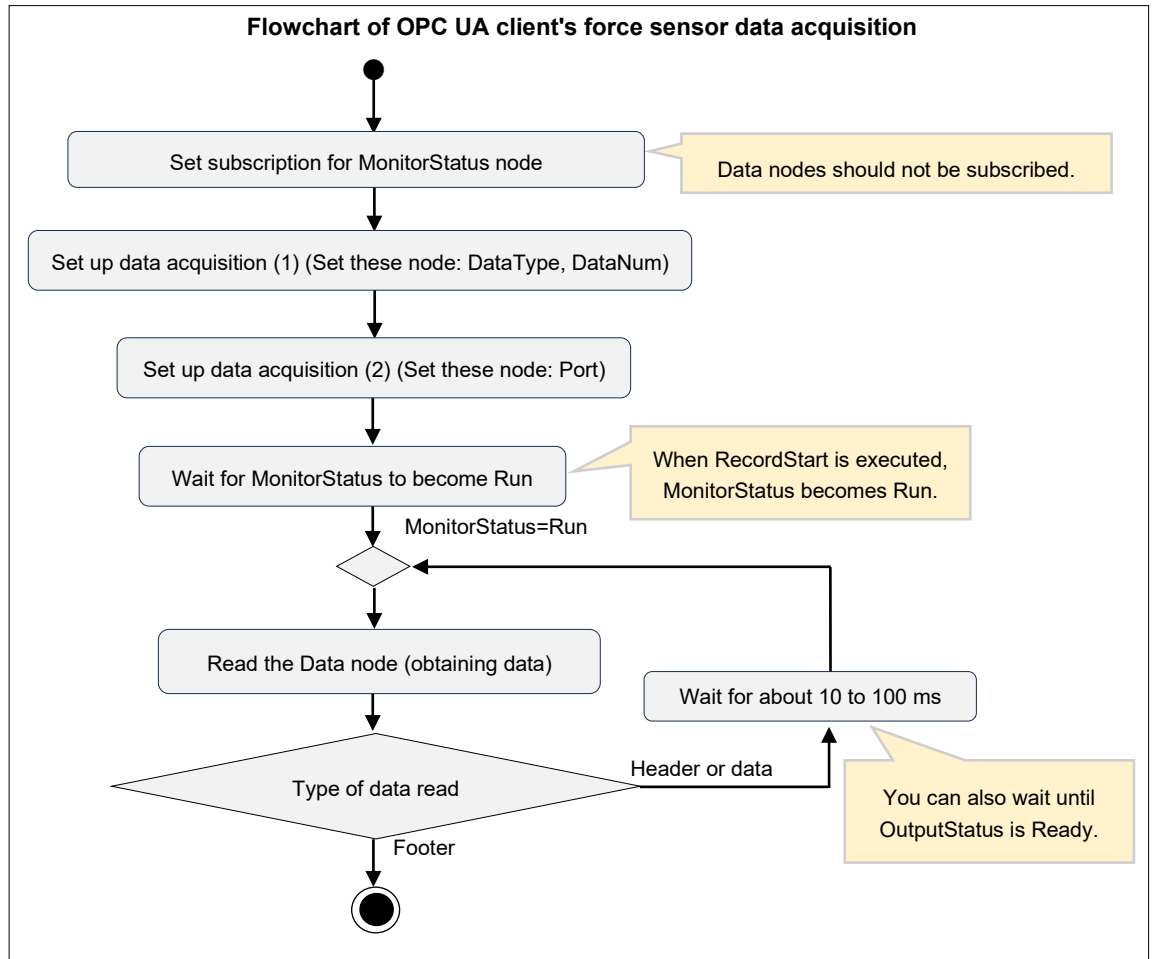

### Selecting the data type

Set the DataType node to a value of 0 to 3 depending on the type of data you want to acquire. See “4.1.3 Data Formatting” for the differences in the data that can be acquired.

### Setting the maximum number of data items

The maximum number of data items to be acquired from the OPC UA Server at one time can be set in the DataNum node.

Do the above settings before setting up the Port node.

### Selecting the data output destination

You can select either Epson RC+ or OPC UA as the output destination for data obtained by executing RecordStart. To output to OPC UA, set the Port node to True. Set the Port node before executing RecordStart.



- Data can be output to either Epson RC+ or OPC UA, but not to both. Data cannot be acquired for both Epson RC+ and OPC UA simultaneously.

### Start time of Data node reading

Execute Start Data node reading according to the status of the MonitoringStatus node as a judgement condition. MonitoringStatus nodes can also be registered for subscriptions.

While the MonitoringStatus node value is Stop, standby as reading is not performed.

Alternatively, DataExistsStatus can be also used as a condition for deciding.

### Data node reading

Referring to the Data node, you can read data according to “4.1.3 Data Formatting”. Read the header first. Read the multiple data parts next, and finally the footer to complete the process. Decode data as needed. Execute or end reading according to the value of the OPCUACommonTag.



- After executing RecordStart, continue to acquire data with OPC UA Client at intervals of several 10 to several 100 ms. If the reading interval of data node is too long, data may be missing. In that case, the ErrorStatus node will become Warning. If Warning occurs, check the time stamp and process the data appropriately.
- If you want to reduce the amount of missing data mentioned above, speed up the data acquisition cycle, change the data type using the DataType node, or increase the measurement interval specified in RecordStart.
- To ensure that the data is read, the Data node should not be registered for subscriptions.

**End condition for Data node reading**

End Data node reading when the read data's OPCUACommonTag is 4.  
OPCUACommonTag=4 indicates that the footer was read.

## NOTE



To repeat RecordStart, repeat the above data acquisition flow.

Written in pseudo code, a program for acquiring data corresponding to one RecordStart is shown below. Create your program according to the usage of the OPC UA client library you use.

```
# Collect the force sensor data from OPC UA Server of Epson Robot Controller.
# * This is pseudo code.

# Create OPC UA Client
client = create_opcua_client()           # Create OPC UA Client Instance
client.connect('opc.tcp://192.168.0.1:4840') # Connect to OPC UA Server

# Get node object
node_DataType      = client.getNode('ns=1;i=196611') # DataType Node
node_DataNum       = client.getNode('ns=1;i=196612') # DataNum Node
node_Port          = client.getNode('ns=1;i=196609') # Port Node
node_DataExistsStatus = client.getNode('ns=1;i=196867') # DataExistsStatus Node
node_MonitorStatus = client.getNode('ns=1;i=196866') # MonitorStatus Node
node_Data          = client.getNode('ns=1;i=196865') # Data Node

# Setup necessary settings
node_DataType.setValue(0)           # set DataType
node_DataNum.setValue(1000)         # set DataNum
node_Port.setValue(True)            # set Port

# Start data collection
while node_MonitorStatus.getValue() is not 'Run': # wait to RecordStart
    sleep(0.1)                                   # wait 100ms

while True:                                     # loop for collect data
    while node_DataExistsStatus.getValue() is not 'Ready': # wait to data Exists
        sleep(0.1)                                   # wait 100ms

    binary_data = node_Data.getValue()           # read force sensor data
    decoded_data = decode(binary_data)           # decode binary data to readable format
    writefile(decoded_data)                     # write data to file

    if binary_data[0] == 0x4:                   # if Footer received,
        break                                    # then end loop
```

### 4.1.3 Data Formatting

This section describes the format of data that can be read from a Data node. The content of table below will be added to the header, data part, and footer. For a details of other data, see the RecordStart property in the following manual:

*Epson RC+ Option Force Guide*

*SPEL+ Language Reference*

| Data name        | Description   |
|------------------|---|
| OPC UA CommonTag | Used to identify headers, data parts, and footers. The meaning of each value is as follows:<br>Value: Meaning<br>1: Header<br>2: Data part<br>4: Footer |
| OPCUACommonVer   | Data format version<br>1: Controller firmware version prior to 8.0.0<br>2: Controller firmware version 8.0.0 or later                                   |
| OPCUACommonID    | Incremented each time RecordStart is started. By looking at this ID, you can check the correspondence between the header, data part, and footer.        |
| OPCUACommonRsv   | Reserved  |
| OPCUADataType    | Value for data part. Value of DataType is entered.  |
| OPCUADataRsv     | Reserved  |

#### Content of header

The content of the header varies depending on your Controller firmware version. Controller firmware versions and the data they are able to acquire are displayed on the chart below.

## Controller firmware version prior to 8.0.0

| Data category   | Data item          | Overview                              | Type   | Size of 1 unit | Quantity | Total bytes | Index |
|-----------------|--------------------|---------------------------------------|--------|----------------|----------|-------------|-------|
| OPC UA          | OPCUACommonTag     | OPC UA, common header, tag            | BYTE   | 1              | 1        | 1           | 0     |
|                 | OPCUACommonVer     | OPC UA, common header, version        | BYTE   | 1              | 1        | 1           | 1     |
|                 | OPCUACommonID      | OPC UA, common header, dataID         | ushort | 2              | 1        | 2           | 2     |
|                 | OPCUACommonRsv     | OPC UA, common header, reserve        | BYTE   | 1              | 2        | 2           | 4     |
| Common          | PacketVersion      | Packet version                        | BYTE   | 1              | 1        | 1           | 6     |
| Common          | PacketType         | Packet type (not used)                | BYTE   | 1              | 1        | 1           | 7     |
| Channel         | Channel            | Data output channel                   | BYTE   | 1              | 1        | 1           | 8     |
| Mode            | Mode               | Recording mode (not used)             | BYTE   | 1              | 1        | 1           | 9     |
| Start Time      | Year               | Year                                  | short  | 2              | 1        | 2           | 10    |
|                 | Month              | Month                                 | BYTE   | 1              | 1        | 1           | 12    |
|                 | Day                | Day                                   | BYTE   | 1              | 1        | 1           | 13    |
|                 | Hour               | Hour                                  | BYTE   | 1              | 1        | 1           | 14    |
|                 | Minutes            | Minute                                | BYTE   | 1              | 1        | 1           | 15    |
|                 | Second             | Second                                | BYTE   | 1              | 1        | 1           | 16    |
|                 | MilliSecond        | Millisecond                           | short  | 2              | 1        | 2           | 17    |
| Duration        | Duration           | Measurement duration                  | float  | 4              | 1        | 4           | 19    |
| Interval        | Interval           | Measurement interval                  | float  | 4              | 1        | 4           | 23    |
| Robot No        | RobotNo            | Robot number                          | short  | 2              | 1        | 2           | 27    |
| Robot Name      | RobotNameLength    | Characters in Robot name              | BYTE   | 1              | 1        | 1           | 29    |
|                 | RobotName          | Robot name                            | BYTE   | 1              | 32       | 32          | 30    |
| Sensor No       | SensorNo           | Sensor number                         | BYTE   | 1              | 1        | 1           | 62    |
| Sensor Serial   | SensorSerialLength | Number of characters in sensor serial | BYTE   | 1              | 1        | 1           | 63    |
|                 | SensorSerial       | Force sensor serial number            | BYTE   | 1              | 10       | 10          | 64    |
| Sensor Label    | SensorLabelLength  | Number of characters in sensor label  | BYTE   | 1              | 1        | 1           | 74    |
|                 | SensorLabel        | Force sensor label                    | BYTE   | 1              | 32       | 32          | 75    |
| FM No           | FMNo               | Force monitor object number           | short  | 2              | 1        | 2           | 107   |
| FM Label        | FMLabelLength      | Number of characters in FM label      | BYTE   | 1              | 1        | 1           | 109   |
|                 | FMLabel            | Force monitor object label            | BYTE   | 1              | 32       | 32          | 110   |
| FCS No          | FCSNo              | Force coordinate system object number | short  | 2              | 1        | 2           | 142   |
| FCS Label       | FCSLabelLength     | Number of characters in FCS label     | BYTE   | 1              | 1        | 1           | 144   |
|                 | FCSLabel           | Force coordinate system object label  | BYTE   | 1              | 32       | 32          | 145   |
| Output FileName | FileNameLength     | Number of characters in file name     | BYTE   | 1              | 1        | 1           | 177   |
|                 | FileName           | File name specified by RecordStart    | BYTE   | 1              | 64       | 64          | 178   |
| Seq No          | SeqNo              | Sequence number                       | BYTE   | 1              | 1        | 1           | 242   |
| Seq Name        | SeqNameLength      | Number of characters in sequence name | BYTE   | 1              | 1        | 1           | 243   |
|                 | SeqName            | Sequence name                         | BYTE   | 1              | 32       | 32          | 244   |
| Force Name      | ForceNameLength    | Number of characters in force name    | BYTE   | 1              | 1        | 1           | 276   |
|                 | ForceName          | Force file name                       | BYTE   | 1              | 32       | 32          | 277   |
| RobotLocal      | RobotLocal         | Force monitor objectRobotLocal        | BYTE   | 1              | 1        | 1           | 309   |
| Total           |                    |                                       |        |                |          | 310         | 310   |

## 4. How to Use Epson Original Nodes

Controller firmware version 8.0.0 or later

| Data category   | Data item          | Overview                              | Type   | Size of 1 unit | Quantity | Total bytes | Index |
|-----------------|--------------------|---------------------------------------|--------|----------------|----------|-------------|-------|
| OPC UA          | OPCUACommonTag     | OPC UA, common header, tag            | BYTE   | 1              | 1        | 1           | 0     |
|                 | OPCUACommonVer     | OPC UA, common header, version        | BYTE   | 1              | 1        | 1           | 1     |
|                 | OPCUACommonID      | OPC UA, common header, dataID         | ushort | 2              | 1        | 2           | 2     |
|                 | OPCUACommonRsv     | OPC UA, common header, reserve        | BYTE   | 1              | 2        | 2           | 4     |
| Common          | PacketVersion      | Packet version                        | BYTE   | 1              | 1        | 1           | 6     |
| Common          | PacketType         | Packet type (not used)                | BYTE   | 1              | 1        | 1           | 7     |
| Channel         | Channel            | Data output channel                   | BYTE   | 1              | 1        | 1           | 8     |
| Mode            | Mode               | Recording mode (not used)             | BYTE   | 1              | 1        | 1           | 9     |
| Start Time      | Year               | Year                                  | short  | 2              | 1        | 2           | 10    |
|                 | Month              | Month                                 | BYTE   | 1              | 1        | 1           | 12    |
|                 | Day                | Day                                   | BYTE   | 1              | 1        | 1           | 13    |
|                 | Hour               | Hour                                  | BYTE   | 1              | 1        | 1           | 14    |
|                 | Minutes            | Minute                                | BYTE   | 1              | 1        | 1           | 15    |
|                 | Second             | Second                                | BYTE   | 1              | 1        | 1           | 16    |
|                 | MilliSecond        | Millisecond                           | short  | 2              | 1        | 2           | 17    |
| Duration        | Duration           | Measurement duration                  | float  | 4              | 1        | 4           | 19    |
| Interval        | Interval           | Measurement interval                  | float  | 4              | 1        | 4           | 23    |
| Robot No        | RobotNo            | Robot number                          | short  | 2              | 1        | 2           | 27    |
| Robot Name      | RobotNameLength    | Characters in Robot name              | BYTE   | 1              | 1        | 1           | 29    |
|                 | RobotName          | Robot name                            | BYTE   | 1              | 32       | 32          | 30    |
| Sensor No       | SensorNo           | Sensor number                         | BYTE   | 1              | 1        | 1           | 62    |
| Sensor Serial   | SensorSerialLength | Number of characters in sensor serial | BYTE   | 1              | 1        | 1           | 63    |
|                 | SensorSerial       | Force sensor serial number            | BYTE   | 1              | 10       | 10          | 64    |
| Sensor Label    | SensorLabelLength  | Number of characters in sensor label  | BYTE   | 1              | 1        | 1           | 74    |
|                 | SensorLabel        | Force sensor label                    | BYTE   | 1              | 32       | 32          | 75    |
| FM No           | FMNo               | Force monitor object number           | short  | 2              | 1        | 2           | 107   |
| FM Label        | FMLabelLength      | Number of characters in FM label      | BYTE   | 1              | 1        | 1           | 109   |
|                 | FMLabel            | Force monitor object label            | BYTE   | 1              | 32       | 32          | 110   |
| FCS No          | FCSNo              | Force coordinate system object number | short  | 2              | 1        | 2           | 142   |
| FCS Label       | FCSLabelLength     | Number of characters in FCS label     | BYTE   | 1              | 1        | 1           | 144   |
|                 | FCSLabel           | Force coordinate system object label  | BYTE   | 1              | 32       | 32          | 145   |
| Output FileName | FileNameLength     | Number of characters in file name     | BYTE   | 1              | 1        | 1           | 177   |
|                 | FileName           | File name specified by RecordStart    | BYTE   | 1              | 64       | 64          | 178   |
| Seq No          | SeqNo              | Sequence number                       | BYTE   | 1              | 1        | 1           | 242   |
| Seq Name        | SeqNameLength      | Number of characters in sequence name | BYTE   | 1              | 1        | 1           | 243   |
|                 | SeqName            | Sequence name                         | BYTE   | 1              | 32       | 32          | 244   |
| Force Name      | ForceNameLength    | Number of characters in force name    | BYTE   | 1              | 1        | 1           | 276   |
|                 | ForceName          | Force file name                       | BYTE   | 1              | 2        | 32          | 277   |
| RobotLocal      | RobotLocal         | Force monitor objectRobotLocal        | BYTE   | 1              | 1        | 1           | 309   |



|                 |                 |   |        |   |   |     |     |
|-----------------|-----------------|---|--------|---|---|-----|-----|
| RecordStartTime | RecordStartTime | TimeStamp at the time of RecordStart.<br>For synchronizing with MotionLogSystemType data. | UInt64 | 8 | 1 | 8   | 310 |
| Total           |                 |   |        |   |   | 318 | 318 |

**Content of data part**

The content of the data part depends on the DataType setting. The tables below show DataType values and their correspondence to data content that can be acquired. Gray areas in the tables indicate data that will not be acquired.

- If DataType=0

| Data category | Data item      | Overview   | Type   | Size of 1 unit | Quantity | Total bytes | Index |
|---------------|----------------|--|--------|----------------|----------|-------------|-------|
| OPC UA        | OPCUACommonTag | OPC UA, common header, tag   | BYTE   | 1              | 1        | 1           | 0     |
|               | OPCUACommonVer | OPC UA, common header, version   | BYTE   | 1              | 1        | 1           | 1     |
|               | OPCUACommonID  | OPC UA, common header, dataID  | ushort | 2              | 1        | 2           | 2     |
|               | OPCUACommonRsv | OPC UA, common header, reserve   | BYTE   | 1              | 2        | 2           | 4     |
|               | OPCUADatatype  | OPC UA, data header, data type   | ushort | 2              | 1        | 2           | 6     |
|               | OPCUADataRsv   | OPC UA, data header, reserve   | BYTE   | 1              | 2        | 2           | 8     |
| Common        | PacketVersion  | Packet version   | BYTE   | 1              | 1        | 1           | 10    |
| Common        | PacketType     | Packet type (not used)   | BYTE   | 1              | 1        | 1           | 11    |
| Channel       | Channel        | Data output channel  | BYTE   | 1              | 1        | 1           | 12    |
| Mode          | Mode           | Recording mode (not used)  | BYTE   | 1              | 1        | 1           | 13    |
| Count         | Count          | Data serial number   | DWORD  | 4              | 1        | 4           | 14    |
| ElapsedTime   | ElapsedTime    | Elapsed time from start of measurement   | DWORD  | 4              | 1        | 4           | 18    |
| Force         | Fx             | Sensor value, resultant force, and resultant torque for each axis in force coordinate system | float  | 4              | 1        | 4           | 22    |
|               | Fy             |  |        | 4              | 1        | 4           | 26    |
|               | Fz             |  |        | 4              | 1        | 4           | 30    |
|               | Tx             |  |        | 4              | 1        | 4           | 34    |
|               | Ty             |  |        | 4              | 1        | 4           | 38    |
|               | Tz             |  |        | 4              | 1        | 4           | 42    |
|               | Fmag           |  |        | 4              | 1        | 4           | 46    |
|               | Tmag           |  |        | 4              | 1        | 4           | 50    |
| CurPos        | CurPos(X)      | Command position, including Robot position control and force control                         | float  | 4              | 1        | 4           | 54    |
|               | CurPos(Y)      |  |        | 4              | 1        | 4           | 58    |
|               | CurPos(Z)      |  |        | 4              | 1        | 4           | 62    |
|               | CurPos(U)      |  |        | 4              | 1        | 4           | 66    |
|               | CurPos(V)      |  |        | 4              | 1        | 4           | 70    |
|               | CurPos(W)      |  |        | 4              | 1        | 4           | 74    |
| RefPos        | RefPos(X)      | Command position for Robot position control only   | float  | 4              | 1        | 4           | 78    |
|               | RefPos(Y)      |  |        | 4              | 1        | 4           | 82    |
|               | RefPos(Z)      |  |        | 4              | 1        | 4           | 86    |
|               | RefPos(U)      |  |        | 4              | 1        | 4           | 90    |
|               | RefPos(V)      |  |        | 4              | 1        | 4           | 94    |
|               | RefPos(W)      |  |        | 4              | 1        | 4           | 98    |
| Diff          | Diff(X)        | Amount of correction by force control function   | float  | 4              | 1        | 4           | 102   |
|               | Diff(Y)        |  |        | 4              | 1        | 4           | 106   |
|               | Diff(Z)        |  |        | 4              | 1        | 4           | 110   |

#### 4. How to Use Epson Original Nodes

|          |             |   |       |   |   |   |     |
|----------|-------------|---|-------|---|---|---|-----|
| TCPSpeed | TCPSpeed    | Tool tip speed in base coordinate system                                      | float | 4 | 1 | 4 | 114 |
|          | TCPSpeed(X) | Components of tool tip speed in each axis direction in base coordinate system | float | 4 | 1 | 4 | 118 |
|          | TCPSpeed(Y) |   |       | 4 | 1 | 4 | 122 |
|          | TCPSpeed(Z) |   |       | 4 | 1 | 4 | 126 |

| Data category | Data item   | Overview   | Type  | Size of 1 unit | Quantity | Total bytes | Index |
|---------------|-------------|--|-------|----------------|----------|-------------|-------|
| Joint         | Joint(J1)   | Angle of each joint of Robot   | float | 4              | 1        | 4           | 130   |
|               | Joint(J2)   |  |       | 4              | 1        | 4           | 134   |
|               | Joint(J3)   |  |       | 4              | 1        | 4           | 138   |
|               | Joint(J4)   |  |       | 4              | 1        | 4           | 142   |
|               | Joint(J5)   |  |       | 4              | 1        | 4           | 146   |
|               | Joint(J6)   |  |       | 4              | 1        | 4           | 150   |
| OLRate        | OLRate(J1)  | Overload rate of each joint of Robot<br>* Overload rate ranges from 0 to 200. To match the units with the OLRate command in SPEL+, divide this value by 100. | BYTE  | 1              | 1        | 1           | 154   |
|               | OLRate(J2)  |  |       | 1              | 1        | 1           | 155   |
|               | OLRate(J3)  |  |       | 1              | 1        | 1           | 156   |
|               | OLRate(J4)  |  |       | 1              | 1        | 1           | 157   |
|               | OLRate(J5)  |  |       | 1              | 1        | 1           | 158   |
|               | OLRate(J6)  |  |       | 1              | 1        | 1           | 159   |
| FCOn          | FCOn        | Status of force control function execution   | BYTE  | 1              | 1        | 1           | 160   |
| StepID        | StepID      | Value set by StepID property   | DWORD | 4              | 1        | 4           | 161   |
| Time          | Year        | Year   | short | 2              | 1        | 2           | 165   |
|               | Month       | Month  | BYTE  | 1              | 1        | 1           | 167   |
|               | Day         | Day  | BYTE  | 1              | 1        | 1           | 168   |
|               | Hour        | Hour   | BYTE  | 1              | 1        | 1           | 169   |
|               | Minutes     | Minute   | BYTE  | 1              | 1        | 1           | 170   |
|               | Second      | Second   | BYTE  | 1              | 1        | 1           | 171   |
|               | MilliSecond | Millisecond  | short | 2              | 1        | 2           | 172   |
| Seq No        | SeqNo       | Sequence number<br>When not in progress, fixed to 0  | BYTE  | 1              | 1        | 1           | 174   |
| Object No     | ObjectNo    | Object number  | BYTE  | 1              | 1        | 1           | 175   |
| FM No         | FMNo        | Force monitor object number  | short | 2              | 1        | 2           | 176   |
| Total         |             |  |       |                |          | 178         | 178   |

- If DataType=1

| Data category | Data item      | Overview   | Type   | Size of 1 unit | Quantity | Total bytes | Index |
|---------------|----------------|--|--------|----------------|----------|-------------|-------|
| OPC UA        | OPCUACommonTag | OPC UA, common header, tag   | BYTE   | 1              | 1        | 1           | 0     |
|               | OPCUACommonVer | OPC UA, common header, version   | BYTE   | 1              | 1        | 1           | 1     |
|               | OPCUACommonID  | OPC UA, common header, dataID  | ushort | 2              | 1        | 2           | 2     |
|               | OPCUACommonRsv | OPC UA, common header, reserve   | BYTE   | 1              | 2        | 2           | 4     |
|               | OPCUADatatype  | OPC UA, data header, data type   | ushort | 2              | 1        | 2           | 6     |
|               | OPCUADDataRsv  | OPC UA, data header, reserve   | BYTE   | 1              | 2        | 2           | 8     |
| Common        | PacketVersion  | Packet version   | BYTE   | 1              | 1        | 1           | 10    |
| Common        | PacketType     | Packet type (not used)   | BYTE   | 1              | 1        | 1           | 11    |
| Channel       | Channel        | Data output channel  | BYTE   | 1              | 1        | 1           | 12    |
| Mode          | Mode           | Recording mode (not used)  | BYTE   | 1              | 1        | 1           | 13    |
| Count         | Count          | Data serial number   | DWORD  | 4              | 1        | 4           | 14    |
| ElapsedTime   | ElapsedTime    | Elapsed time from start of measurement   | DWORD  | 4              | 1        | 4           | 18    |
| Force         | Fx             | Sensor value, resultant force, and resultant torque for each axis in force coordinate system | float  | 4              | 0        | 0           |       |
|               | Fy             |  |        | 4              | 0        | 0           |       |
|               | Fz             |  |        | 4              | 0        | 0           |       |
|               | Tx             |  |        | 4              | 0        | 0           |       |
|               | Ty             |  |        | 4              | 0        | 0           |       |
|               | Tz             |  |        | 4              | 0        | 0           |       |
|               | Fmag           |  |        | 4              | 0        | 0           |       |
|               | Tmag           |  |        | 4              | 0        | 0           |       |
| CurPos        | CurPos(X)      | Command position, including Robot position control and force control                         | float  | 4              | 1        | 4           | 22    |
|               | CurPos(Y)      |  |        | 4              | 1        | 4           | 26    |
|               | CurPos(Z)      |  |        | 4              | 1        | 4           | 30    |
|               | CurPos(U)      |  |        | 4              | 1        | 4           | 34    |
|               | CurPos(V)      |  |        | 4              | 1        | 4           | 38    |
|               | CurPos(W)      |  |        | 4              | 1        | 4           | 42    |
| RefPos        | RefPos(X)      | Command position for Robot position control only   | float  | 4              | 0        | 0           |       |
|               | RefPos(Y)      |  |        | 4              | 0        | 0           |       |
|               | RefPos(Z)      |  |        | 4              | 0        | 0           |       |
|               | RefPos(U)      |  |        | 4              | 0        | 0           |       |
|               | RefPos(V)      |  |        | 4              | 0        | 0           |       |
|               | RefPos(W)      |  |        | 4              | 0        | 0           |       |
| Diff          | Diff(X)        | Amount of correction by force control function   | float  | 4              | 0        | 0           |       |
|               | Diff(Y)        |  |        | 4              | 0        | 0           |       |
|               | Diff(Z)        |  |        | 4              | 0        | 0           |       |
| TCPSpeed      | TCPSpeed       | Tool tip speed in base coordinate system   | float  | 4              | 1        | 4           | 46    |
|               | TCPSpeed(X)    | Components of tool tip speed in each axis direction in base coordinate system                | float  | 4              | 1        | 4           | 50    |
|               | TCPSpeed(Y)    |  |        | 4              | 1        | 4           | 54    |
|               | TCPSpeed(Z)    |  |        | 4              | 1        | 4           | 58    |

#### 4. How to Use Epson Original Nodes

| Data category | Data item   | Overview   | Type  | Size of 1 unit | Quantity | Total bytes | Index |
|---------------|-------------|--|-------|----------------|----------|-------------|-------|
| Joint         | Joint(J1)   | Angle of each joint of Robot   | float | 4              | 1        | 4           | 62    |
|               | Joint(J2)   |  |       | 4              | 1        | 4           | 66    |
|               | Joint(J3)   |  |       | 4              | 1        | 4           | 70    |
|               | Joint(J4)   |  |       | 4              | 1        | 4           | 74    |
|               | Joint(J5)   |  |       | 4              | 1        | 4           | 78    |
|               | Joint(J6)   |  |       | 4              | 1        | 4           | 82    |
| OLRate        | OLRate(J1)  | Overload rate of each joint of Robot<br>* Overload rate ranges from 0 to 200. To match the units with the OLRate command in SPEL+, divide this value by 100. | BYTE  | 1              | 1        | 1           | 86    |
|               | OLRate(J2)  |  |       | 1              | 1        | 1           | 87    |
|               | OLRate(J3)  |  |       | 1              | 1        | 1           | 88    |
|               | OLRate(J4)  |  |       | 1              | 1        | 1           | 89    |
|               | OLRate(J5)  |  |       | 1              | 1        | 1           | 90    |
|               | OLRate(J6)  |  |       | 1              | 1        | 1           | 91    |
| FCOn          | FCOn        | Status of force control function execution   | BYTE  | 1              | 0        | 0           |       |
| StepID        | StepID      | Value set by StepID property   | DWORD | 4              | 1        | 4           | 92    |
| Time          | Year        | Year   | short | 2              | 1        | 2           | 96    |
|               | Month       | Month  | BYTE  | 1              | 1        | 1           | 98    |
|               | Day         | Day  | BYTE  | 1              | 1        | 1           | 99    |
|               | Hour        | Hour   | BYTE  | 1              | 1        | 1           | 100   |
|               | Minutes     | Minute   | BYTE  | 1              | 1        | 1           | 101   |
|               | Second      | Second   | BYTE  | 1              | 1        | 1           | 102   |
|               | MilliSecond | Millisecond  | short | 2              | 1        | 2           | 103   |
| Seq No        | SeqNo       | Sequence number<br>When not in progress, fixed to 0  | BYTE  | 1              | 1        | 1           | 105   |
| Object No     | ObjectNo    | Object number  | BYTE  | 1              | 1        | 1           | 106   |
| FM No         | FMNo        | Force monitor object number  | short | 2              | 1        | 2           | 107   |
| Total         |             |  |       |                |          | 109         | 109   |

- If DataType=2

| Data category | Data item      | Overview   | Type   | Size of 1 unit | Quantity | Total bytes | Index |
|---------------|----------------|--|--------|----------------|----------|-------------|-------|
| OPC UA        | OPCUACommonTag | OPC UA, common header, tag   | BYTE   | 1              | 1        | 1           | 0     |
|               | OPCUACommonVer | OPC UA, common header, version   | BYTE   | 1              | 1        | 1           | 1     |
|               | OPCUACommonID  | OPC UA, common header, dataID  | ushort | 2              | 1        | 2           | 2     |
|               | OPCUACommonRsv | OPC UA, common header, reserve   | BYTE   | 1              | 2        | 2           | 4     |
|               | OPCUADatatype  | OPC UA, data header, data type   | ushort | 2              | 1        | 2           | 6     |
|               | OPCUADataRsv   | OPC UA, data header, reserve   | BYTE   | 1              | 2        | 2           | 8     |
| Common        | PacketVersion  | Packet version   | BYTE   | 1              | 1        | 1           | 10    |
| Common        | PacketType     | Packet type (not used)   | BYTE   | 1              | 1        | 1           | 11    |
| Channel       | Channel        | Data output channel  | BYTE   | 1              | 1        | 1           | 12    |
| Mode          | Mode           | Recording mode (not used)  | BYTE   | 1              | 1        | 1           | 13    |
| Count         | Count          | Data serial number   | DWORD  | 4              | 1        | 4           | 14    |
| ElapsedTime   | ElapsedTime    | Elapsed time from start of measurement   | DWORD  | 4              | 1        | 4           | 18    |
| Force         | Fx             | Sensor value, resultant force, and resultant torque for each axis in force coordinate system | float  | 4              | 1        | 4           | 22    |
|               | Fy             |  |        | 4              | 1        | 4           | 26    |
|               | Fz             |  |        | 4              | 1        | 4           | 30    |
|               | Tx             |  |        | 4              | 1        | 4           | 34    |
|               | Ty             |  |        | 4              | 1        | 4           | 38    |
|               | Tz             |  |        | 4              | 1        | 4           | 42    |
|               | Fmag           |  |        | 4              | 1        | 4           | 46    |
|               | Tmag           |  |        | 4              | 1        | 4           | 50    |
| CurPos        | CurPos(X)      | Command position, including Robot position control and force control                         | float  | 4              | 1        | 4           | 54    |
|               | CurPos(Y)      |  |        | 4              | 1        | 4           | 58    |
|               | CurPos(Z)      |  |        | 4              | 1        | 4           | 62    |
|               | CurPos(U)      |  |        | 4              | 1        | 4           | 66    |
|               | CurPos(V)      |  |        | 4              | 1        | 4           | 70    |
|               | CurPos(W)      |  |        | 4              | 1        | 4           | 74    |
| RefPos        | RefPos(X)      | Command position for Robot position control only   | float  | 4              | 0        | 0           |       |
|               | RefPos(Y)      |  |        | 4              | 0        | 0           |       |
|               | RefPos(Z)      |  |        | 4              | 0        | 0           |       |
|               | RefPos(U)      |  |        | 4              | 0        | 0           |       |
|               | RefPos(V)      |  |        | 4              | 0        | 0           |       |
|               | RefPos(W)      |  |        | 4              | 0        | 0           |       |
| Diff          | Diff(X)        | Amount of correction by force control function   | float  | 4              | 0        | 0           |       |
|               | Diff(Y)        |  |        | 4              | 0        | 0           |       |
|               | Diff(Z)        |  |        | 4              | 0        | 0           |       |
| TCPSpeed      | TCPSpeed       | Tool tip speed in base coordinate system   | float  | 4              | 0        | 0           |       |
|               | TCPSpeed(X)    | Components of tool tip speed in each axis direction in base coordinate system                | float  | 4              | 0        | 0           |       |
|               | TCPSpeed(Y)    |  |        | 4              | 0        | 0           |       |
|               | TCPSpeed(Z)    |  |        | 4              | 0        | 0           |       |

#### 4. How to Use Epson Original Nodes

| Data category | Data item   | Overview   | Type  | Size of 1 unit | Quantity | Total bytes | Index |
|---------------|-------------|--|-------|----------------|----------|-------------|-------|
| Joint         | Joint(J1)   | Angle of each joint of Robot   | float | 4              | 0        | 0           |       |
|               | Joint(J2)   |  |       | 4              | 0        | 0           |       |
|               | Joint(J3)   |  |       | 4              | 0        | 0           |       |
|               | Joint(J4)   |  |       | 4              | 0        | 0           |       |
|               | Joint(J5)   |  |       | 4              | 0        | 0           |       |
|               | Joint(J6)   |  |       | 4              | 0        | 0           |       |
| OLRate        | OLRate(J1)  | Overload rate of each joint of Robot<br>* Overload rate ranges from 0 to 200. To match the units with the OLRate command in SPEL+, divide this value by 100. | BYTE  | 1              | 0        | 0           |       |
|               | OLRate(J2)  |  |       | 1              | 0        | 0           |       |
|               | OLRate(J3)  |  |       | 1              | 0        | 0           |       |
|               | OLRate(J4)  |  |       | 1              | 0        | 0           |       |
|               | OLRate(J5)  |  |       | 1              | 0        | 0           |       |
|               | OLRate(J6)  |  |       | 1              | 0        | 0           |       |
| FCOn          | FCOn        | Status of force control function execution   | BYTE  | 1              | 0        | 0           |       |
| StepID        | StepID      | Value set by StepID property   | DWORD | 4              | 1        | 4           | 78    |
| Time          | Year        | Year   | short | 2              | 0        | 0           |       |
|               | Month       | Month  | BYTE  | 1              | 0        | 0           |       |
|               | Day         | Day  | BYTE  | 1              | 0        | 0           |       |
|               | Hour        | Hour   | BYTE  | 1              | 0        | 0           |       |
|               | Minutes     | Minute   | BYTE  | 1              | 0        | 0           |       |
|               | Second      | Second   | BYTE  | 1              | 0        | 0           |       |
|               | MilliSecond | Millisecond  | short | 2              | 0        | 0           |       |
| Seq No        | SeqNo       | Sequence number<br>When not in progress, fixed to 0  | BYTE  | 1              | 1        | 1           | 82    |
| Object No     | ObjectNo    | Object number  | BYTE  | 1              | 1        | 1           | 83    |
| FM No         | FMNo        | Force monitor object number  | short | 2              | 1        | 2           | 84    |
| Total         |             |  |       |                |          | 86          | 86    |

- If DataType=3

| Data category | Data item      | Overview   | Type   | Size of 1 unit | Quantity | Total bytes | Index |
|---------------|----------------|--|--------|----------------|----------|-------------|-------|
| OPC UA        | OPCUACommonTag | OPC UA, common header, tag   | BYTE   | 1              | 1        | 1           | 0     |
|               | OPCUACommonVer | OPC UA, common header, version   | BYTE   | 1              | 1        | 1           | 1     |
|               | OPCUACommonID  | OPC UA, common header, dataID  | ushort | 2              | 1        | 2           | 2     |
|               | OPCUACommonRsv | OPC UA, common header, reserve   | BYTE   | 1              | 2        | 2           | 4     |
|               | OPCUADataType  | OPC UA, data header, data type   | ushort | 2              | 1        | 2           | 6     |
|               | OPCUADataRsv   | OPC UA, data header, reserve   | BYTE   | 1              | 2        | 2           | 8     |
| Common        | PacketVersion  | Packet version   | BYTE   | 1              | 1        | 1           | 10    |
| Common        | PacketType     | Packet type (not used)   | BYTE   | 1              | 1        | 1           | 11    |
| Channel       | Channel        | Data output channel  | BYTE   | 1              | 1        | 1           | 12    |
| Mode          | Mode           | Recording mode (not used)  | BYTE   | 1              | 1        | 1           | 13    |
| Count         | Count          | Data serial number   | DWORD  | 4              | 1        | 4           | 14    |
| ElapsedTime   | ElapsedTime    | Elapsed time from start of measurement   | DWORD  | 4              | 1        | 4           | 18    |
| Force         | Fx             | Sensor value, resultant force, and resultant torque for each axis in force coordinate system | float  | 4              | 0        | 0           |       |
|               | Fy             |  |        | 4              | 0        | 0           |       |
|               | Fz             |  |        | 4              | 0        | 0           |       |
|               | Tx             |  |        | 4              | 0        | 0           |       |
|               | Ty             |  |        | 4              | 0        | 0           |       |
|               | Tz             |  |        | 4              | 0        | 0           |       |
|               | Fmag           |  |        | 4              | 0        | 0           |       |
|               | Tmag           |  |        | 4              | 0        | 0           |       |
| CurPos        | CurPos(X)      | Command position, including Robot position control and force control                         | float  | 4              | 1        | 4           | 22    |
|               | CurPos(Y)      |  |        | 4              | 1        | 4           | 26    |
|               | CurPos(Z)      |  |        | 4              | 1        | 4           | 30    |
|               | CurPos(U)      |  |        | 4              | 1        | 4           | 34    |
|               | CurPos(V)      |  |        | 4              | 1        | 4           | 38    |
|               | CurPos(W)      |  |        | 4              | 1        | 4           | 42    |
| RefPos        | RefPos(X)      | Command position for Robot position control only   | float  | 4              | 0        | 0           |       |
|               | RefPos(Y)      |  |        | 4              | 0        | 0           |       |
|               | RefPos(Z)      |  |        | 4              | 0        | 0           |       |
|               | RefPos(U)      |  |        | 4              | 0        | 0           |       |
|               | RefPos(V)      |  |        | 4              | 0        | 0           |       |
|               | RefPos(W)      |  |        | 4              | 0        | 0           |       |
| Diff          | Diff(X)        | Amount of correction by force control function   | float  | 4              | 0        | 0           |       |
|               | Diff(Y)        |  |        | 4              | 0        | 0           |       |
|               | Diff(Z)        |  |        | 4              | 0        | 0           |       |
| TCPSpeed      | TCPSpeed       | Tool tip speed in base coordinate system   | float  | 4              | 0        | 0           |       |
|               | TCPSpeed(X)    | Components of tool tip speed in each axis direction in base coordinate system                | float  | 4              | 0        | 0           |       |
|               | TCPSpeed(Y)    |  |        | 4              | 0        | 0           |       |
|               | TCPSpeed(Z)    |  |        | 4              | 0        | 0           |       |

#### 4. How to Use Epson Original Nodes

| Data category | Data item   | Overview   | Type  | Size of 1 unit | Quantity | Total bytes | Index |
|---------------|-------------|--|-------|----------------|----------|-------------|-------|
| Joint         | Joint(J1)   | Angle of each joint of Robot   | float | 4              | 0        | 0           |       |
|               | Joint(J2)   |  |       | 4              | 0        | 0           |       |
|               | Joint(J3)   |  |       | 4              | 0        | 0           |       |
|               | Joint(J4)   |  |       | 4              | 0        | 0           |       |
|               | Joint(J5)   |  |       | 4              | 0        | 0           |       |
|               | Joint(J6)   |  |       | 4              | 0        | 0           |       |
| OLRate        | OLRate(J1)  | Overload rate of each joint of Robot<br>* Overload rate ranges from 0 to 200. To match the units with the OLRate command in SPEL+, divide this value by 100. | BYTE  | 1              | 0        | 0           |       |
|               | OLRate(J2)  |  |       | 1              | 0        | 0           |       |
|               | OLRate(J3)  |  |       | 1              | 0        | 0           |       |
|               | OLRate(J4)  |  |       | 1              | 0        | 0           |       |
|               | OLRate(J5)  |  |       | 1              | 0        | 0           |       |
|               | OLRate(J6)  |  |       | 1              | 0        | 0           |       |
| FCOn          | FCOn        | Status of force control function execution   | BYTE  | 1              | 0        | 0           |       |
| StepID        | StepID      | Value set by StepID property   | DWORD | 4              | 1        | 4           | 46    |
| Time          | Year        | Year   | short | 2              | 0        | 0           |       |
|               | Month       | Month  | BYTE  | 1              | 0        | 0           |       |
|               | Day         | Day  | BYTE  | 1              | 0        | 0           |       |
|               | Hour        | Hour   | BYTE  | 1              | 0        | 0           |       |
|               | Minutes     | Minute   | BYTE  | 1              | 0        | 0           |       |
|               | Second      | Second   | BYTE  | 1              | 0        | 0           |       |
|               | MilliSecond | Millisecond  | short | 2              | 0        | 0           |       |
| Seq No        | SeqNo       | Sequence number<br>When not in progress, fixed to 0  | BYTE  | 1              | 1        | 1           | 50    |
| Object No     | ObjectNo    | Object number  | BYTE  | 1              | 1        | 1           | 51    |
| FM No         | FMNo        | Force monitor object number  | short | 2              | 1        | 2           | 52    |
| Total         |             |  |       |                |          | 54          | 54    |



## Content of footer

| Data category | Data item          | Overview  | Type   | Size of 1 unit | Quantity | Total bytes | Index |
|---------------|--------------------|---|--------|----------------|----------|-------------|-------|
| OPC UA        | OPCUACommonTag     | OPC UA, common header, tag  | BYTE   | 1              | 1        | 1           | 0     |
|               | OPCUACommonVer     | OPC UA, common header, version  | BYTE   | 1              | 1        | 1           | 1     |
|               | OPCUACommonRsv     | OPC UA, common header, dataID   | ushort | 2              | 1        | 2           | 2     |
|               | OPCUACommonRsv     | OPC UA, common header, reserve  | BYTE   | 1              | 2        | 2           | 4     |
| Common        | PacketVersion      | Packet version  | BYTE   | 1              | 1        | 1           | 6     |
| Common        | PacketType         | Packet type (not used)  | BYTE   | 1              | 1        | 1           | 7     |
| Channel       | Channel            | Data output channel   | BYTE   | 1              | 1        | 1           | 8     |
| Mode          | Mode               | Recording mode (not used)   | BYTE   | 1              | 1        | 1           | 9     |
| End Time      | Year               | Year  | short  | 2              | 1        | 2           | 10    |
|               | Month              | Month   | BYTE   | 1              | 1        | 1           | 12    |
|               | Day                | Day   | BYTE   | 1              | 1        | 1           | 13    |
|               | Hour               | Hour  | BYTE   | 1              | 1        | 1           | 14    |
|               | Minutes            | Minute  | BYTE   | 1              | 1        | 1           | 15    |
|               | Second             | Second  | BYTE   | 1              | 1        | 1           | 16    |
|               | MilliSecond        | Millisecond   | short  | 2              | 1        | 2           | 17    |
| Duration      | Duration           | Measurement duration  | float  | 4              | 1        | 4           | 19    |
| Interval      | Interval           | Measurement interval  | float  | 4              | 1        | 4           | 23    |
| Robot No      | RobotNo            | Robot number  | short  | 2              | 1        | 2           | 27    |
| Robot Name    | RobotNameLength    | Characters in Robot name  | BYTE   | 1              | 1        | 1           | 29    |
|               | RobotName          | Robot name  | BYTE   | 1              | 32       | 32          | 30    |
| Sensor No     | SensorNo           | Sensor number   | BYTE   | 1              | 1        | 1           | 62    |
| Sensor Serial | SensorSerialLength | Number of characters in sensor serial   | BYTE   | 1              | 1        | 1           | 63    |
|               | SensorSerial       | Force sensor serial number  | BYTE   | 1              | 10       | 10          | 64    |
| Sensor Label  | SensorLabelLength  | Number of characters in sensor label  | BYTE   | 1              | 1        | 1           | 74    |
|               | SensorLabel        | Force sensor label  | BYTE   | 1              | 32       | 32          | 75    |
| FM No         | FMNo               | Force monitor object number   | short  | 2              | 1        | 2           | 107   |
| FM Label      | FMLabelLength      | Number of characters in FM label  | BYTE   | 1              | 1        | 1           | 109   |
|               | FMLabel            | Force monitor object label  | BYTE   | 1              | 32       | 32          | 110   |
| FCS No        | FCSNo              | Force coordinate system object number   | short  | 2              | 1        | 2           | 142   |
| FCS Label     | FCSTLabelLength    | Number of characters in FCS label   | BYTE   | 1              | 1        | 1           | 144   |
|               | FCSTLabel          | Force coordinate system object label  | BYTE   | 1              | 32       | 32          | 145   |
| End Condition | EndCondition       | End condition<br>0: Duration elapsed<br>1: End executed property<br>2: Stop requested<br>4: Build executed<br>7: Task ended<br>-1: Error occurred | BYTE   | 1              | 1        | 1           | 177   |
| Error No      | ErrorNo            | Error number  | short  | 2              | 1        | 2           | 178   |
| Seq No        | SeqNo              | Sequence number   | BYTE   | 1              | 1        | 1           | 180   |
| Reserve       |                    | Reserved  | BYTE   | 1              | 1        | 1           | 181   |
| Total         |                    |   |        |                |          | 182         | 182   |

## 4.2 Acquisition of SPEL Variable Data

### 4.2.1 Usage

The values of variables used in SPEL+ programs can be read by the OPC UA Client. The specifications of SPEL variables that can be read by the OPC UA Client are shown in the table below.

| Items                | Specifications  |
|----------------------|---|
| Variable memory type | Only variables declared in Global Preserve (backup variables) |
| Variable type        | Support all SPEL+ types                                       |
| Array type           | Not supported   |
| Access type          | Read Only   |
| Maximum quantity     | 256   |
| Variable naming rule | The prefix "OPCUA_" must be present                           |

### 4.2.2 Overview

Backup variables are declared according to the specifications in "4.2.1 Overview". An example of a variable definition is shown below.

```
' OPC UA output variables
Global Preserve UShort OPCUA_ItemCode
Global Preserve UInt32 OPCUA_ElectricPower
Global Preserve UInt32 OPCUA_NumOfProduced
Global Preserve UInt32 OPCUA_NumOfNonDefective
Global Preserve UShort OPCUA_CycleTime
Global Preserve UInt32 OPCUA_ConsumedStatus
Global Preserve UShort OPCUA_OperatingStatus
Global Preserve UInt32 OPCUA_ErrorCode
```

SPEL variable nodes appear in the address space positions below.

Objects>DeviceSet>MotionDeviceSystemIdentifier>Controllers>Components>SpelProject>BackupVariables



- SPEL variables whose values are to be read by OPC UA must be prefixed with "OPCUA\_".
- To apply variable definitions (including type and variable name changes, and variable additions and deletions), restart the OPC UA Server after building the project.

## 4.3 Acquisition of Sensor Data


### 4.3.1 Overview

Sensor data can be acquired by the OPC UA Client.  
This node is supported by firmware version 8.0.0 and later.

### 4.3.2 Usage

Following explanation below to create the OPC UA Client Program.

Precondition: It is assumed that an OPC UA Client library will be used. (For example, Node.js's node-opcua library, or Python's opcua-asyncio library)  
Creates an OPC UA Client program to acquire and utilize sensor data with OPC UA. A flowchart of the OPC UA client's data acquisition process is shown below.

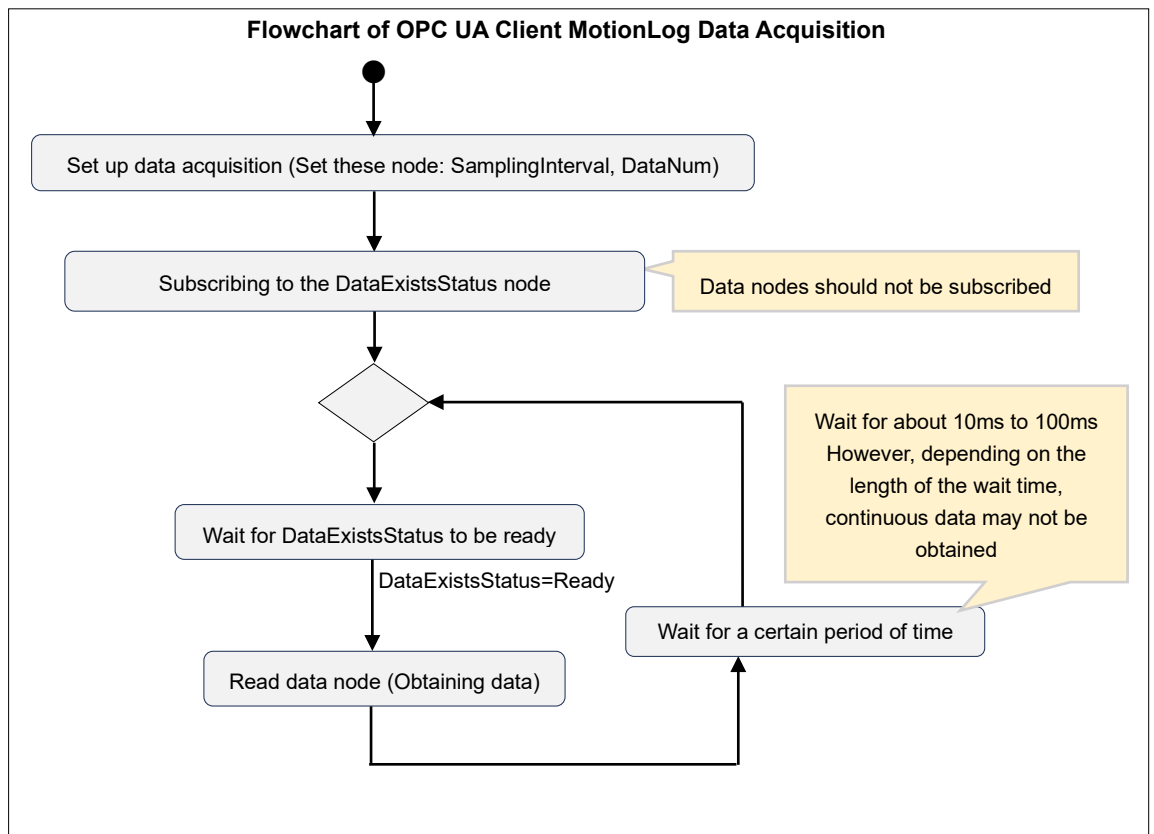

#### Setting the maximum number of data items

The maximum number of data items to be acquired from the OPC UA Server at one time can be set in the DataNum node.

#### Data acquisition cycle settings

Set the data acquisition cycle with the OPC UA Server. This can be set on the SamplingInterval node. Be careful of things that differ from the OPC UA Client-run data acquisition cycle



- Depending on your DataNum and data acquisition cycle settings, it might not be possible to acquire continuous sensor data. In such cases, set DataNum to "0" and your data acquisition cycle to a larger value.

**Start time of Data node reading**

Make it so that the status of the DataExistsStatus node is a condition for starting the reading of the Data node. DataExistsStatus nodes can also be registered for subscriptions. While the DataExistsStatus node value is “Stop,” put the Data node on standby, as reading is not performed.

**Data node reading**

Referring to the Data node, you can read data according to "4.3.3 Data Formatting". Decode data as needed.



- Make it so that after Data node reading begins, OPC UA Client will continue to acquire data at intervals of 10 to 100 ms. If there is a long interval between readings of the Data node, data may be missing. In that case, the ErrorStatus node will become Warning. If Warning occurs, check the time stamp and process the data appropriately.
- If you want to reduce the amount of missing data mentioned above, speed up the data acquisition cycle, set DataNum to “0” or “200,” and increase the value of the SamplingInterval.
- To ensure that the data is read, the Data node should not be registered for subscriptions.

**Response to ErrorStatus**

By referring to the ErrorStatus node, you can determine whether it is possible to acquire proper data. The chart below describes the meaning of the ErrorStatus node’s values, and provides an example of how to respond to each.

| ErrorStatus Node | Meaning   | Response  |
|------------------|---|---|
| None             | Proper data can be acquired.  | Continue reading the Data node.   |
| Warning          | Part of the data is missing. Read the Data node. The ErrorStatus will return to “None.”   | Continue to read data, bearing in mind that data is missing from the period when the Warning status was active. |
| Error            | Robot MotionLog data cannot be acquired by the OPC UA Server. When Robot MotionLog data can be read again, the ErrorStatus will return to “None.” | Stop reading data.  |

Written in pseudo code, a program for acquiring Robot MotionLog data is shown below. Create your program according to the usage of the OPC UA client library you use.

```
# Collect the MotionLog data from OPC UA Server of Epson Robot Controller.
# * This is pseudo code.

# Create OPC UA Client
client = create_opcua_client()           # Create OPC UA Client Instance
client.connect('opc.tcp://192.168.0.1:4840') # Connect to OPC UA Server

# Get node object
node_DataNum = client.getNode('ns=1;i=20313') # DataNum Node
node_SamplingInterval = client.getNode('ns=1;i=20314') # SamplingInterval Node
node_Data = client.getNode('ns=1;i=20316') # Data Node
node_LoggingStatus = client.getNode('ns=1;i=20317') # MonitorStatus Node
node_DataExistsStatus = client.getNode('ns=1;i=20318') # DataExistsStatus Node

# Setup necessary settings
node_DataNum.setValue(0) # set DataNum
node_SamplingInterval.setValue(0) # set SamplingInterval

# Start data collection
while True: # loop for collect data
    while node_DataExistsStatus.getValue() is not 'Ready': # wait to data Exists
        sleep(0.01) # wait 10ms

    binary_data = node_Data.getValue() # read MotionLog data
    decoded_data = decode(binary_data) # decode binary data to readable format
    writefile(decoded_data) # write data to file
```

### 4.3.3 Data Formatting

This section describes the content and format of the data that can be read from a Data node. A Data node contains multiple data chunks. Each data chunk is composed of multiple items of the data shown below.

#### Contents of Data Chunks

The table below shows the content of the data that can be acquired. Each large data item is described in detail below.

| Data category | Large Data item | Overview                 | of 1 Size | Quantity | Total bytes | Index |
|---------------|-----------------|--------------------------|-----------|----------|-------------|-------|
| ENC           | ENC_1           | Encoder (Axis 1)         | 24        | 8        | 192         | 0     |
|               | ENC_2           | Encoder (Axis 2)         | 24        | 8        | 192         | 192   |
|               | ENC_3           | Encoder (Axis 3)         | 24        | 8        | 192         | 384   |
|               | ENC_4           | Encoder (Axis 4)         | 24        | 8        | 192         | 576   |
|               | ENC_5           | Encoder (Axis 5)         | 24        | 8        | 192         | 768   |
|               | ENC_6           | Encoder (Axis 6)         | 24        | 8        | 192         | 960   |
| DRVCMD        | DRVCMD_1        | Current Command (Axis 1) | 20        | 8        | 160         | 1152  |
|               | DRVCMD_2        | Current Command (Axis 2) | 20        | 8        | 160         | 1312  |
|               | DRVCMD_3        | Current Command (Axis 3) | 20        | 8        | 160         | 1472  |
|               | DRVCMD_4        | Current Command (Axis 4) | 20        | 8        | 160         | 1632  |
|               | DRVCMD_5        | Current Command (Axis 5) | 20        | 8        | 160         | 1792  |
|               | DRVCMD_6        | Current Command (Axis 6) | 20        | 8        | 160         | 1952  |
| RT-I/O        | RT-I/O          | RealTime I/O             | 16        | 8        | 128         | 2112  |
| STD-I/O       | STD-I/O         | Standard I/O             | 24        | 8        | 192         | 2240  |
| FSENS         | FSENS           | Force data               | 72        | 1        | 72          | 2432  |
| PLSCNT        | PLSCNT          | Pulse Counter            | 24        | 1        | 24          | 2504  |
| TCP           | TCP             | Tip of the robot arm     | 80        | 1        | 80          | 2528  |
| Total         |                 |                          |           |          | 2608        | 2608  |



If no data exists, the TIMESTAMP will become “0”. (See the table below.)

#### Content of ENC

For each of the robot’s axes, 8 items of ENC data are included. The data in these 8 items are arranged chronologically. This section describes the format of each of the ENC data.

| Large data item | Small data item | Overview  | of 1 Size | Data type | Quantity | Total bytes | Index |
|-----------------|-----------------|---|-----------|-----------|----------|-------------|-------|
| ENC_n           | TIMESTAMP       | TIMESTAMP<br>* 1 sec per 80,000,000. When converting to seconds, divide by 80,000,000. Do the same for the following TIMESTAMPS as well.<br>* The starting point is when the Controller is turned on or is rebooted. The same is true for the following TIMESTAMPS as well. | 8         | UInt64    | 1        | 8           | 0     |
|                 | ENC_POS         | Encoder position information (pulse value)  | 8         | Int64     | 1        | 8           | 8     |
|                 | ENC_TMR         | Timer value<br>(Number of internal clocks in the encoder)   | 4         | UInt32    | 1        | 4           | 16    |
|                 | ENC_TEMP        | Temperature (°C)  | 1         | SByte     | 1        | 1           | 20    |

### Content of DRVCMD

For each of the robot's axes, 8 items of DRVCMD data are included. The data in these 8 items are arranged chronologically. This section describes the format of each of the DRVCMD data.

| Large data item | Small data item | Overview   | of 1 Size | Data type | Quantity | Total bytes | Index |
|-----------------|-----------------|--|-----------|-----------|----------|-------------|-------|
| DRVCMD_n        | TIMESTAMP       | TIMESTAMP  | 8         | UInt64    | 1        | 8           | 0     |
|                 | RESERVE         | Reserved   | 2         | Byte      | 1        | 2           | 8     |
|                 | IDREF           | D-Axis Current Command Value   | 2         | Int16     | 1        | 2           | 10    |
|                 | IQREF           | Q-Axis Current Command Value   | 2         | Int16     | 1        | 2           | 12    |
|                 | EANGLE          | Electrical angle<br>* This is the angle if 360 degrees is expressed as 65,536. | 2         | UInt16    | 1        | 2           | 14    |
|                 | VEL             | Velocity   | 2         | Int16     | 1        | 2           | 16    |
|                 | RESERVE         | Reserved   | 2         | Int16     | 2        | 2           | 18    |

### Content of RT-I/O

For each item of data, 8 pieces of RT-I/O data are included. The data in these 8 items are arranged chronologically. This section describes the format of each of the RT-I/O data.

| Large Data Item | Small Data item | Overview   | of 1 Size | Data type | Quantity | Total bytes | Index |
|-----------------|-----------------|--|-----------|-----------|----------|-------------|-------|
| RT-I/O          | TIMESTAMP       | TIMESTAMP  | 8         | UInt64    | 1        | 8           | 0     |
|                 | RTIO_IN         | RealTime Input<br>* The following 4 bits are Standard R-I/O Input.   | 1         | Byte      | 1        | 1           | 8     |
|                 | RESERVE         | Reserved   | 3         | -         | 1        | 3           | 9     |
|                 | RTIO_OUT        | RealTime Output<br>* The following 4 bits are Standard R-I/O Output. | 1         | Byte      | 1        | 1           | 12    |
|                 | RESERVE         | Reserved   | 3         | -         | 1        | 3           | 13    |

### Content of STD-I/O

For each item of data, 8 pieces of STD-I/O data are included. The data in these 8 items are arranged chronologically. This section describes the format of each of the STD-I/O data.

| Large data item | Small data item | Overview   | of 1 Size | Data type | Quantity | Total bytes | Index |
|-----------------|-----------------|--|-----------|-----------|----------|-------------|-------|
| STD-I/O         | TIMESTAMP       | TIMESTAMP  | 8         | UInt64    | 1        | 8           | 0     |
|                 | RESERVE         | Reserved   | 8         | UInt32    | 1        | 8           | 8     |
|                 | STDIO_IN        | Standard Input<br>* The following 3 bits are Standard Input.   | 4         | UInt32    | 1        | 4           | 16    |
|                 | STDIO_OUT       | Standard Output<br>* The following 2 bits are Standard Output. | 4         | UInt32    | 1        | 4           | 20    |

### Content of FSENS

For each item of data, 1 piece of FSENS data is included. This section describes the format of each of the FSENS data.

| Data Large data item | Data Small data item | Overview  | of 1 Size | Data type | Quantity | Total bytes | Index |
|----------------------|----------------------|---|-----------|-----------|----------|-------------|-------|
| FSENS                | TIMESTAMP            | TIMESTAMP   | 8         | UInt64    | 1        | 8           | 0     |
|                      | RESERVE              | Reserved Area   | 4         | -         | 1        | 4           | 8     |
|                      | FSENS_RESP_6D_DATA   | Force Sensor data<br>* For detailed information, see the table below. | 18        | -         | 1        | 18          | 12    |
|                      | RESERVE              | Reserved Area   | 2         | -         | 1        | 2           | 30    |
|                      | FSENS_RESP_16D_DATA  | Force Sensor data<br>* For detailed information, see the table below. | 40        | -         | 1        | 40          | 32    |



Describes details of the data from FSENS\_RESP\_6D\_DATA in the table above. Be aware that the unit for Index is “bit”.

| Data Small data item | Data item        | Overview  | Size (bit) | Index (bit) |
|----------------------|------------------|---|------------|-------------|
| FSENS_RESP_6D_DATA   | Fx_2_17          | of each axis in the Force coordinate system<br>Within the Sensor data (g), data from bit 2 to bit 17    | 16         | 0           |
|                      | Fy_2_17          |   | 16         | 16          |
|                      | Fz_2_17          |   | 16         | 32          |
|                      | Mx_2_17          |   | 16         | 48          |
|                      | My_2_17          |   | 16         | 64          |
|                      | Mz_2_17          |   | 16         | 80          |
|                      | Fx_0_1           | of each axis in the Force coordinate system<br>Within the Sensor data (g), the data from bit 0 to bit 1 | 2          | 96          |
|                      | Fy_0_1           |   | 2          | 98          |
|                      | Fz_0_1           |   | 2          | 100         |
|                      | RESERVE          | Reserved  | 2          | 102         |
|                      | Mx_0_1           | of each axis in the Force coordinate system<br>Within the Sensor data (g), the data from bit 0 to bit 1 | 2          | 104         |
|                      | My_0_1           |   | 2          | 106         |
|                      | Mz_0_1           |   | 2          | 108         |
|                      | RESERVE          | Reserved  | 2          | 110         |
|                      | Temperature_0_15 | Temperature (°C)  | 16         | 112         |
|                      | RESERVE          | Reserved  | 16         | 128         |

#### 4. How to Use Epson Original Nodes

Describes details of the data from FSSENS\_RESP\_16D\_DATA in the table above. Be aware that the unit for Index is “bit”.

| Data Small data item | Data item        | Overview  | Size (bit) | Index (bit) |
|----------------------|------------------|---|------------|-------------|
| FSSENS_RESP_16D_DATA | Xa_2_17          | Within the Element Output data (g), the data from bit 2 to bit 17<br>Z and T have a constant value of “0” | 16         | 0           |
|                      | Ya_2_17          |   | 16         | 16          |
|                      | Za_2_17          |   | 16         | 32          |
|                      | Ta_2_17          |   | 16         | 48          |
|                      | Xa_0_1           | Within the Element Output data (g), the data from bit 0 to bit 1<br>Z and T have a constant value of “0”  | 2          | 64          |
|                      | Ya_0_1           |   | 2          | 66          |
|                      | Za_0_1           |   | 2          | 68          |
|                      | Ta_0_1           |   | 2          | 70          |
|                      | Xb_2_17          | Within the Element Output data (g), the data from bit 2 to bit 17<br>Z and T have a constant value of “0” | 16         | 72          |
|                      | Yb_2_17          |   | 16         | 88          |
|                      | Zb_2_17          |   | 16         | 104         |
|                      | Tb_2_17          |   | 16         | 120         |
|                      | Xb_0_1           | Within the Element Output data (g), the data from bit 0 to bit 1<br>Z and T have a constant value of “0”  | 2          | 136         |
|                      | Yb_0_1           |   | 2          | 138         |
|                      | Zb_0_1           |   | 2          | 140         |
|                      | Tb_0_1           |   | 2          | 142         |
|                      | Xc_2_17          | Within the Element Output data (g), the data from bit 2 to bit 17<br>Z and T have a constant value of “0” | 16         | 144         |
|                      | Yc_2_17          |   | 16         | 160         |
|                      | Zc_2_17          |   | 16         | 176         |
|                      | Tc_2_17          |   | 16         | 192         |
|                      | Xc_0_1           | Within the Element Output data (g), the data from bit 0 to bit 1<br>Z and T have a constant value of “0”  | 2          | 208         |
|                      | Yc_0_1           |   | 2          | 210         |
|                      | Zc_0_1           |   | 2          | 212         |
|                      | Tc_0_1           |   | 2          | 214         |
|                      | Xd_2_17          | Within the Element Output data (g), the data from bit 2 to bit 17<br>Z and T have a constant value of “0” | 16         | 216         |
|                      | Yd_2_17          |   | 16         | 232         |
|                      | Zd_2_17          |   | 16         | 248         |
|                      | Td_2_17          |   | 16         | 264         |
|                      | Xd_0_1           | Within the Element Output data (g), the data from bit 0 to bit 1<br>Z and T have a constant value of “0”  | 2          | 280         |
|                      | Yd_0_1           |   | 2          | 282         |
|                      | Zd_0_1           |   | 2          | 284         |
|                      | Td_0_1           |   | 2          | 286         |
| Temperature_0_15     | Temperature (°C) | 16  | 288        |             |
| RESERVE              | Reserved         | 16  | 304        |             |

### Content of PLSCNT

For each item of data, 1 piece of PLSCNT data is included.

This section describes the format of each of the PLSCNT data.

| Data Large data item | Data Small data item | Overview                        | of 1 Size | Data type | Quantity | Total bytes | Index |
|----------------------|----------------------|---------------------------------|-----------|-----------|----------|-------------|-------|
| PLSCNT               | TIMESTAMP            | TIMESTAMP                       | 8         | UInt64    | 1        | 8           | 0     |
|                      | PLSCNT1_NOW          | The present Pulse Counter value | 4         | Byte      | 1        | 4           | 8     |
|                      | PLSCNT1_LATCH        | The Latched Pulse Counter value | 4         | Byte      | 1        | 4           | 12    |
|                      | PLSCNT2_NOW          | The present Pulse Counter value | 4         | Byte      | 1        | 4           | 16    |
|                      | PLSCNT2_LATCH        | The latched Pulse Counter value | 4         | Byte      | 1        | 4           | 20    |

### Content of TCP

For each item of data, 1 piece of TCP data is included. This section describes the format of each of the TCP data.

| Data Large data item | Data Small data item | Overview  | of 1 Size | Data type | Quantity | Total bytes | Index |
|----------------------|----------------------|---|-----------|-----------|----------|-------------|-------|
| TCP                  | TIMESTAMP            | TIMESTAMP   | 8         | UInt64    | 1        | 8           | 0     |
|                      | X                    | X component of the position of the tip of the robot arm | 8         | Double    | 1        | 8           | 8     |
|                      | Y                    | Y component of the position of the tip of the robot arm | 8         | Double    | 1        | 8           | 16    |
|                      | Z                    | Z component of the position of the tip of the robot arm | 8         | Double    | 1        | 8           | 24    |
|                      | U                    | U component of the position of the tip of the robot arm | 8         | Double    | 1        | 8           | 32    |
|                      | V                    | V component of the position of the tip of the robot arm | 8         | Double    | 1        | 8           | 40    |
|                      | W                    | W component of the position of the tip of the robot arm | 8         | Double    | 1        | 8           | 48    |
|                      | R                    | R component of the position of the tip of the robot arm | 8         | Double    | 1        | 8           | 56    |
|                      | S                    | S component of the position of the tip of the robot arm | 8         | Double    | 1        | 8           | 64    |
|                      | T                    | T component of the position of the tip of the robot arm | 8         | Double    | 1        | 8           | 72    |

## 5. About Purchasing Products

This product is paid. When purchasing the license of this product, please contact one of the following suppliers.

- Supplier of your region (Refer to *Robot System Safety Manual Read this manual first – SUPPLIERS.*)
- System Integrator
- Distributor

Acquire the Option's key code and Serial No. of the Controller from Epson RC+, and contact above supplier.

### **How to acquire necessary information**

- (1) Connect the Controller to Epson RC+ and acquire a Controller's Serial No. from Epson RC+ - [System Configuration].
- (2) Tell the Option's key code and Serial No. on the Controller to the supplier and order license.
- (3) Receive the license key and activation key from the supplier.
- (4) Received license key and activation key are used when activating OPC UA function of the Controller.

## 6. Trouble Shooting

### 6.1 Errors of Controllers

Following shows error messages and solutions of Controller regarding OPC UA Server.

| No.  | Message   | Remedy   |
|------|---|--|
| 7930 | OPC UA Server. Not Activated.                           | Activate the OPC UA function.  |
| 7931 | OPC UA Server. Certificate not configured.              | Register a Sever Certificate.<br>Or reconsider the using type of the Server Certificate. |
| 7932 | OPC UA Server. Invalid parameter.                       | Reconsider the setting of the Server.  |
| 7933 | OPC UA Server. Port number conflicts.                   | Change the port number.  |
| 580  | OPC UA Server. Server error.                            | Reboot the Controller.   |
| 581  | OPC UA Server. Server log is activated.                 | Turn OFF the log function of OPC UA Server.<br>Reboot the Controller.                    |
| 582  | OPC UA Server. File size of the server log is exceeded. | Turn OFF the log function of OPC UA Server.<br>Reboot the Controller.                    |

**NOTE**



There is no description for Controller errors elated to sensor data acquisition. For more information about errors or warnings related to sensor data, refer to ErrorStatus Node (3.2.3.2 Specifications of Force Sensor Node).

## 6.2 Errors of OPC UA Configurator

Errors occurred during process of OPC UA Configurator are displayed in the error dialog or processing dialog.

Errors displayed in the error dialog : Errors in checking file names or number of files before executing processing.


Errors displayed in the processing dialog: Errors occurred when executing processing in application or errors in checking file names or number of files before executing processing when selecting multiple Controllers.

Following shows errors related to processing of OPC UA Configurator.

### Errors displayed in error dialog

| Message   | Reason   | Remedy   |
|---|--|--|
| Controller FW Version does not support OPC UA.                  | The FW version of your Controller is not supported OPC UA.   | Refer to <i>1.3.1.1 Operating Condition</i> and update FW.                     |
| OpenSSL is not installed on your PC.                            | OpenSSL supported by OPC UA Configurator is not installed on your PC.  | Install OpenSSL from HP described in <i>2.3.1.1 Installing OpenSSL</i> .       |
| Cannot connect with the controller because the task is running. | Controller is working on a task, so Controller and OPC UA Configurator cannot be connected with Program mode.                            | Wait for process of the task then connect.                                     |
| The file format is invalid.                                     | The file format importing from PC is different from the file format selected in the application.   | Change the file format to specified format.                                    |
| The file name is incorrect.                                     | You are using letters other than half-width alphanumeric characters or underscore for the file name.<br>File name is not specified name. | Change the file name.<br>Enter with half-width alphanumeric characters.        |
| Attempted to import more than the file limit.                   | You've tried to import files more than maximum number of files that can be imported.   | Delete a file you already imported.<br>Reduce the number of files to import.   |
| No files found to import.                                       | There is no file to import in the folder of import source.   | Place a file with the specified name in the folder of the PC of import source. |
| Parameter Error   | Full-width alphanumeric character or symbol are entered in setting for CSR or Self signed Certificate.                                   | Re-enter the correct value.  |

| Message  | Reason  | Remedy                                  |
|--|---|---|
| You tried to import a certificate that is not paired with the CSR. | CSR saved in the Controller and Certificate to import is not paired.          | Import a CA signed Certificate for CSR. |
| The password you entered is incorrect.                             | Private key password is entered accidentally when importing User Certificate. | Re-enter the correct password.          |
| The port number must be between 0 and 65535.                       | Full-width alphanumeric character or values not specified is entered.         | Re-enter the correct value.             |

**NOTE**  When error occurred with selecting multiple Controllers during the process of application, the error will be displayed in processing dialog.

## Errors displayed in processing dialog

| Message                                       | Reason  | Remedy  |
|---|---|---|
| Connect Error                                 | <ul style="list-style-type: none"> <li>- Controller is not turned ON.</li> <li>- Password for Ethernet connection is wrong.</li> <li>- LAN cable is not connected.</li> <li>- USB cable is not connected.</li> <li>- Controller is working on a task.</li> <li>- Controller is connecting with TP.</li> </ul> | <ul style="list-style-type: none"> <li>- Turn ON the Controller.</li> <li>- Set the new password for Ethernet connection at Epson RC+ and enter the new password when adding Controller.</li> <li>- Connect the LAN cable.</li> <li>- Connect the USB cable.</li> <li>- Re-connect after task completed.</li> <li>- Disconnect with TP and re-connect.</li> </ul> |
| Failed to import file                         | OPC UA Configurator and Controller communication is disconnected during sending file. (LAN cable is disconnected from PC, Start mode of the Controller was different.)  | Check for Start mode of the Controller and double check the connection with the Controller and operate again.   |
| No files found to import.                     | There is no file to import in the folder.   | Place a file with the specified name in the folder of the PC of import source.  |
| Attempted to import more than the file limit. | You've tried to import files more than maximum number of files that can be imported.  | Delete a file you already imported.<br>Reduce the number of files to import.  |
| Update failed: File does not exist            | Selected type of Certificate file is not existed in Controller.   | Importing a Certificate you want to use as a Server Certificate.  |
| Not match Certificate and CSR                 | CSR saved in the Controller and Certificate to import is not paired.  | Import a CA signed Certificate for CSR.   |



### 6.3 How to Acquire OPC UA Server Log



- Make sure to turn OFF the Server Log after acquired OPC UA Server Log.  
In normal using, do not change the setting to ON.

- (1) Change the setting of [Server Startup Mode] to “MANUAL” in OPC UA Configurator. (Refer to *2.6.1 Basic Setting for Server.*)
- (2) Reboot the Controller.
- (3) Turn ON the [Server Log] in OPC UA Configurator. (Refer to *2.6.1 Basic Setting for Server.*)
- (4) Activate OPC UA Server in OPC UA Configurator. (Refer to *2.4.3 Buttons to Execute.*)
- (5) Deactivate OPC UA Server in OPC UA Configurator.
- (6) Back up the Controller. (Refer to Epson RC+ or Controller Manual.) Log of OPC UA Server is included in acquired back up file.
- (7) Turn OFF the ServerLog in OPC UA Configurator. (Refer to *2.6.1 Basic Setting for Server.*)

# Appendix

## Appendix A: Format of Activation File

- When activating all at once with select multiple Controllers, you will need a file for activation. Create a file of csv file.
- Naming file is optional. Enter “OPCUA.Activation.Ver.1.0” in the first line of the file. From after second line, license key information of each Controller will be there. Enter information for one Controller per line.

Enter like following order.

Serial No, LicenseKey, ActivationKey

**NOTE**



Put a “,” between Serial No and License Key. And, between License Key and Activation Key as well.

Entering example:

```
OPCUA.Activation.Ver.1.0
R7A0000001,aaaa-aaaa-aaaa-aaaa,XXXX-XXXX-XXXX-XXXX-XXXX-XXXX
R9B0000001,bbbb-bbbb-bbbb-bbbb,YYYY-YYYY-YYYY-YYYY-YYYY-YYYY
...
```

## Appendix B-1: Folder Configuration

Following shows example of folder structure.

```

C
└─ EpsonRC80
   └─ OPCUA
      └─ 00001
         └─ Cert
            └─ SelfSigned
               └─ 1_cert.der
                  └─ 1_key.pfx
                     └─ CASigned
                        └─ aaa.der
                           └─ 3_key.pfx
                              └─ CSR
                                 └─ 3_csr.pem
                                    └─ UserSpecified
                                       └─ ecc.der
                                          └─ ddd.key
                                             └─ eee.pfx
                                                └─ option.key
                                                   └─ epson_opcua_config.xml

```

A folder which name is Controller's serial number.  
(Created automatically)

Certificate folder

Self signed Certificate folder

Self signed Certificate file

Private key file (Only when user made a backup.)

CA signed Certificate folder

CA signed Certificate file (File name is optional)

Private key file (Only when user made a backup.)

CSR saving folder

CSR file

User specified Certificate folder

Certificate file (File name is optional)

Private key file (File name is optional)

Certificate file with encryption key (File name is optional)

Configuration file

Configuration file

## Appendix B-2: OSS License

### OSS License for OPC UA Server

For about Open Source Software used in the OPC UA Server, we're using it in accordance with the terms of the license agreement presented by the copyright holder.

Each license contract of Open Source Software program, copyright notice and license information are in the Epson RC+ you installed.

Information can be checked below.

License information for each open source software used in OPC UA Server:

“Epson\_RC+\*\*\*\*\EULA\_OSSLicenses\OPCUA” (\*\*\*\*: RC+ version)

license\_opcua.txt

license\_others.txt